


# Fit Hooks K421

## **Installation Instructions**

Before using the Mounting hooks, carefully read the installation instructions as well as the installation instructions for basic carrier systems, and follow all usage instructions. After reading the installation instructions, keep it in a safe place along with the installation instructions for basic carrier systems. If you are to give the mounting hooks to a third person, provide the installation instructions to ensure safe installation and usage.

For INNO dedicated ski & snowboard carriers, read the carrier installation instructions to determine proper mounting locations.

The SU Mounting hooks include the parts listed below. Verify that all of these parts are included in the carrier system you have purchased

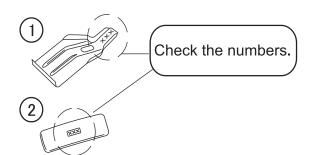

No.	Part	# of Part	Qty
1	Hook	172	2
	TIOOK	175	2
2	Base	401	4

**W** NOTE

The specifications or external appearance of this product or any of the genuine spare parts may be changed for improvement without prior notification.


## **K421** Mounting Method by Vehicle Type



Manufactur	er	Model	Туре	Year	Maximum loading capacity	Bikes
NISSAN		VERSA NOTE	5 door	2014 -	120 lbs ( 55 kg) ( Load + Base rack + Attachments )	2

Maximum loading capacity is 120 lbs (55 kg) for this vehicle type.

Stay interior dimensions Front 40 3/4inch/1036 mm Rear 39 1/2inch/1004 mm

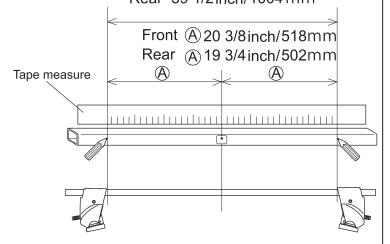


### Install Bases

	Base number
Front base	401
Rear base	401

### **Mounting positions**

Position the stays so that bolts align at specified

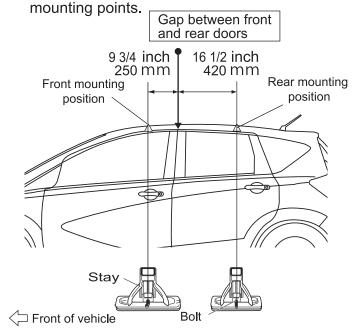


### (Loosely attach hooks)


	Hook number
Front hook	175
Rear hook	172

■ Hook / base installation position

#### Front

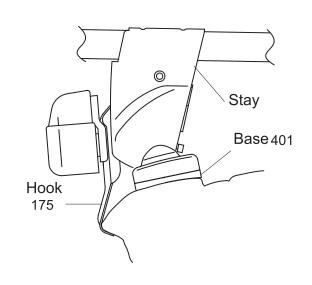

Rear

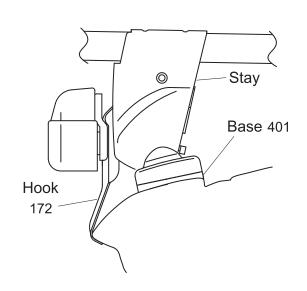

#### ™ Note

 When knob is tightened, base moves slightly outward to the position illustrated above.

5182803421A2-EN