


**K721** 

## **Installation Instructions**

Before using the Mounting hooks, carefully read the installation instructions as well as the installation instructions for basic carrier systems, and follow all usage instructions. After reading the installation instructions, keep it in a safe place along with the installation instructions for basic carrier systems. If you are to give the mounting hooks to a third person, provide the installation instructions to ensure safe installation and usage.

For INNO dedicated ski & snowboard carriers, read the carrier installation instructions to determine proper mounting locations.

The SU Mounting hooks include the parts listed below. Verify that all of these parts are included in the carrier system you have purchased.

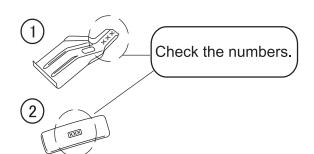

No.	Part	# of Part	Qty
1	Hook	134	4
2	Base	433	4

**NOTE** 

The specifications or external appearance of this product or any of the genuine spare parts may be changed for improvement without prior notification.

#### K721


# **Mounting Method by Vehicle Type**



Manufacturer	Model	Type	Year	Maximum loading capacity	Bikes
HONDA	CIVIC	3 door	2003 - 2005	80 lbs ( 36 kg) ( Load + Base rack + Attachments )	2

Maximum loading capacity is 80 lbs (36 kg) for this vehicle type.

Stay interior dimensions
Front 36 inch(914 mm)
Rear 34 5/8 inch(880 mr

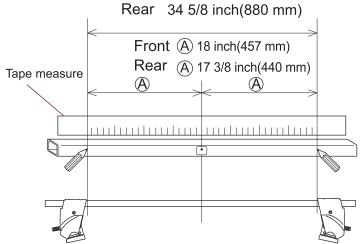


#### (Install Bases)

	Base number
Front base	433
Rear base	433

### **Mounting positions**


 Position the stays so that bolts align at specified mounting points.

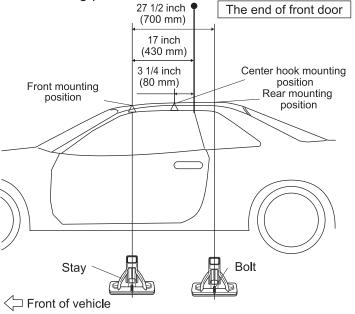


### Loosely attach hooks

	Hook number
Front hook	134
Center hook	134

■ Hook / base installation position

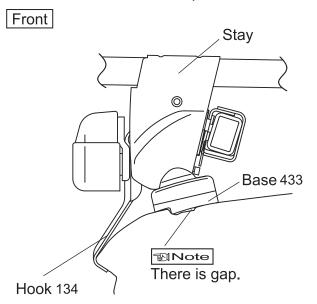

Rear

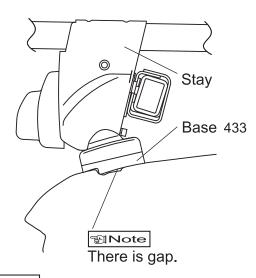

™ Note

- Hook installation position for center hook is the same as front carrier.
- When knob is tightened, base moves slightly outward to the position illustrated above.

6192602721A2-EN

EN-2