


K861

Installation Instructions

Before using the Mounting hooks, carefully read the installation instructions as well as the installation instructions for basic carrier systems, and follow all usage instructions. After reading the installation instructions, keep it in a safe place along with the installation instructions for basic carrier systems. If you are to give the mounting hooks to a third person, provide the installation instructions to ensure safe installation and usage.

For INNO dedicated ski & snowboard carriers, read the carrier installation instructions to determine proper mounting locations.

The SU Mounting hooks include the parts listed below. Verify that all of these parts are included in the carrier system you have purchased.

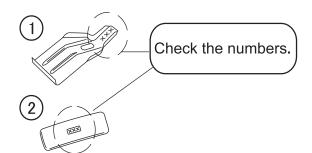

No.	Part	# of Part	Qty
1	Hook	115	4
2	Base	427	2
	Dase	411	2

MOTE

The specifications or external appearance of this product or any of the genuine spare parts may be changed for improvement without prior notification.


K861 Mounting Method by Vehicle Type



Manufacturer	Model	Type	Year	Maximum loading capacity	Bikes
HONDA	FIT	5 door Normal roof	2009 - 2013	120 lbs (55 kg)	2
	FIT EV		2012 -	(Load + Base rack + Attachments)	

Maximum loading capacity is 120 lbs(55 kg) for this vehicle type.

Stay interior dimensions Front 39 inch(992 mm) Rear 36 5/8 inch(930 mm)

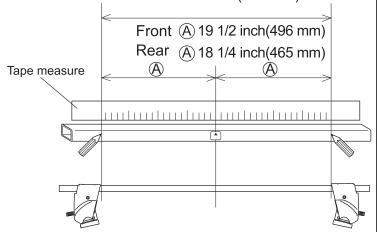


Install Bases

	Base number
Front base	427
Rear base	411

Mounting positions

Position the stays so that bolts align at specified mounting points.
Gap between front

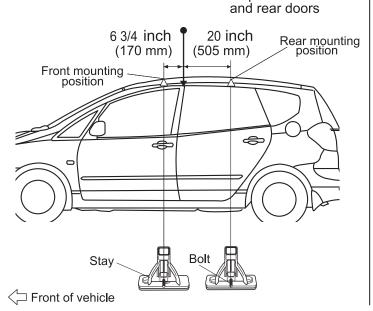


(Loosely attach hooks)


	Hook number
Front hook	115
Rear hook	115

■ Hook / base installation position

Front

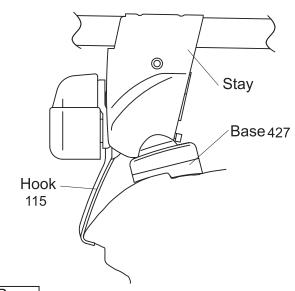

Rear

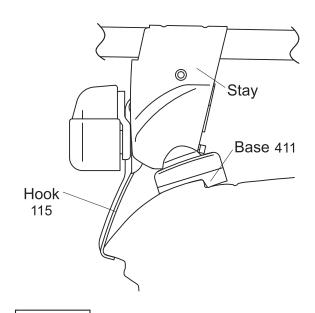

Note

When knob is tightened, base moves slightly outward to the position illustrated above.

6192601861A2B-EN

EN-2