


K868

Installation Instructions

Before using the Mounting hooks, carefully read the installation instructions as well as the installation instructions for basic carrier systems, and follow all usage instructions. After reading the installation instructions, keep it in a safe place along with the installation instructions for basic carrier systems. If you are to give the mounting hooks to a third person, provide the installation instructions to ensure safe installation and usage.

For INNO dedicated ski & snowboard carriers, read the carrier installation instructions to determine proper mounting locations.

The SU Mounting hooks include the parts listed below. Verify that all of these parts are included in the carrier system you have purchased.

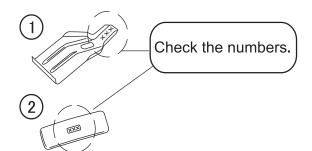

No.	Part	# of Part	Qty
1	Hook	191T	4
2	Base	402	2
	Dase	432	2

MOTE

The specifications or external appearance of this product or any of the genuine spare parts may be changed for improvement without prior notification.


Mounting Method by Vehicle Type



Manufacturer	Model	Type	Year	Maximum loading capacity	Bikes
LEXUS	RX		2010 -	120 lbs (55 kg) (Load + Base rack + Attachments)	3

Maximum loading capacity is 120 lbs(55 kg) for this vehicle type.

> Stay interior dimensions Front 41 1/8 inch(1044 mm) Rear 41 7/8 inch(1064 mm)

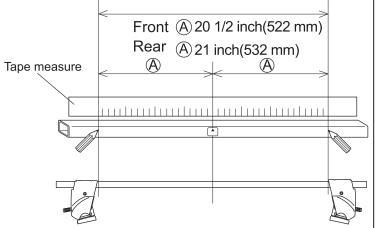


Install Bases

	Base number
Front base	432
Rear base	402

Mounting positions

Position the stays so that bolts align at specified mounting points.

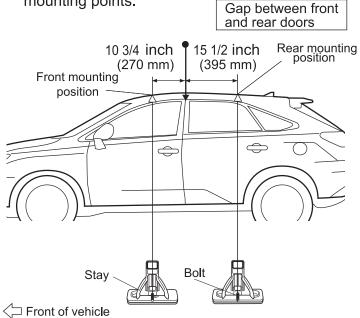



(Loosely attach hooks)

	Hook number
Front hook	191T
Rear hook	191T

Hook / base installation position

Front

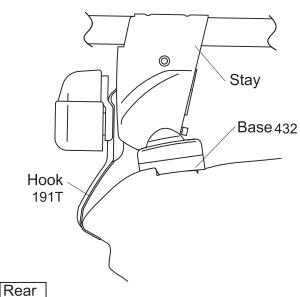

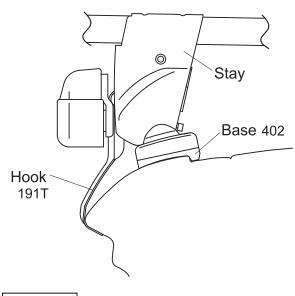

™ Note

When knob is tightened, base moves slightly outward to the position illustrated above.

6192601868A2-EN

EN-2