
## ADVANCED CAR RACKS . TR162 Installation Instructions

Please read both the Stay installation instructions and INNO common installation instructions (both included in Stay package).

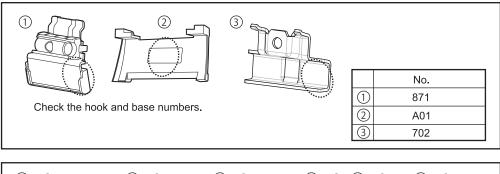



No.	
	Inner hook
2	Base
3	Outer hook
4	Washer
5	Nylon washer
6	Bolt


We do not accept any liability for accidents, damage or injury caused by incorrect installation or use, modification, or natural disaster.

## Mounting Method by Vehicle Type

## **TR162**

Manufacturer	Model	Туре	Year	Maximum loading capacity
MERCEDES BENZ	GLA		2014 -	165lbs (75kg)

※ Load + Base rack + Attachments

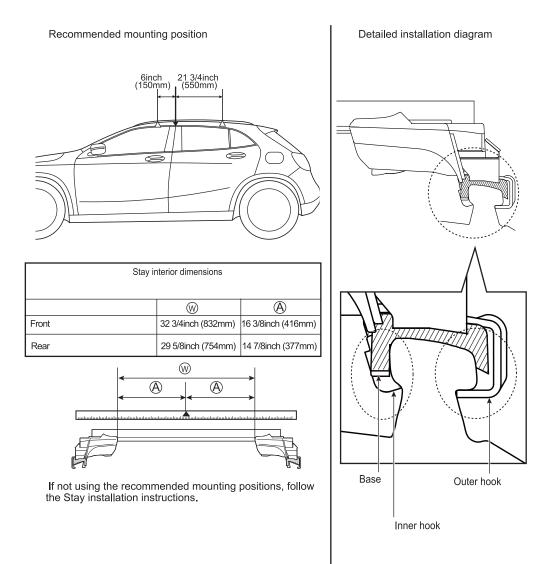

Feel the difference with INNO.