

American Made = American Jobs



**IRON CROSS**  
AUTOMOTIVE INC.

**2014 Chevrolet Silverado 1500**  
**Front Bumper Installation**

## Installation Instructions

Hardware	
12	1/2" Flat Washers
6	1/2" Lock Washers
6	1/2" Hex Bolts
6	1/2" Hex Nuts

### Front Bumper Removal


1. Open hood and remove (12) clips holding the radiator cover in place. The clips pull up as shown in Fig.1, then you can pull them out. Remove the cover and save the clips for reinstall.
2. Unhook any factory fog lights or any other wiring your vehicle may have going to the front bumper.




IRON CROSS AUTOMOTIVE

# Front Bumper Removal Continued...

3. Unbolt the (4) bolts holding the top of the grill in place. Fig. 2. Also there are (4) bolts on the bottom side of the grill that need to be removed from underneath the truck, Fig. 3. Save all bolts for reinstall.

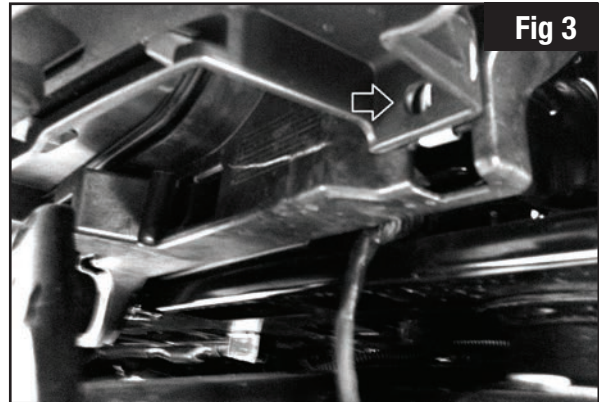

4. The grill is now free from the truck but still held on by the lower grill valance. The valance is held in place by (4) screws in the inner wheel well area. Fig 4.

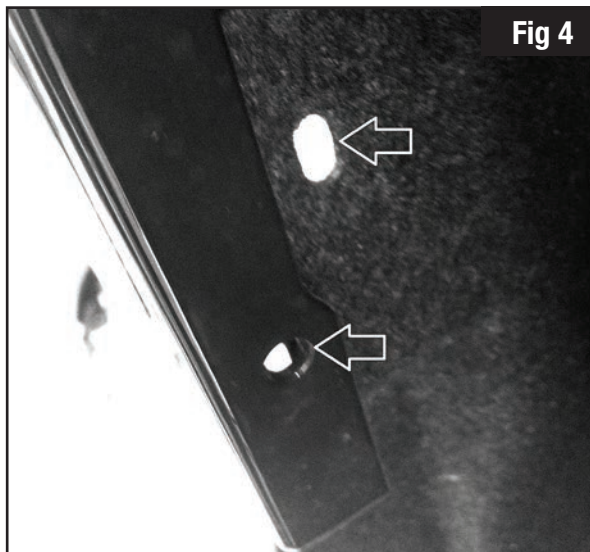


5. Now the only thing holding the grill and valance is two areas, one under the headlight and one under the fender. Gently, but quickly pull the valance out from these two spots. Once the valance is free you can remove the grill and valance as one piece from the vehicle.

6. Turn the grill over and separate it from the valance. There are (4) attachment points that you have to bend up and allow the valance to slide away from the grill.

***\*\*Do not perform this step (#6) for the RS series bumper.\*\****

7. Now under the front bumper in front of the front wheels you will see an outer brace support. Unbolt the support from the bumper and the frame and remove. There are (4) bolts attaching it to the frame, and (2) to the bumper. Fig 5.

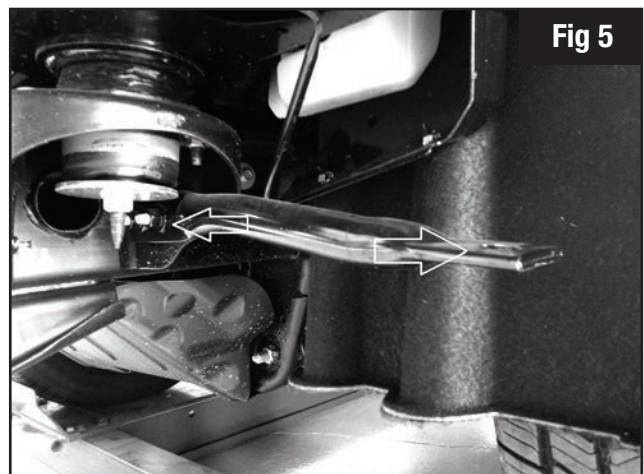


IRON CROSS AUTOMOTIVE




## Front Bumper Removal Continued...

8. Remove the (4) bolts holding the factory bumper on. (2) will be on top and (2) will be accessed from underneath the truck. Fig 6.

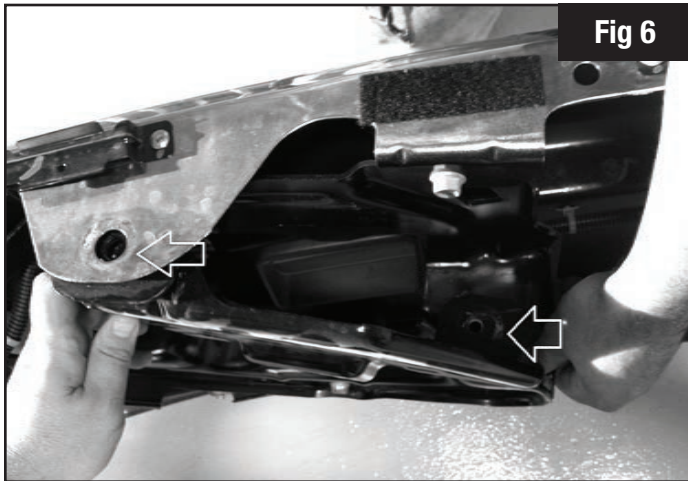


9. You can now remove your factory bumper.


10. Remove the (4) torx screws under the headlight for the valance support that held the factory valance in place. Fig 7.

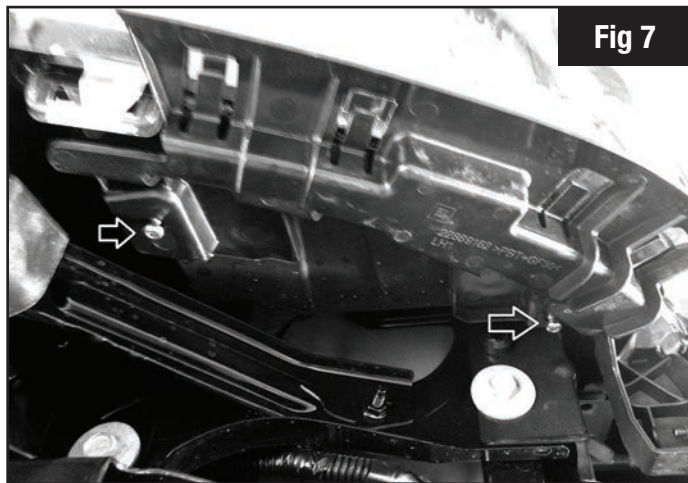

11. Remove the (6) bolts that attach the black plastic valance support under the fender also. Fig. 8.

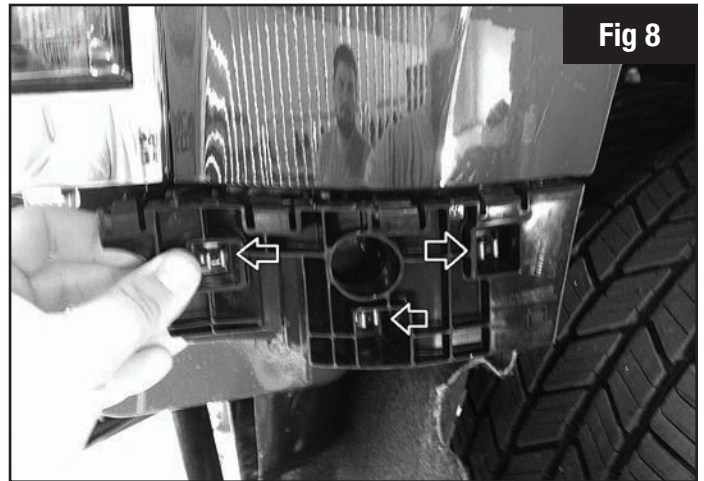

12. Remove the (6) bolts holding on the front bumper mounts. Fig 9.

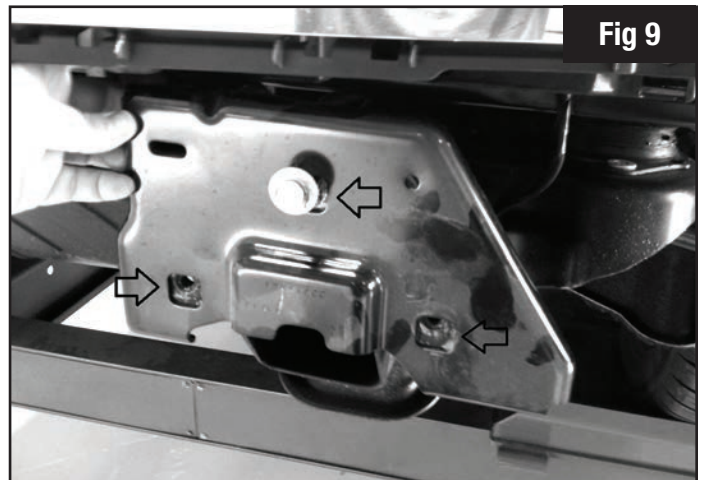

13. You are now ready to install your new Iron Cross Automotive front bumper!



**IRON CROSS AUTOMOTIVE**

# Front Bumper Installation

1. Install your new Iron Cross bumper brackets where you removed your factory ones from. Use the factory bolts to attach the brackets. The brackets should be hand tightened to allow for final adjustment. You do need to have them spaced roughly 28" apart. Any closer and the bumper can't slide in between the brackets.
2. Reinstall the front grill opposite of how you removed it. Make sure not to install the lower grill valance. Also you can remount the radiator cover at this time.
3. Have someone help you lift the bumper up and slide it in between the brackets on your truck. Use the (6) supplied ½" bolts to attach. Hand tighten the bolts at the time.
4. Adjust the bumper left to right, sliding the brackets to align until it is even. Once even, tighten the brackets to the truck.
5. Adjust the bumper up and down, making sure to leave at least ½" gap between the bumper and truck to allow for body flex. A good rule of thumb, is the thickness of the widest part of your thumb.
6. Tighten the bolts to 60 ft/lb and enjoy your new Iron Cross bumper!



**IRON CROSS AUTOMOTIVE**