

INSTALLATION INSTRUCTIONS

** Installation recommendation: JBA recommends in most case that the vehicle be taken to a reputable [exhaust](#) shop for installation.

40-9005

2011-2012 Toyota Tundra 4.6L / 5.7L

Recommended Tools:


14mm socket
12mm socket
9/16 deep socket

Parts List

A. Y-Pipe
B. Muffler
C. Axle pipe
D. Hanger clamp
E. Tailpipe
F. U-Clamp

Qty.

1
1
1
1
1
2

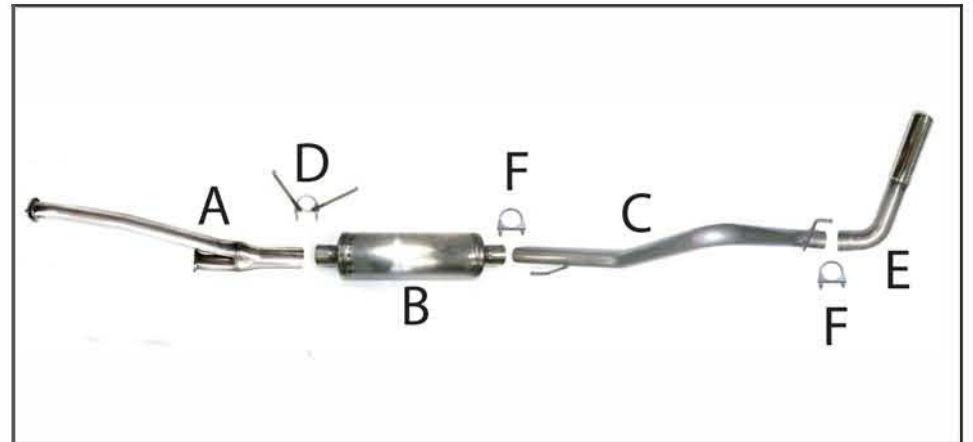

Start:

1. Remove and inventory new JBA exhaust system.
2. Disconnect negative battery cable and allow vehicle to cool.



3. Apply a little spray lube to rubber hanger



4. Remove clamp behind muffler



5. Remove hanger from rubber isolator



6. Remove bolts attaching intermediate pipes to catalytic converters



7. Remove muffler assembly from vehicle



8. Install axle pipe



9. Install muffler onto axle pipe



10. Install clamps



11. Install clamp hanger at front of muffler



12. Install turnout onto axle pipe

13. Using a soft cloth, remove all prints from exhaust tip.

14. Check all clamps and connections for proper fit and alignment. Double check all clamps are tightened and that all hangers are secure in rubber grommets. It is recommended that after installation of the exhaust system you have all slip connections tack welded by a muffler shop.

NOTES:

1. All exhaust systems expand about 1" rearward when exhaust temperature rises.
3. Use anti-seize on threads of clamps.

Other recommended products:

Get more hp and faster ET's with a set of smog legal stainless steel JBA Cat4ward® headers.

Part No.	Application
2012S	2007 Stainless
2012SJS	2007 Silver ceramic
2012SJT	2007 Titanium Ceramic

Improve the look of your 07 Tundra with a split dual turnout exhaust quality engineered only by JBA

Part No.	Application
40-9004	07 dual split exhaust