





JLT 3.0 Oil Separator (2015-18 Ford Edge Sport, 2016-18 Lincoln MKX EcoBoost 2.7L V6 Passenger Side) #3031P Installation Instructions  
Install video available on our Youtube channel  
Search: JLT Performance Inc.


Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) JLT Oil Separator, (1) mounting bracket, (2) fine thread machine screws
2	Gather all of the following tools needed for the installation: 13mm Socket, 10mm socket, extension and ratchet, & Phillips screw driver
3	Remove engine cover by removing 10mm Bolt and 10mm nut. Pull up on engine cover to release.
4	Remove factory PCV line by pulling tabs and pulling it off of the engine. 
5	Locate 13mm bolt that holds a rubber isolator on the engine mount and remove bolt. Install JLT Bracket in the same location and reinstall bolt. 

Install JLT can onto JLT Bracket using the two supplied screws, the JLT Logo should be facing towards the front of the vehicle for proper hose routing.

Route the hose from the J side of the can, under the large wiring harness and on the PCV valve on the valve cover. Route the shorter T side hose to the intake manifold fitting.

6 Reinstall engine cover and you're done!

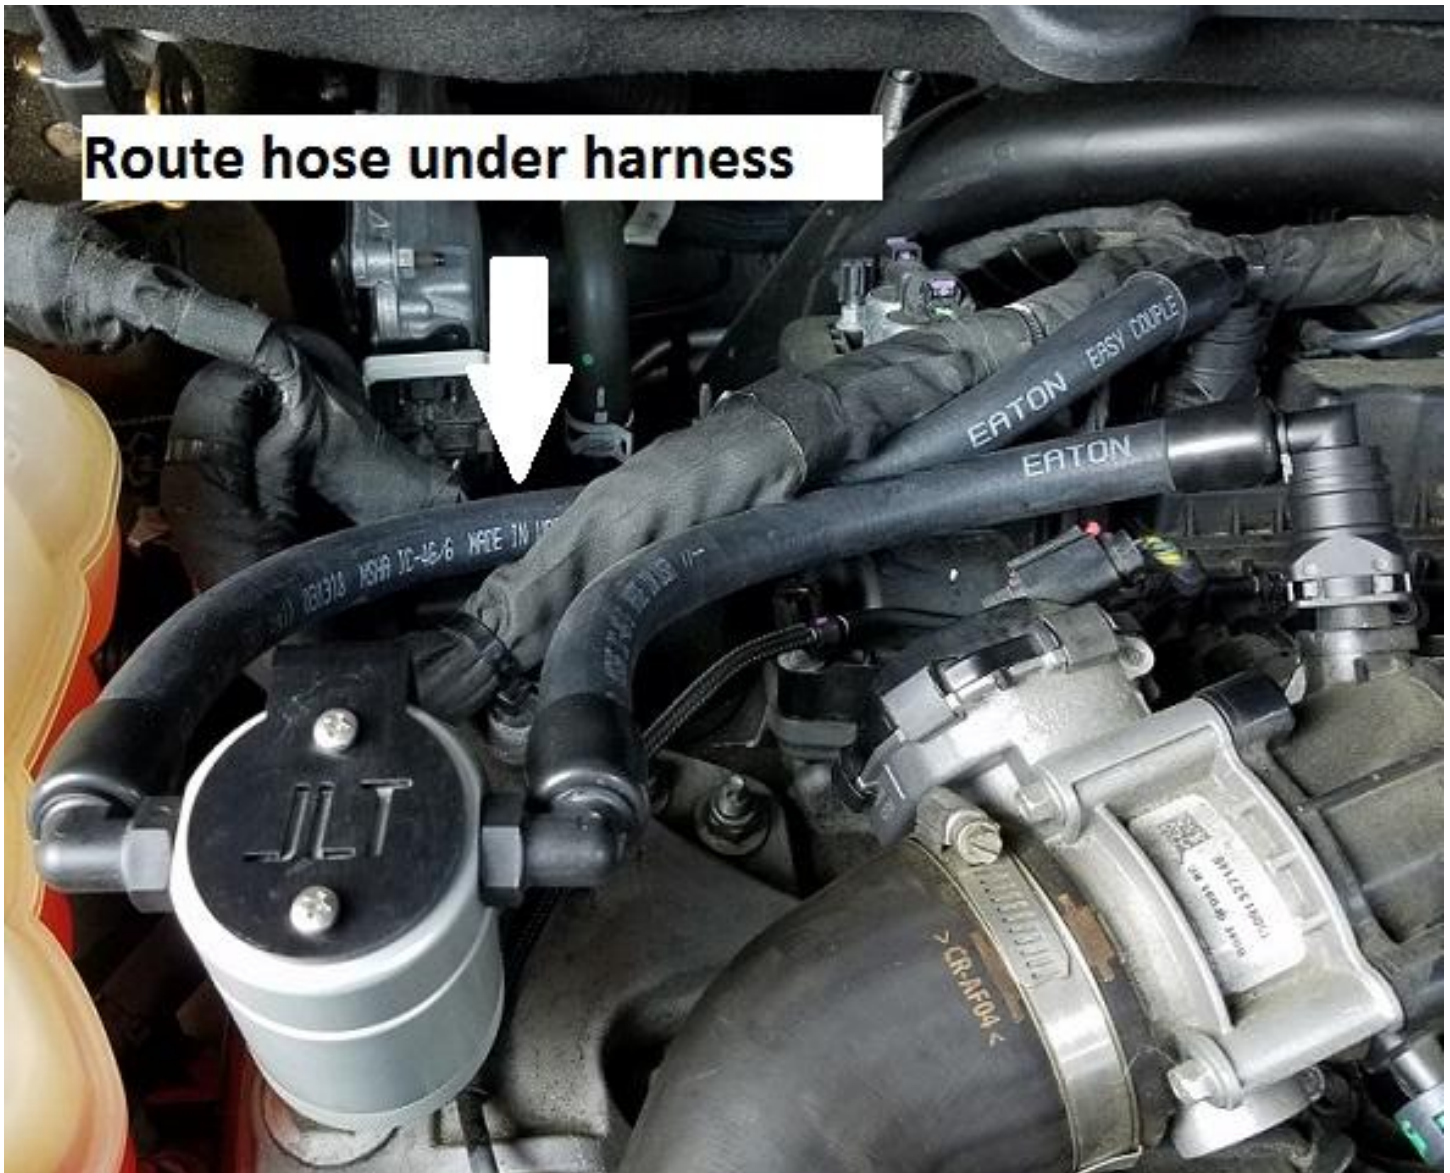

To properly clean the filter in the Oil Separator spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles. Thanks for the business.