





JLT 3.0 Oil Separator (2010-19 Ford Flex 3.5 EcoBoost V6 Passenger Side) #3035P
Check out our install Video on Youtube. Search User "JLT Performance" and this part number.
Installation Instructions


Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) JLT Oil Separator, (1) mounting bracket, (2) fine thread machine screws, (2) 1/2" hoses, (2) PCV connectors
2	Gather all of the following tools needed for the installation: 13mm Socket and ratchet, Phillips screw driver
3	Remove engine cover by removing oil fill cap and pulling up on the cover.
4	Remove factory PCV line by pulling tabs and pulling it off of the engine. 
5	Locate 13mm bolt that holds A/C line to shock tower, remove bolt. Install JLT Bracket in the same location and reinstall bolt. 

6

Install JLT can onto JLT Bracket using the two supplied screws, the JLT Logo should be facing towards the front of the vehicle for proper hose routing.

The T side will go over the A/C line and under the small line to the valve cover, the J side fitting will route to the intake manifold.

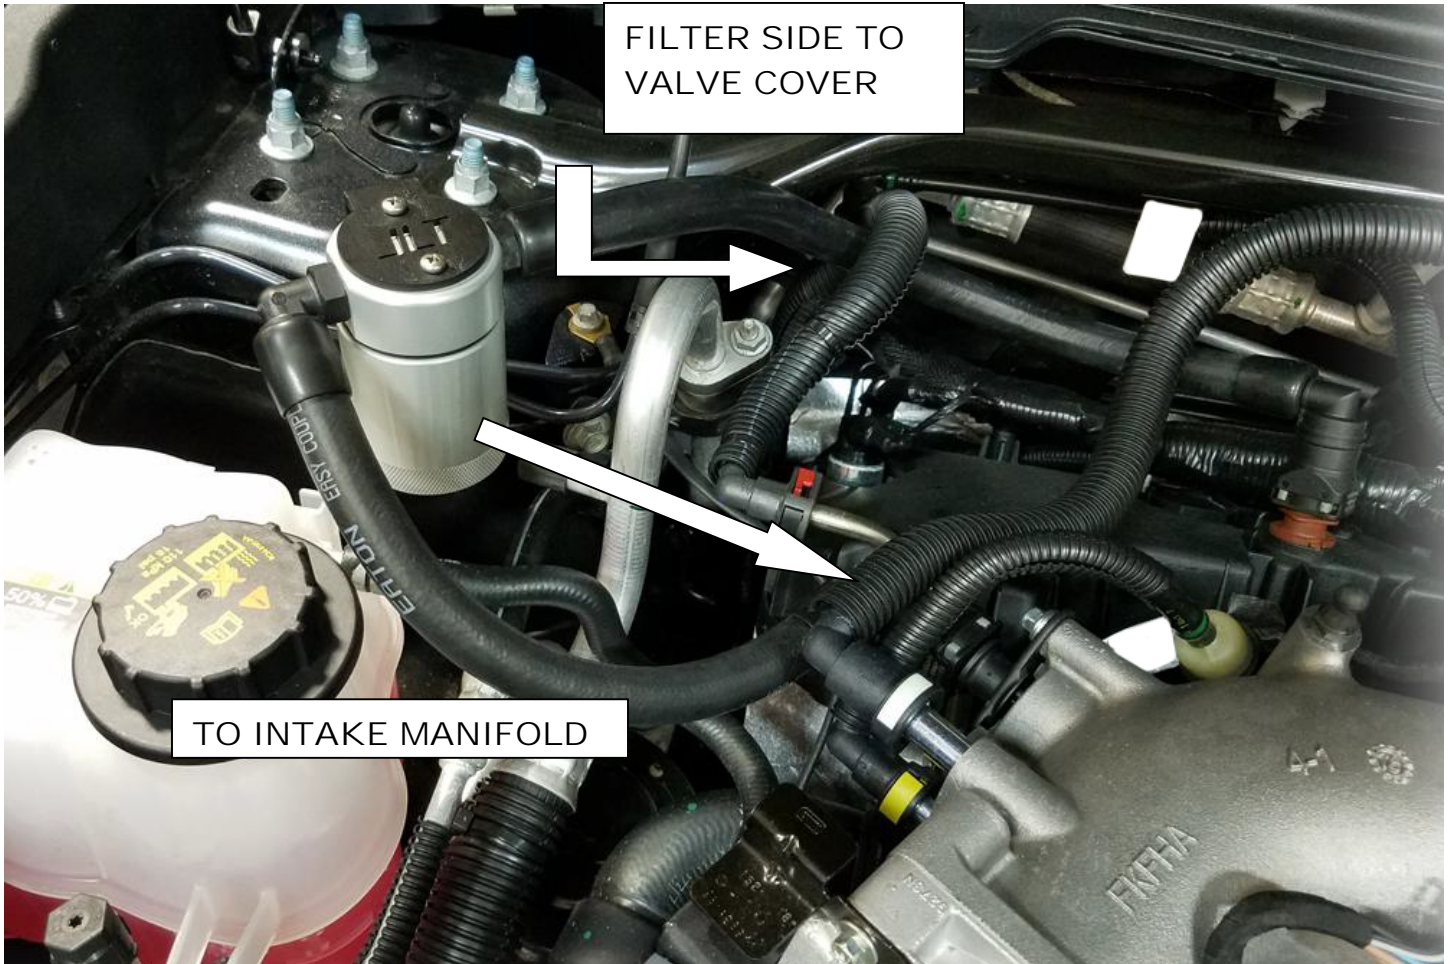

To properly clean the filter in the Oil Separator, remove it and spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles. Thanks for the business.