


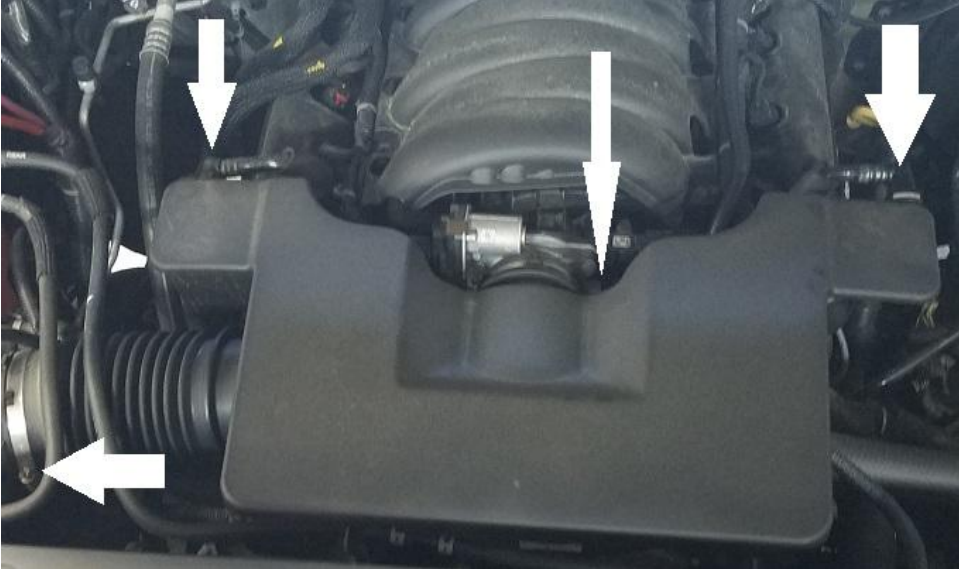


JLT 3.0 Oil Separator (2014-18 Chevy/GM Truck/SUV with 5.3L V8, Driver Side)
#3085D

Install video available on our Youtube channel
Search: JLT Performance Inc.

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) JLT Oil Separator with hoses, (1) mounting bracket, (2) M4 screws
2	Gather all of the following tools needed for the installation: 13mm socket and ratchet, Phillips screw driver, 5/16" Nut driver or Flat head screwdriver.
3	<p data-bbox="240 623 1511 684">☐ Remove stock intake by loosening clamp at Throttle body and MAF housing. Remove each breather hose on sides of intake box by depressing grey button and pulling away from box.</p> 
4	<p data-bbox="191 1253 1500 1314">Remove stock PCV hose from PCV valve and intake manifold. Depress grey tabs to release hose, feed hose out towards the front of the engine.</p> 

Remove 13mm bolt from brace on the firewall, use same bolt to mount supplied JLT bracket. Use supplied screws to mount JLT Oil Separator to bracket. Line up the logo's.



5

Run the short hose to the intake manifold, the connections will "click" once fully seated. Run the longer hose to the PCV valve, route under wiring harness and EVAP Solenoid.



6

Reinstall intake system and you're done!

