

NO HOLES MOUNT

CHEVY TAHOE '15-'20, SILVERADO 1500 '14-'18,
& SILVERADO 2500 '15-'19

425-5596

Installation Instructions



WARNING:

Do not install or use this product in any manner which would interfere with any of the vehicles controls, air bags or safety devices. Follow vehicle owner's manual instructions should a dash warning light come on after installation of this desk. Do not install or use this product in any manner which causes a safety hazard for vehicle and/or occupants.

To avoid serious injury do not place this desk or any objects between the air bags and yourself or any passengers. If necessary remove the desk before driving. Store in trunk or other safe place.

We recommend that you do not work on the Jotto Desk while driving!

Park safely, then use. Remember, driving safely comes first.

WARNING:

Make sure of and check on a regular basis that all knobs, fastening devices and handles are tight and secure. Repair or replace any faulty or worn parts. All equipment, such as computers, printers, phones, etc. must be safely secured when vehicle is in motion.

DISCLAIMER:

The manufacturer of this product may not be held liable for any accidents, injuries or problems caused by the use or installation of this product.

Specifications subject to change without notice.



INSTALLATION PROCEDURE

READ INSTRUCTIONS BEFORE BEGINNING INSTALLATION

TOOLS NEEDED:

- $\frac{7}{16}$ " wrench or $\frac{1}{4}$ " drive ratchet with $\frac{7}{16}$ " socket

PARTS INCLUDED:

- Hardware Bag with necessary nuts, bolts, etc.


NOTE: In vehicles not factory equipped with a center console or seat, the mounting holes in the floor of the vehicle may not be threaded. In this case, use the provided self tapping 9/16" hex head bolt for installation.



1. Remove front trim piece on seat rail of P/S seat nearest to transmission hump.
2. **Vehicle Options***
 - a. **Bucket Seats w/OEM Console** - On P/S of the center console, closest to the front left of P/S seat, remove the console trim piece. This will expose a 15mm bolt - remove and set aside.
 - b. **40/20/40 Bucket Seat** - On P/S of transmission hump, closest to the front left of P/S seat, remove the 15mm bolt that secures the 20 section of the 40/20/40 seat - set aside. (Pic A)
3. Taking the NHM base, begin to slide the mounting stab into the underside of P/S seat rail closest to transmission hump (Pic B). Take a rubber mallet, hammer base into position until side hole on base lines up with the hole on the side of OEM console/transmission hump where the OEM bolt was removed. NHM base is positioned on top of OEM bracket.
4. Re-install OEM bolt* and snap back console trim piece. NOTE: If 40/20/40 seat has OEM trim around 20 section, you may need to cut trim allowing it to sit flush against NHM. (Pic C)
5. Assemble the desktop stand to the mount base, starting with the vertical tube. Use 2 Hex Head Cap Screws and 2 Lock Washers to secure vertical tube to mount post.
6. Place articulated swing arm over the 5/8" end of the telescoping rod. Tighten with ratchet handle.
7. Attach desktop to end of articulated swing arm and secure by tightening ratchet handle.



Pic A

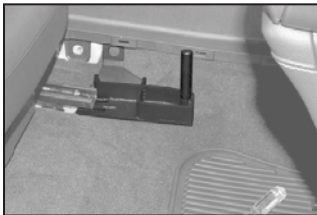


Pic B




Pic C

TOP ASSEMBLY & ADJUSTMENT

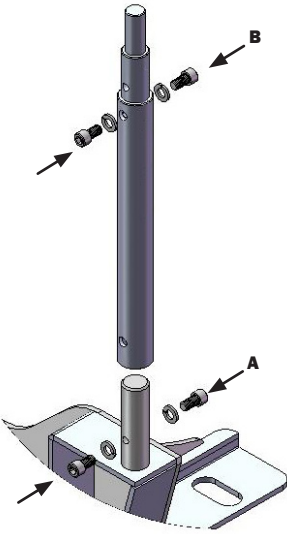

1. Remove Hex Head Cap Screws from stand assembly and place tube over the No-Holes Mount Base.
2. Thread (2) Hex Head Cap Screws with (2) Lock Washers through tube and into front and rear of No Holes Mount post at bottom of tube. (A)
3. Raise inner rod to desired height. Thread (2) Hex Head Cap Screws with (2) Lock Washers into front and rear holes at top of tube. (B)
4. Use provided Hex Key to tighten (4) Hex Head Cap Screws to ensure secure positioning.

RATCHET CLAMP OPERATION

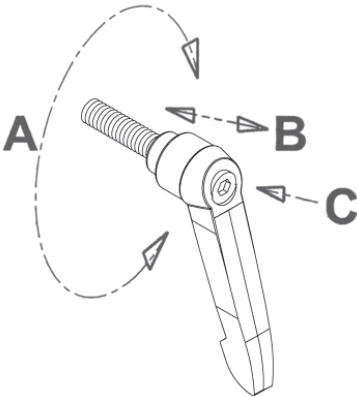

NOTE: Insert the ratchet handle through the unthreaded side of the articulated swing arm and tighten. Going through threaded side first will not allow the arm to tighten properly

To adjust, pull handle out (B) and rotate counter clockwise (A), release and tighten. If needed, use 1/8" hex head wrench for adjustment (C)

NOTE: Ratchet handles are spring loaded and can be readjusted to tighten.

REPLACEMENT COMPONENTS

Ratchet Handle

425-1273



Articulated Swing Arm

425-1188



(2) Hex Head Cap Screws & (2) Lock Washers

425-3385



No Holes Base

425-3534



Vertical Tube Assembly

1 Tube & 1 Telescoping Rod
425-5342



Hex Key

425-3379



JOTTO DESK ACCESSORIES

Specifications subject to change without notice.



Pivoting Cell Phone Holder

425-5299

Allows you to tilt your phone independent of the desktop angle. Mounts to side of 10" x 12" Desktop.



USB Light

425-2490

12" flexible wand with blue LED's and rheostat to adjust brightness. Three foot power cord plugs into cigarette lighter.



Kensington® Masterlock®

425-1317

Computer securing system uses Kensington locking system. Fasten security cable to permanent structure in vehicle.



Screen Support - A-Mod

Model 450-0449

The Screen Support is designed to keep your screen in place while you use your computer. It attaches directly to the A-MOD Desktop and adjusts in height and tilt angle.



Brace Kit

425-5238

The Brace Kit attaches to the stand providing additional support. It can be adjusted in length and mounts to flat, vertical or angled surfaces.



Screen Support - Acd

425-5999

The Screen Support is designed to keep your screen in place while you use your computer. It attaches directly to the ACD Desktop and adjusts in height and tilt angle.