

# **KARGO MASTER<sup>®</sup>**

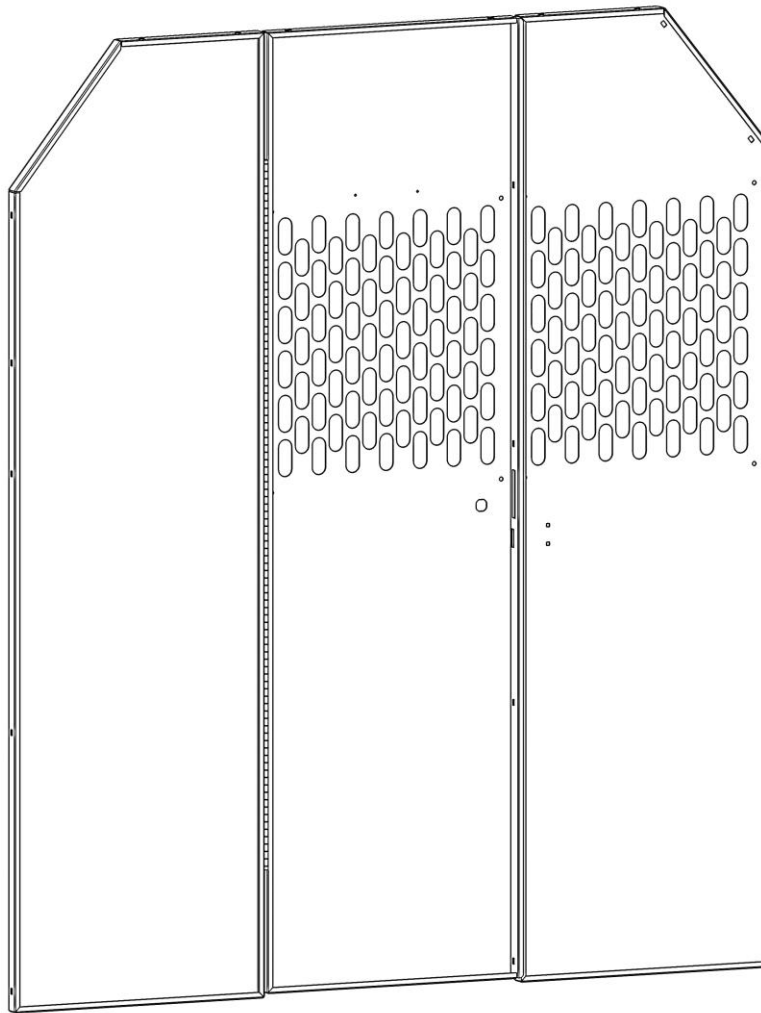
**WE PUT EVERYTHING WITHIN REACH.**

---

## Assembly Guide

40660

---



**\*PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT.\***

**Warning**



**Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.**

**Tools Needed**

3/8" Wrench and Socket	7/16" Wrench and Socket
------------------------	-------------------------

**Table of Contents**

Parts List..... 1

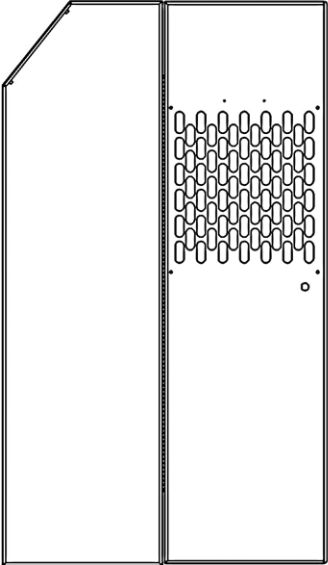
Hardware ..... 2

Step 1 – Assemble Partition Panels ..... 3

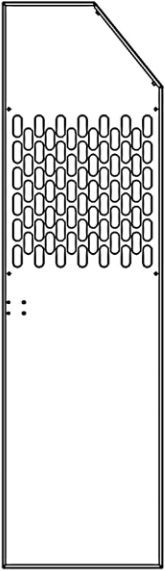
**Before You Begin**

- Read all instructions prior to installing or assembling any Kargo Master product.
- Be sure to have wing kit for your van application.



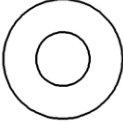
**Parts List**

ITEM NO.	ITEM	PART NUMBER	DESCRIPTION	QTY.
1		100761	PARTITION DOOR ASSEMBLY	1

**Parts List (Continued)**

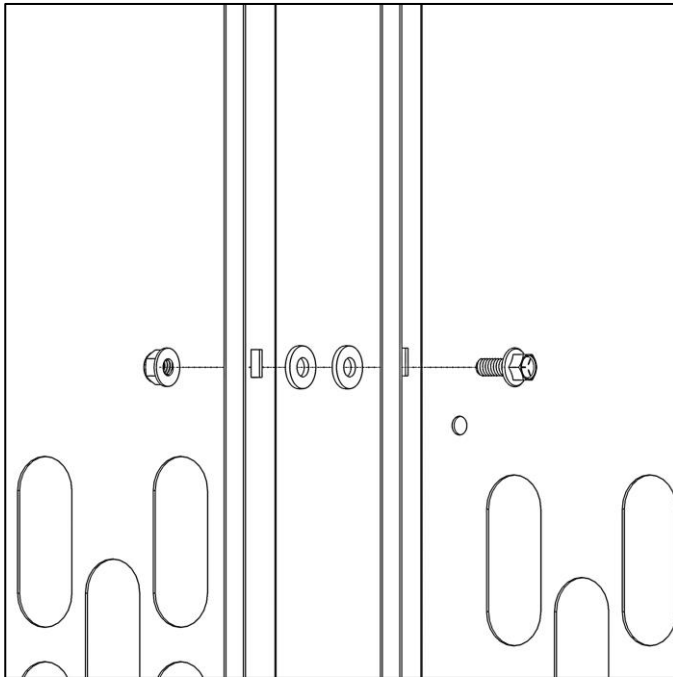
ITEM NO.	ITEM	PART NUMBER	DESCRIPTION	QTY.
2		100764	Partition Side Panel	1
3		18-40600	ASSEMBLY HARDWARE KIT	1

**Hardware**

ITEM	HARDWARE TO SCALE	PART NUMBER	DESCRIPTION	QTY.
1		11126953	1/4"-20 X 5/8" FLANGED HEX HEAD	4
2		0167030	1/4"-20 FLANGED LOCK NUT	4
3		33078	1/4" FLAT WASHER	8

**Step 1 – Assemble Partition Panels**

- Place both partition panels flat on the ground or table. Be sure to have the flanges facing upward so you can access the bolt holes.
- Bolt together using a 1/4" x 5/8" flanged hex bolt and a 1/4" flanged lock nut.
- If installing the Center Panel Latch & Door Lock Kit (40620), be sure to put two 1/4" flat washers in between the two panels. This is used to get correct spacing.
- If no door kit is being used, the washers between panels are not necessary.
- Snug tighten nut but allow movement.



- Repeat three more times per the locations shown. Be sure to insert the washers between the panels if the door kit is being installed.
- Leave bolts snug tight but allow movement until partition is installed into vehicle.

**Follow the corresponding vehicle wing kit instructions to finish installation.**

