


# **KARGO MASTER<sup>®</sup>**

**WE PUT EVERYTHING WITHIN REACH.**

---

## Instruction Guide Window Screen

---

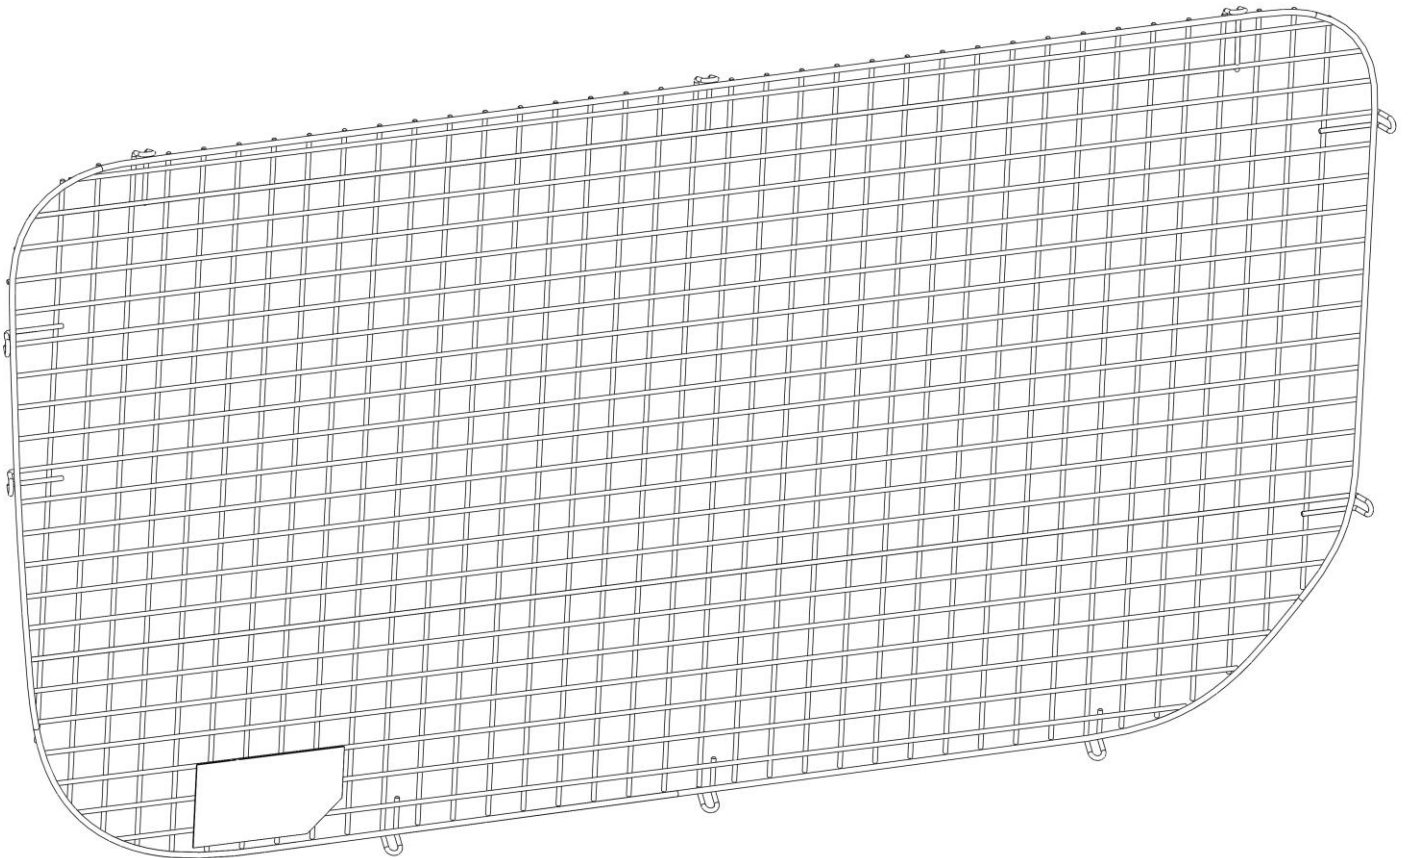

**\*PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT.\***

**Warning**



Always check for electrical wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

**Tools Needed**

#3 Screw Driver	3/16" Drill Bit
Drill	

**Table of Contents**

Parts List ..... 1


Hardware ..... 2

Install Window Screen ..... 2


**Before You Begin**

- Read all instructions prior to installing any Kargo Master product.

**Parts List**

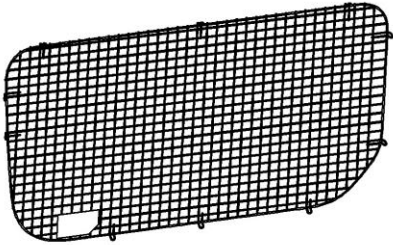
ITEM NO.	ITEM	PART NUMBER	DESCRIPTION	QTY
1		-	WINDOW SCREEN	1 OR 2
2		-	HARDWARE KIT	1

**Hardware**



KIT NUMBER	KIT DESCRIPTION	PART NUMBER	PART DESCRIPTION	QTY
18-4070C	WINDOW SCREEN HARDWARE KIT	11254495	#12-24 X 3/4" SELF-DRILLING UNDERCUT PHILLIPS SCREW 	17
18-4070F	WINDOW SCREEN HARDWARE KIT			16
18-4070T	WINDOW SCREEN HARDWARE KIT			16
18-4071C	WINDOW SCREEN HARDWARE KIT			16
18-4071F	WINDOW SCREEN HARDWARE KIT			10
18-4071T	WINDOW SCREEN HARDWARE KIT			10
18-4072C	WINDOW SCREEN HARDWARE KIT			20
18-4072F	WINDOW SCREEN HARDWARE KIT			16
18-4072T	WINDOW SCREEN HARDWARE KIT			14
18-4073T	WINDOW SCREEN HARDWARE KIT			16
18-4075T	WINDOW SCREEN HARDWARE KIT			10
18-4076T	WINDOW SCREEN HARDWARE KIT			16
18-4079T	WINDOW SCREEN HARDWARE KIT			12

**Install Window Screen**

- Hold window screen firmly in location and position to be installed. Be sure the small metal plate is located nearest the door lock.

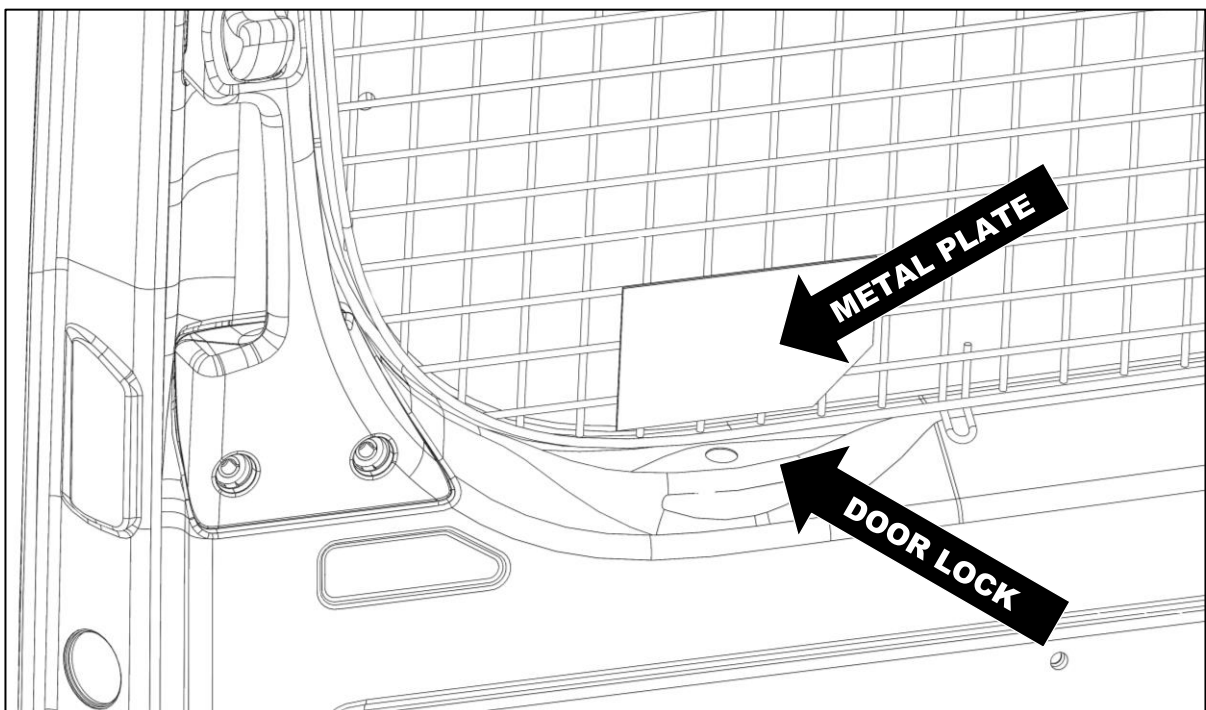

- Mark location of each screen attachment point onto door.
- Set window screen aside.
- Using a 3/16" drill bit and drill, drill a hole at each location marked.

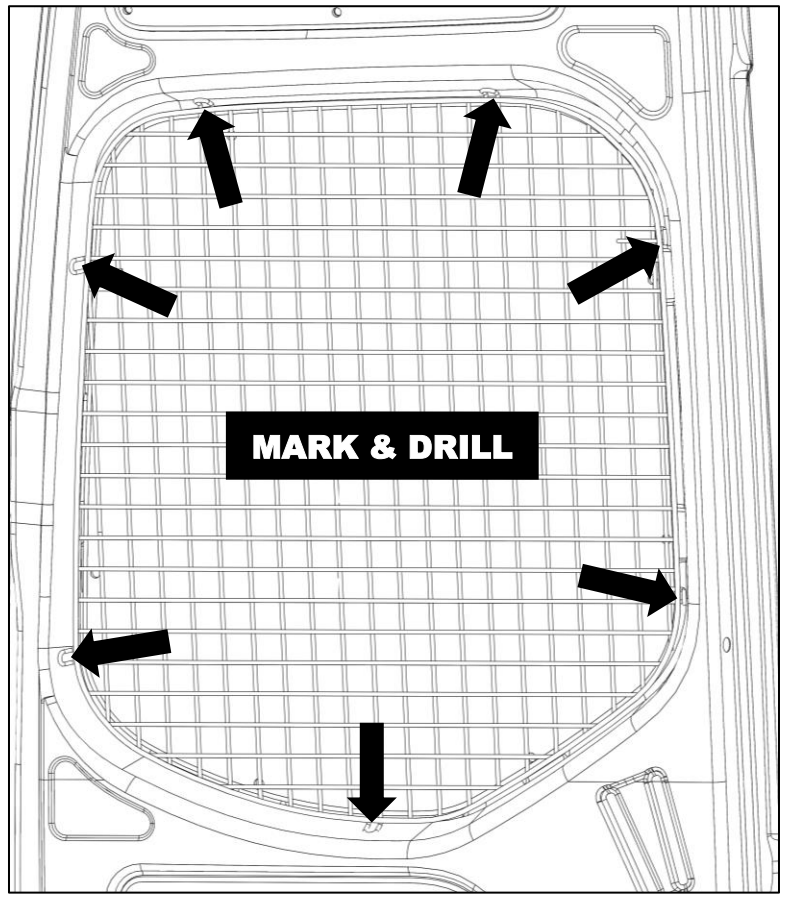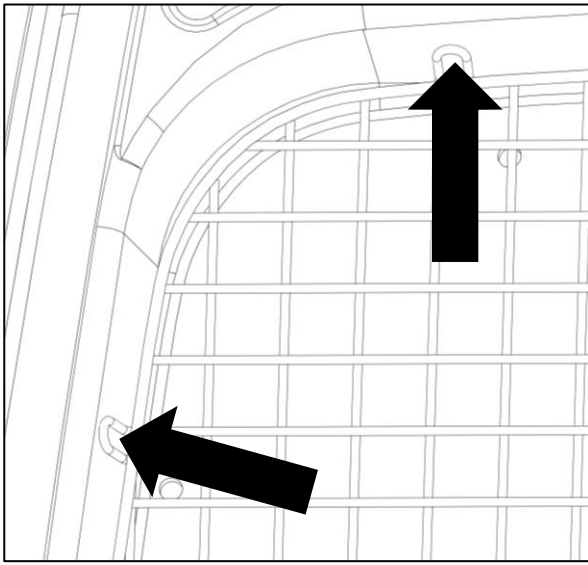

- Using the #12 x 3/4" self-drilling screws and a screwdriver, loosely install the window screen to the door. DO NOT TIGHTEN screws until all screws have been loosely installed.
- Tighten all screws.



**ASSEMBLY IS COMPLETE**