


KARGO MASTER[®]

WE PUT EVERYTHING WITHIN REACH.

Instruction Guide Window Screen

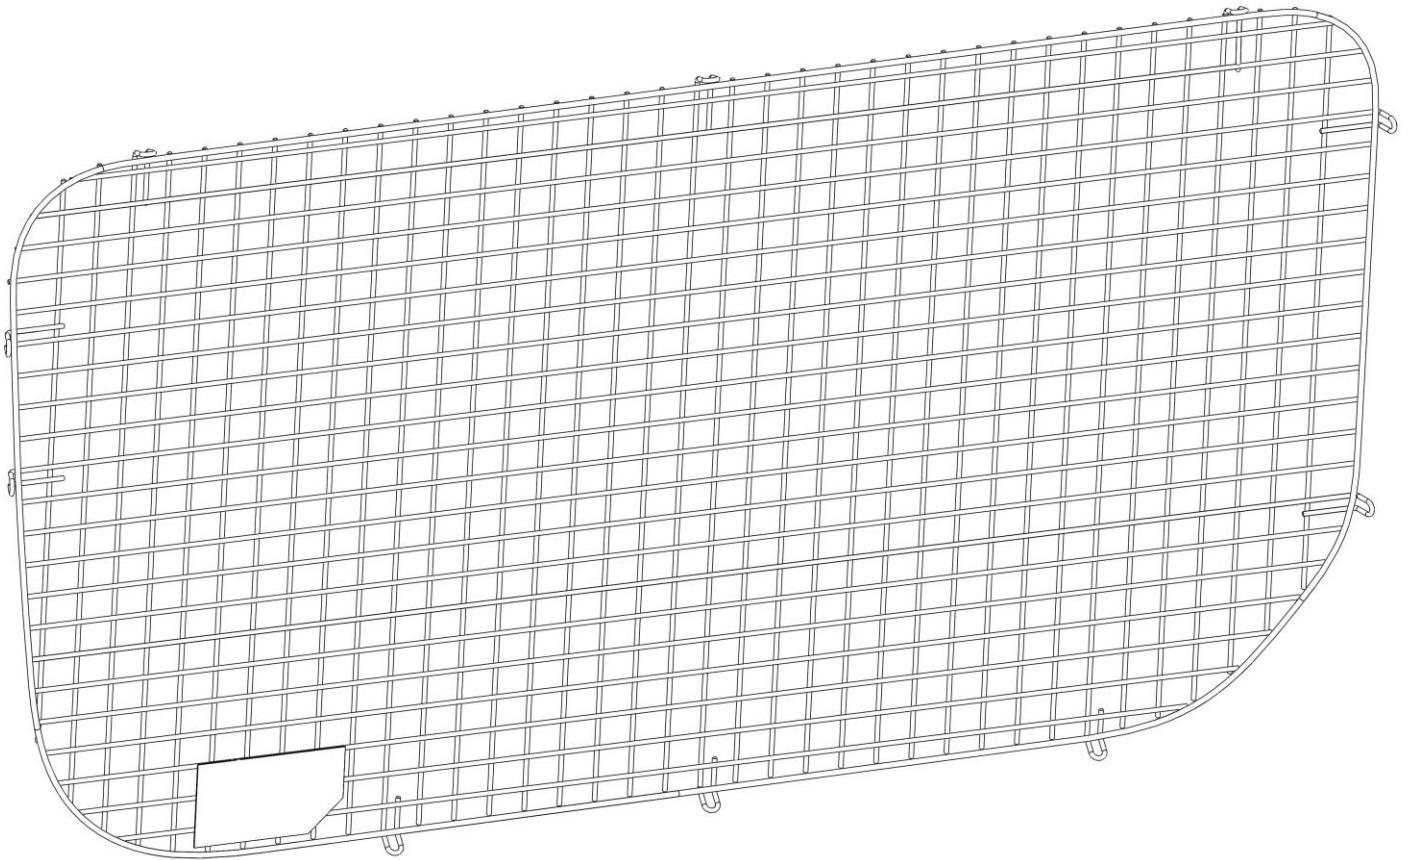

PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT.

Warning



Always check for electrical wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

Tools Needed

#3 Screw Driver	3/16" Drill Bit
Drill	

Table of Contents

Parts List 1


Hardware 2

Install Window Screen 2


Before You Begin

- Read all instructions prior to installing any Kargo Master product.

Parts List

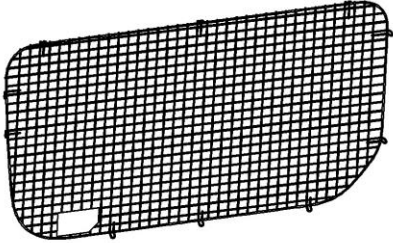
ITEM NO.	ITEM	PART NUMBER	DESCRIPTION	QTY
1		-	WINDOW SCREEN	1 OR 2
2		-	HARDWARE KIT	1

Hardware



KIT NUMBER	KIT DESCRIPTION	PART NUMBER	PART DESCRIPTION	QTY
18-4070C	WINDOW SCREEN HARDWARE KIT	11254495	#12-24 X 3/4" SELF-DRILLING UNDERCUT PHILLIPS SCREW 	17
18-4070F	WINDOW SCREEN HARDWARE KIT			16
18-4070T	WINDOW SCREEN HARDWARE KIT			16
18-4071C	WINDOW SCREEN HARDWARE KIT			16
18-4071F	WINDOW SCREEN HARDWARE KIT			10
18-4071T	WINDOW SCREEN HARDWARE KIT			10
18-4072C	WINDOW SCREEN HARDWARE KIT			20
18-4072F	WINDOW SCREEN HARDWARE KIT			16
18-4072T	WINDOW SCREEN HARDWARE KIT			14
18-4073T	WINDOW SCREEN HARDWARE KIT			16
18-4075T	WINDOW SCREEN HARDWARE KIT			10
18-4076T	WINDOW SCREEN HARDWARE KIT			16
18-4079T	WINDOW SCREEN HARDWARE KIT			12

Install Window Screen

- Hold window screen firmly in location and position to be installed. Be sure the small metal plate is located nearest the door lock.

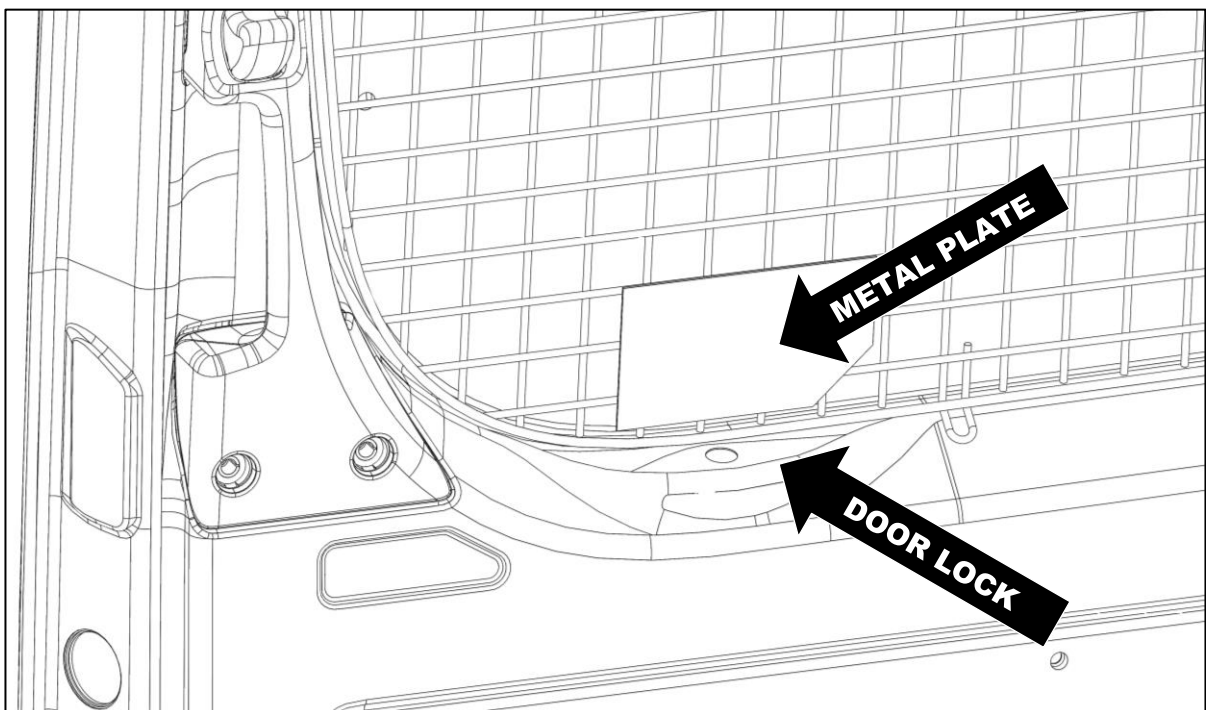

- Mark location of each screen attachment point onto door.
- Set window screen aside.
- Using a 3/16" drill bit and drill, drill a hole at each location marked.

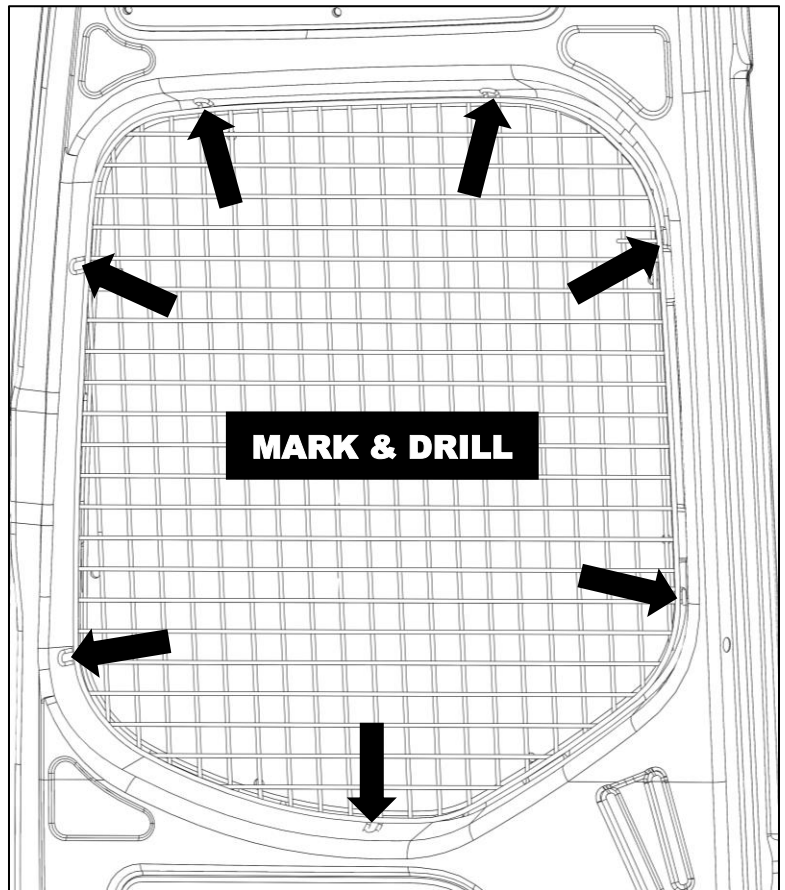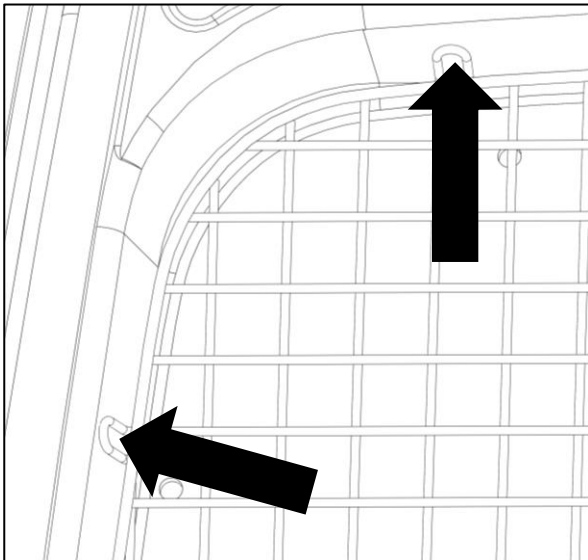

- Using the #12 x 3/4" self-drilling screws and a screwdriver, loosely install the window screen to the door. DO NOT TIGHTEN screws until all screws have been loosely installed.
- Tighten all screws.



ASSEMBLY IS COMPLETE