



**2015-16 GM 2500/3500 COWL MOUNT
BRACKET SET: #73419**

Thank you for purchasing KC HiLiTES products; your satisfaction is very important to us. |


Parts Included:

(2) Mounting Brackets (Passenger + Driver Side)

Tools Needed:

Socket / Ratchet Set

1. Raise the hood. Remove the antennae and the plastic corner pieces from the cowl. These plastic pieces can be discarded or trimmed to fit around the cowl brackets.
2. Mark the hood hinge at the hood with a pencil or tape to maintain hinge position. From one side of the hood, remove the two hinge bolts while holding the hood in place.
3. Install the appropriate side cowl bracket over the hood hinge and insert hinge bolts. Align the hood to the previous marks that were made and tighten the bolts.
4. Repeat steps 2 & 3 on the other side of the vehicle. Mount your KC lights of choice. Enjoy!

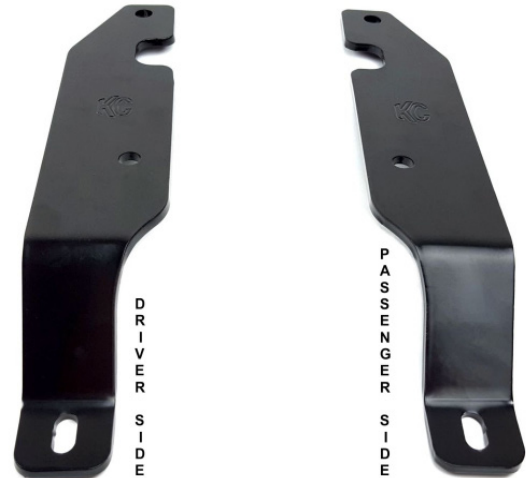

Find out more about off-road lights we have.