

# WEATHERPROOF WIRE CONNECTOR KIT

## WPWC

Skill Level: Basic

Ideal for 16 & 18 gauge wire

**Included:**

- 2-6 male pins
- 2-6 female pins
- 4-12 rubber grommets
- 1 male plug
- 1 female plug

(shown: WPWC2)




4. Crimp remainder of connector to insulated portion of wire, ensuring stability for the connection. Once all connectors have been attached, slide into the main Weatherproof Connector, again verifying male-to-female of the appropriate wire.




1. With clean ends, slide rubber grommets onto wires to be connected to plug. Using wire strippers, strip wires exposing approximately 1/2" of wire.



5. After all have been inserted, push in rubber grommets to create seal, making sure they are flush with the end of the main Weatherproof Connector.

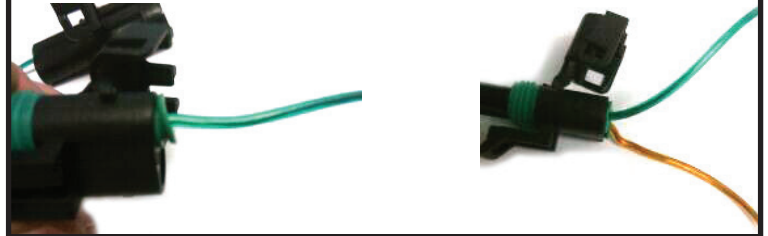


2. Line up all connectors, making sure to note the male/female ends go to the appropriate wire.

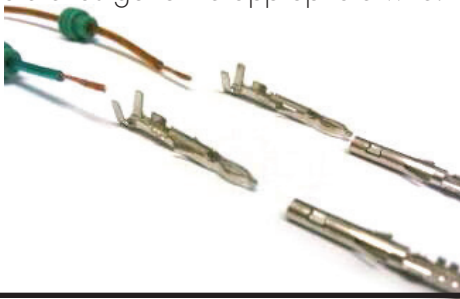

6. Move outer connector lock into place.



3. Insert the stripped wires into the connectors, making sure the insulation does not exceed the point which needs to be crimped. Crimp connectors onto wire, making sure stripped end makes contact with connector.

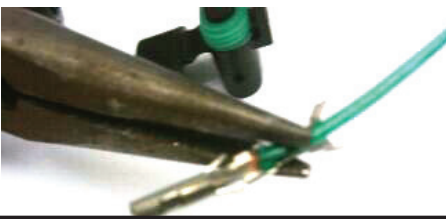

7. Test plug to verify the alignment is correct for the pins.

