




Do not make any battery connections until all your other connections are made and secure

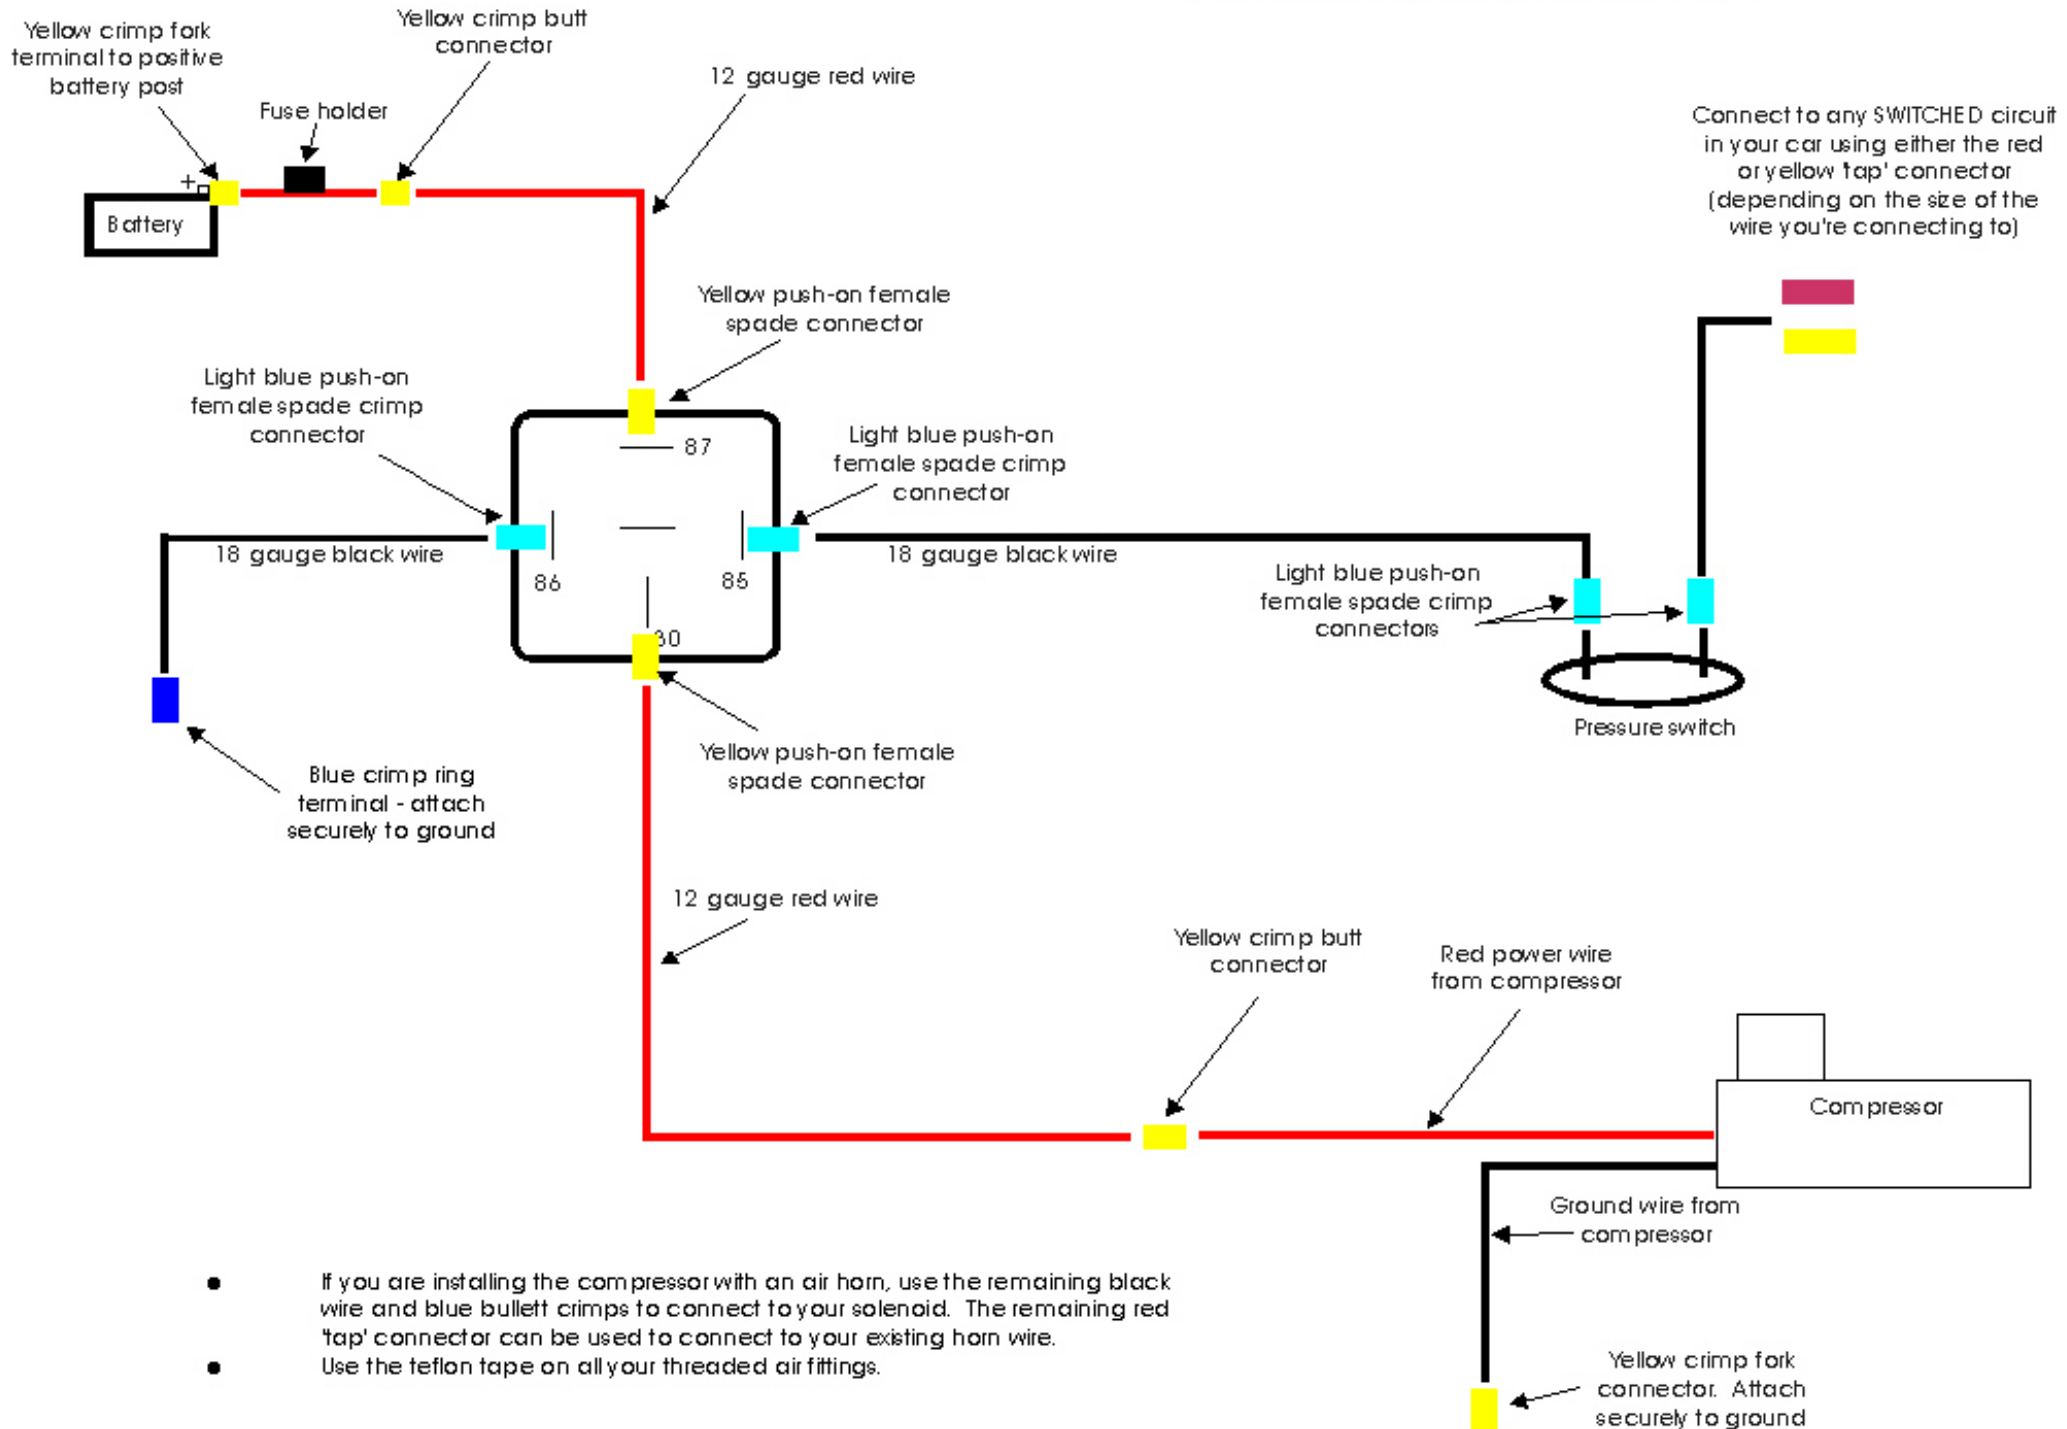

- If you are installing the compressor with an air horn, use the remaining black wire and blue bullet crimps to connect to your solenoid. The remaining red 'tap' connector can be used to connect to your existing horn wire.
- Use the teflon tape on all your threaded air fittings.

Shop for other custom automotive horns on our website.