



INSTALLATION INSTRUCTIONS


Part Number E-2295

This filter fits: See current catalog for applications


Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modifications will be required. However the following procedures MUST be followed to ensure the proper fit and seal of the K&N Filtercharger®.

1. Remove the screws that fasten the air filter cover.

2. Remove the screw that retains the air filter cover.

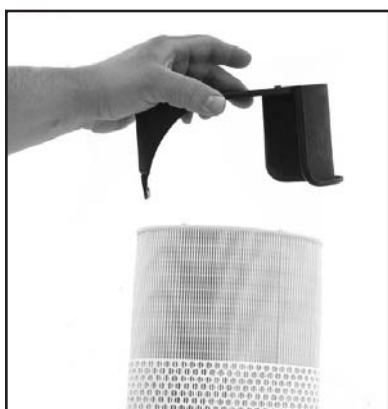

3. Remove the dirty air filter and remove the screw that fastens the top plate to the filter and depress the four tabs to release the top plate from the filter.

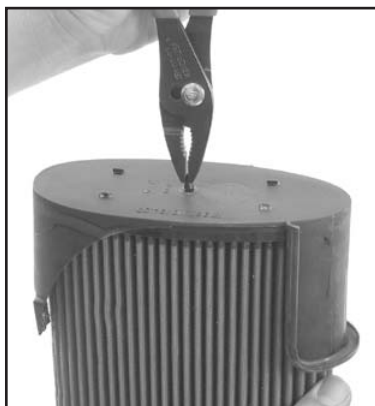

4. Install the top plate from the old filter onto the K&N filter. Using a pair of pliers, pull the rubber tip from the K&N filter through the hole on the filter top plate.



5. Squeeze the clamp supplied with the K&N filter as shown to conform to the filter base flange.




6. Unscrew filter clamp bolt and leave clamp undone. Place loosened clamp inside air box around flange base while installing K&N filter.



7. Place K&N filter top side first into air box. Position filter so that it can be pulled toward air box flange. Use pull tabs built into filter base to assist pulling filter flange onto air box flange until filter is seated.



8. Once K&N filter is slid onto air box flange, install screw that retains filter in place.

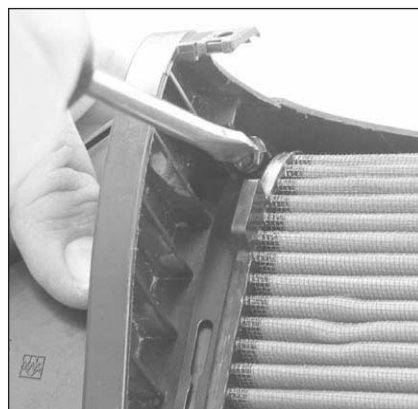

9. Position clamp over K&N filter flange and tighten.



10. Install air filter cover and fasten screws.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND USE THE PROVIDED HARDWARE MAY IMPAIR THE PERFORMANCE OF YOUR FILTER AND DAMAGE YOUR ENGINE.

Learn more about performance air intake systems we have.