



INSTALLATION INSTRUCTIONS

Part Number: VF2012

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

K&N® Cabin Air Filters replace your vehicle's stock cabin filter with a reusable design that cleans and freshens incoming air. They are electrostatically charged to grab and hold dust particles. K&N® cabin air filters help control odors while they help capture most mold, mildew, fungus, spores, bacteria and germs. When they get dirty they can be cleaned and reused and best of all, they come with a 10 year/Million mile limited warranty.

When applicable, refer to owner's manual for manufacturers installation/removal instructions. The following are helpful steps when replacing/servicing cabin air filter with K&N® cabin air filter.

The following instructions are for the Volkswagen Jetta/Passat/Golf and Audi A3/TT:

1. Open the hood.
2. Remove weather stripping from the top of the firewall. Fig. 1
3. Remove the screws that attach the access panel to the firewall. Fig. 2
4. Once the screws are removed, the access panel can be removed from the vehicle. Fig. 3
5. Locate cabin filter; pressing the 2 tabs carefully lift up and remove the cabin filter tray. Fig. 4&5
6. Once dirty cabin filter is removed clean any debris that might be present on the cabin filter housing & tray. Fig. 6
7. Remove dirty cabin filter from tray. Fig. 6
8. Install K&N® Cabin Filter in tray. **NOTE: Place filter in tray so indent in filter will miss the 2 tabs on filter tray.** Fig 7
9. Reinstall cabin filter tray into cabin filter housing; ensure tray is locked into place. Fig. 8
10. Reverse steps 1-4 to complete cabin filter installation. With the cabin filter installed, clean an area on the housing and apply the K&N® Stop Decal. The decal will help notify others that this is a reusable cabin filter.



Fig.1



Fig.2



Fig.3



Fig.4



Fig.5

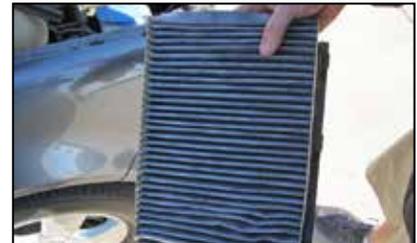


Fig.6



Fig.7



Fig.8

We recommend refreshing your K&N® Cabin Air Filter every 12 months, or 12,000 miles. Use K&N® Refresher kit pt.# 99-6000 which includes the easy to follow instructions.