


AUDI: A3, S3, Q2, TT, TTS 1.8i/2.0i 2013-on

SEAT: Leon, Ateca 1.8i/2.0i 2013-on

SKODA: Octavia, Superb, Kodiaq 1.8i/2.0i 2013-on

VW: Polo, Arteon, Golf, Beetle, Passat, Touran, Tiguan, T-Roc 1.8i/2.0i 2013-on

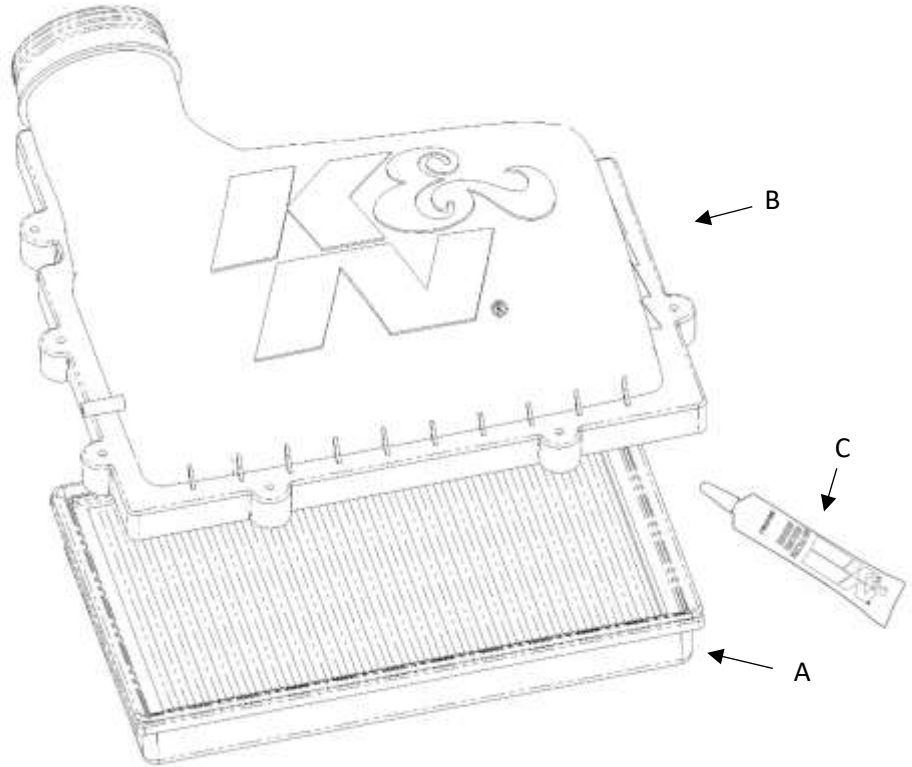

**Fitting Tools required:**

- Flat blade Screwdriver.
- Torx key set.
- Large pair of pliers.
- Utility knife.

**Parts List:**

No	Part Number	Description	QTY.
A	33-3005	PANEL AIR FILTER	1
B	A2091-43	AIR FILTER HOUSING LID	1
C	99-0703-1	SEALING GREASE	1



# 57s-9503



## Installation Instructions

1. Carefully unclip and remove the intake hose from the air box. (Fig. #1)
2. Carefully pull the vacuum hose from the airbox vent as shown. (Fig. #2)
3. Unscrew and remove the air filter housing lid from the vehicle. (Fig. #3)
4. Remove all screws from the original air filter housing lid. (Fig. #4)
5. Remove the paper air filter from the air filter housing and remove the plate in the air filter housing base by carefully pulling it upwards. (Fig. #5)
6. Fit the screws into the new K&N air filter housing lid as shown. (Fig. #6)
7. Fit the K&N panel air filter into the air filter housing base, a light bead of sealing grease must be applied to the sealing edge of the air filter as marked with the yellow line on the image. (Fig. #7)
8. Fit the K&N air filter housing lid onto the original air filter housing base and secure the original screws, secure the intake hose onto the K&N air filter housing lid using the original hose clamp. (Fig. #8)
9. Fit the vacuum hose onto the air filter housing. (Fig. #9)
10. Carry out a final height alignment check of the kit fitment, installation is now complete. (Fig. #10)

***It is possible to open up the grill intake, this will result in a higher air flow. This configuration is not allowed in countries which have TUV regulations.***

11. Unscrew and remove the intake snorkel lid, unclip the coolant hose, and remove the air box feed adaptor as shown. (Fig. #11 & 12)
12. Remove the 2 screws which secure the intake snorkel to the slam panel and remove the intake snorkel from the vehicle. (Fig. #13)
13. Cut out the marked section to provide a higher air flow towards the air filter housing. (Fig. #14)
14. Refit the intake snorkel, the airbox feed adaptor, coolant hose and the intake snorkel lid.



Fig.#1



Fig.#2



Fig.#3



Fig.#4



Fig.#5



Fig.#6



Fig.#7



Fig.#8



Fig.#9



Fig.#10



Fig.#11



Fig.#12



Fig.#13



Fig.#14

