



FILTER ASSEMBLY INSTRUCTIONS

Part Number 55-1040

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last many seasons. However the following procedures **MUST** be followed to ensure the proper fit and seal of the K&N *Filtercharger*®.

- 1) Slide each of the four injector stacks into base plate. (See Fig. 1)
- 2) With injector stacks installed, slide provided hose clamps onto adapters on the bottom side of base plate assembly. (See Fig. 2)

NOTE: It is recommended that the clamps face the same direction for ease of tightening.

- 3) Install filter base plate assembly (with four injectors) onto fuel injection body and tighten bolts securing the stacks to the injectors.
- 4) Slide base plate up or down until a measurement of 10 1/4" is achieved.

NOTE: The measurement of 1-1/4" is a maximum measurement of each injector stack measured from the top of the injector horn to the top of the base plate. (See Fig 3)

- 5) Tighten the four hose clamps securing the injector stacks correct height. (See Fig. 4)
- 6) Install filter onto base plate assembly and fasten using the supplied 1/4 turn fastener. (See Fig. 5)



FIG. 1



FIG. 2

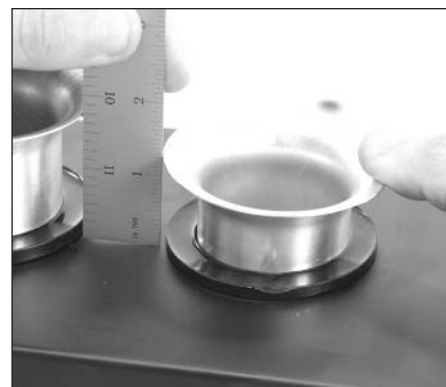


FIG. 3



FIG. 4



FIG. 5

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND USE THE PROVIDED HARDWARE MAY IMPAIR THE PERFORMANCE OF YOUR FILTER AND DAMAGE YOUR ENGINE.