



INSTALLATION INSTRUCTIONS



KW automotive

685 10 119

**INSTALLATION INSTRUCTIONS
BMW M3 type M390 Cancellation kit**


Instruction No.

685 10 119

Front axle:



Assembly area front axle electronic kit

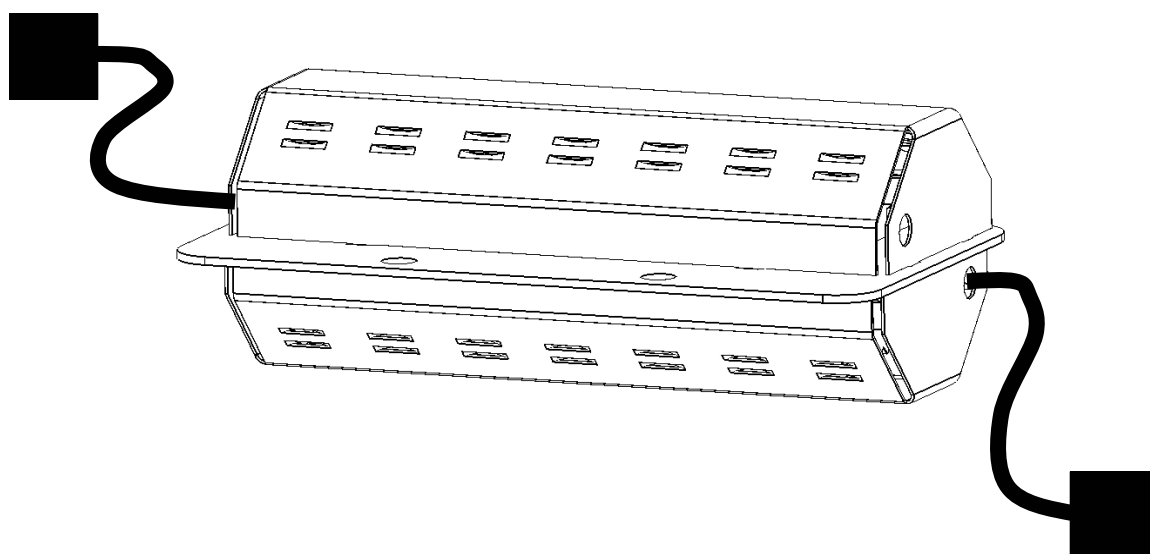

Installation Instructions

KW automotive

Instruction No.

685 10 119

Front axle:

Mount the electronic kit with the supplied allen screws and serrated nuts on the bracket.



Disassemble the original nuts of the dome strut.



Instruction No.

685 10 119



Installation Instructions

KW automotive

Instruction No.

685 10 119


Rear axle:

Rear trunk



Picture BMW M5

Assembly area rear axle electronic kit

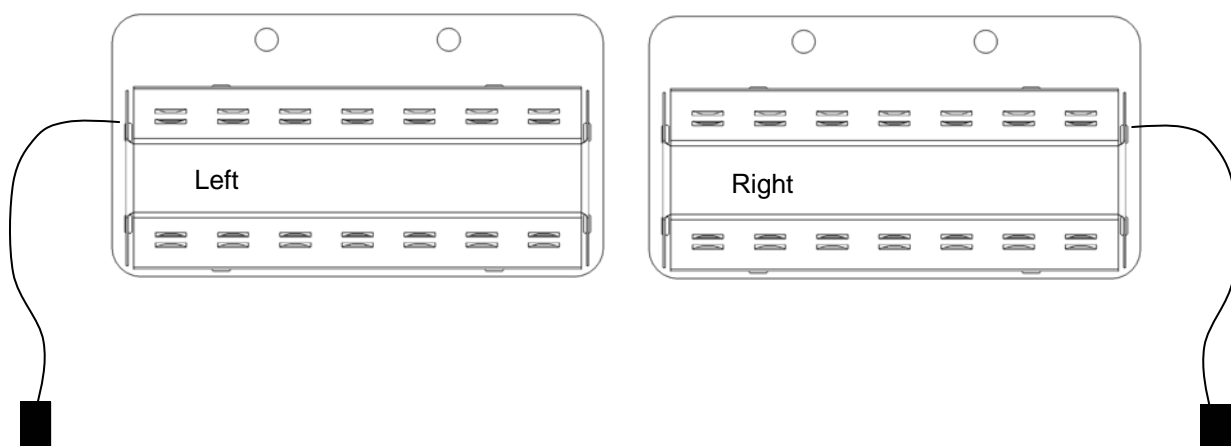

Installation Instructions

KW automotive

Instruction No.

685 10 119

Rear axle:

Dismantle the rear trunk carpeting.
Fix the rear axle electronic kit with the supplied tape and connect the cable with the original cable harness. For this remove the side cover
IMPORTANT: Surface must be cleaned and degreased.

Left



Right




Instruction No.

685 10 119

Rear axle:

Lay the cable and fix it with the supplied cable ties on the marked points.

Left

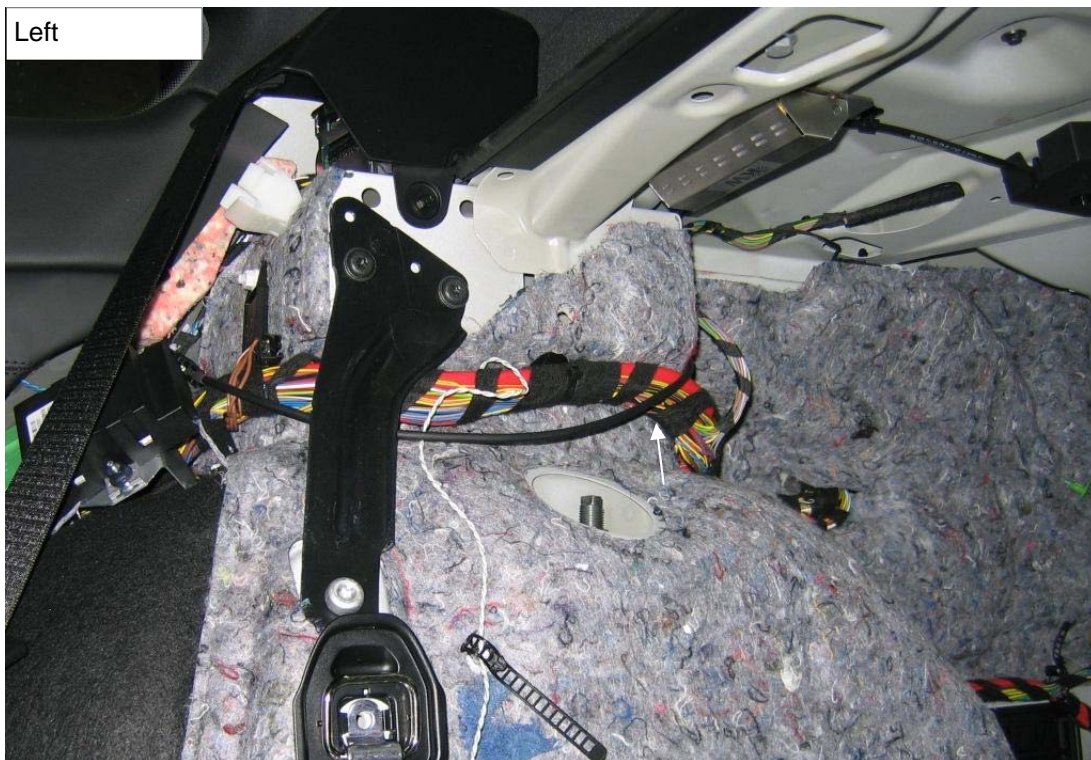

Right



Instruction No.

685 10 119

Rear axle:

