



INSTALLATION INSTRUCTIONS



Instruction No.

685 10 476

KW automotive

685 10 476

INSTALLATION INSTRUCTIONS

Cancellation kit

Installation Instructions


KW automotive

Instruction No.


685 10 476

Only front axle:


Change the front axle installed connectors against the supplied connector.

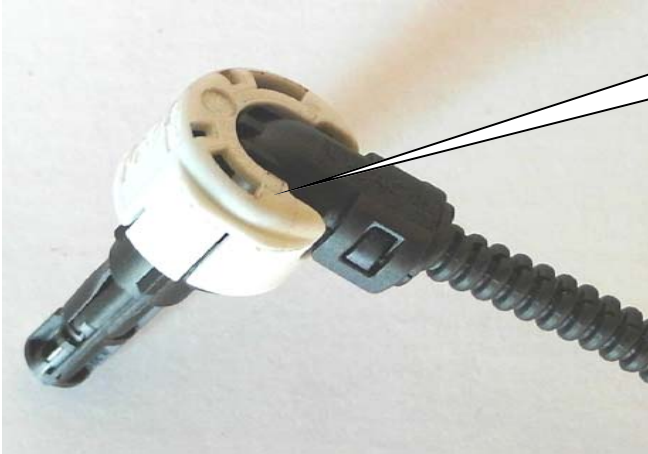


1. Dismantle the standard connector.

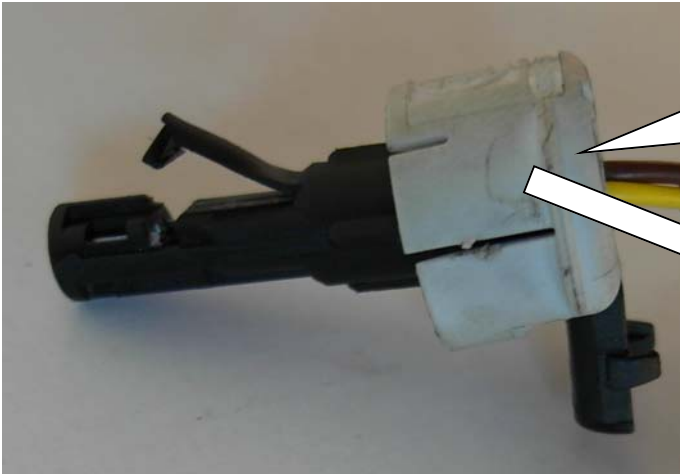

2. Open the lock from the plug connector and remove the standard wires out of the connector. Use a correct tool.

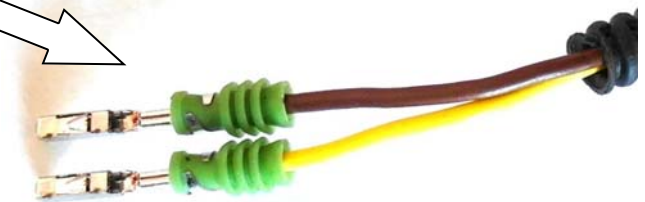

3. Insert the wire completed into the supplied connector until to the lock. The pinposition / cable colour is not relevant. Subsequently lock the connector.

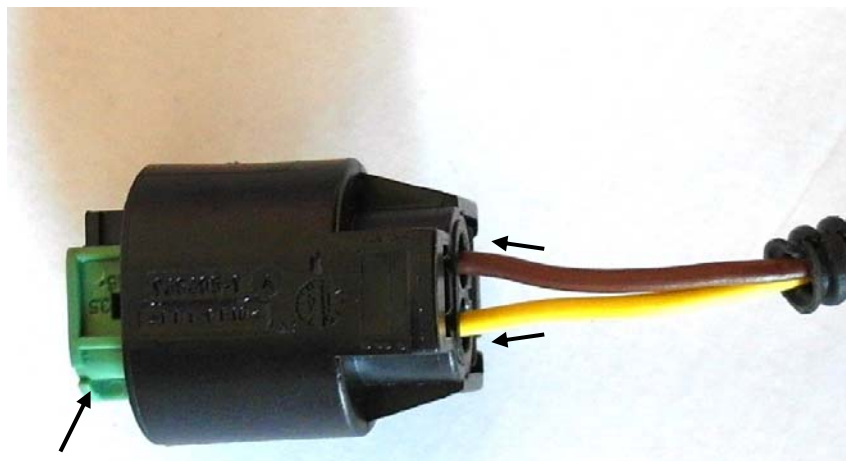

Lock the connector

Installation Instructions

KW automotive

Instruction No.

685 10 476

Right front axle :

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Fix the canceller and the cable with cable ties on the vehicle bar.



Installation Instructions

KW automotive

Instruction No.

685 10 476

Left front axle :

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Fix the canceller and the cable with cable ties on the vehicle bar and on the cable wire harness.



Installation Instructions

KW automotive

Instruction No.

685 10 476

Left rear axle:

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Fix the canceller with cable ties on the wire harness.



Instruction No.

685 10 476

Right rear axle:

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Fix the canceller and the wire with cable ties on the tank filler pipe.

