



# INSTALLATION INSTRUCTIONS



# *KW automotive*

**685 10 365**

## **INSTALLATION INSTRUCTIONS**

### **Cancellation kit**

Porsche Cayenne page 2-9

Porsche Macan page 10-13

Instruction No.

685 10 365

**Front axle:**

# Porsche Cayenne

Install the cacellation kit with the supplied cable ties on the vehicle frame. The assembly position is beside the ABS. Connect the cable from the cacellation kit into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

**Right vehicle side.**



Instruction No.

685 10 365


Front axle:

# Porsche Cayenne

Right vehicle side.

Cable tie

Edge Clip

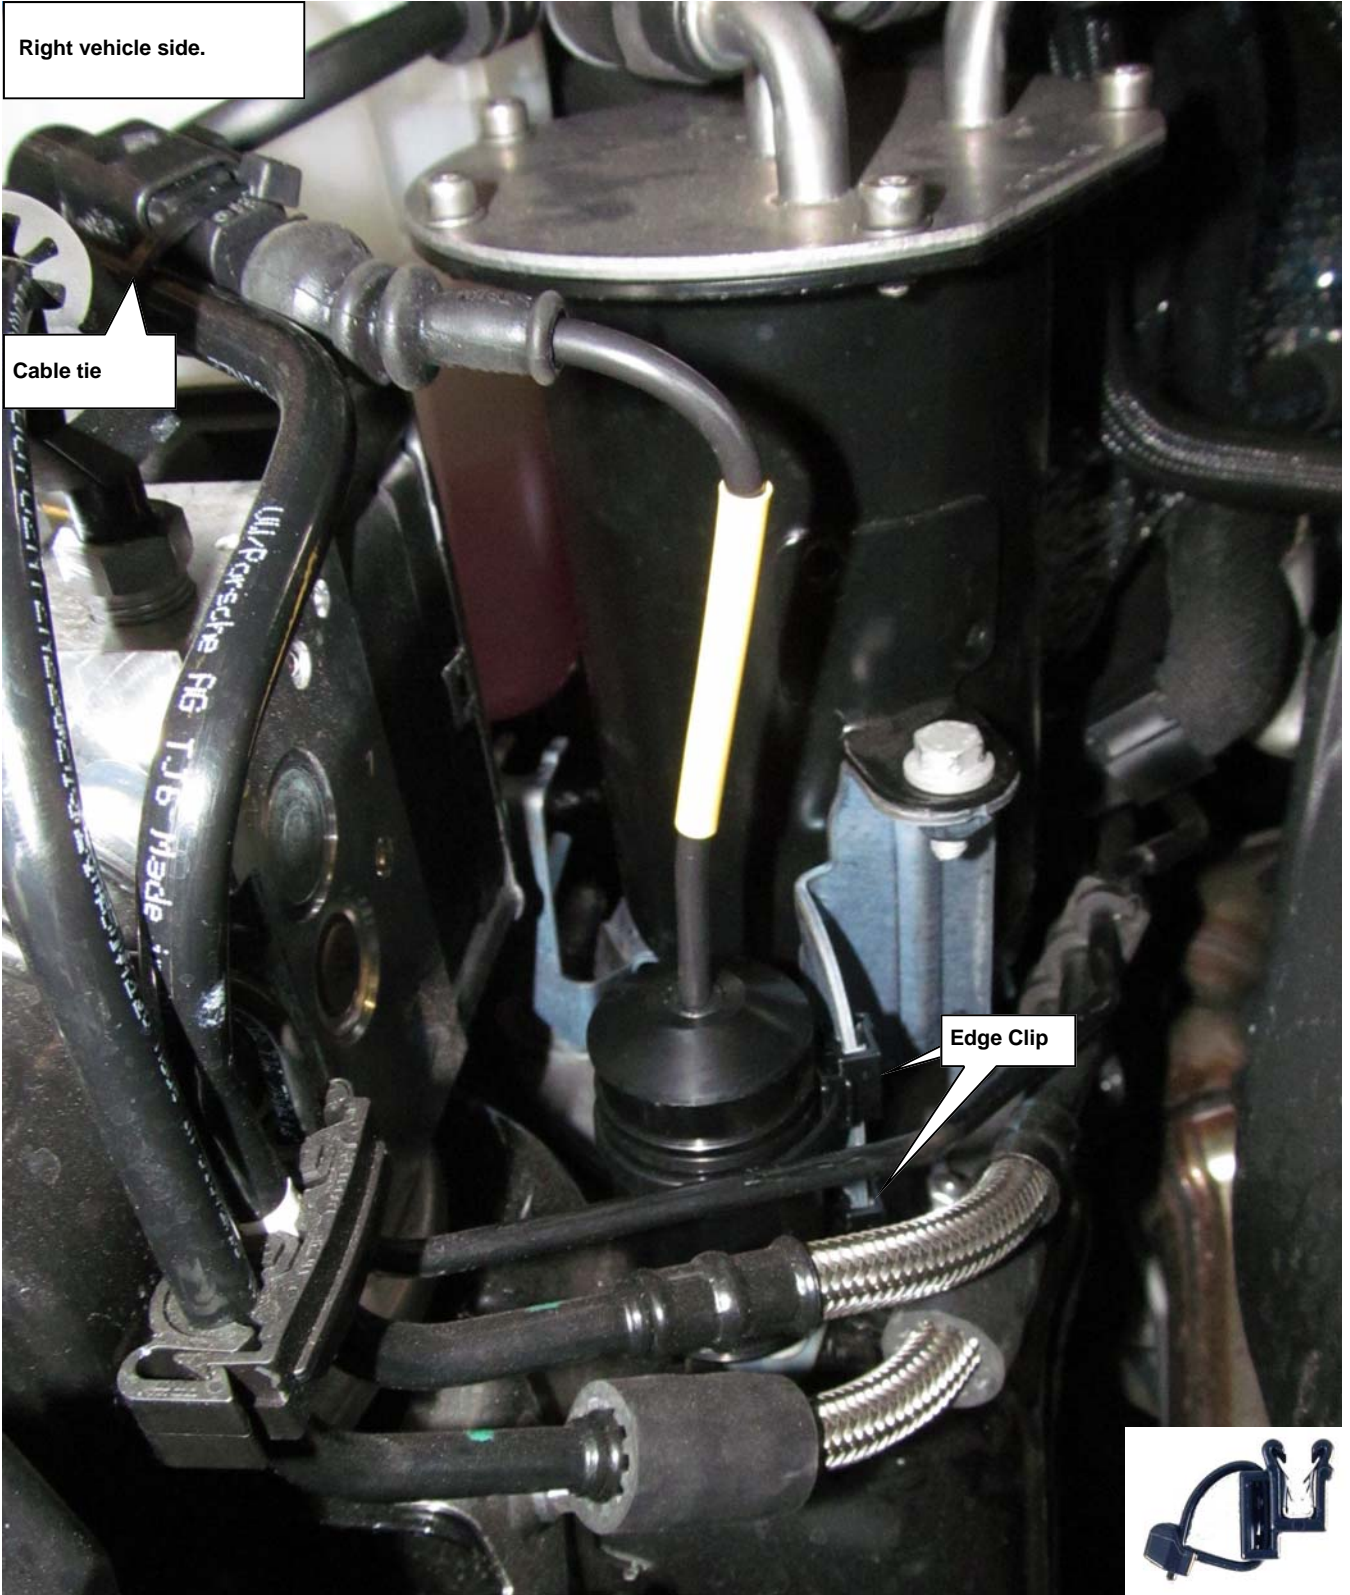

Instruction No.

685 10 365

**Front axle:**

# Porsche Cayenne

Install the cacellation kit with the supplied cable ties on the vehicle frame. The assembly position is beside the battery pole. Connect the cable from the cacellation kit into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

**Left vehicle side.**



Instruction No.

685 10 365

Front axle:

# Porsche Cayenne

Left vehicle side.



Instruction No.

685 10 365

**Rear axle:**

# Porsche Cayenne

Fix the cacellation kit on the rear axle as shown on the picture. Therefore the original cable need to be returned.

Left vehicle side.






Instruction No.

685 10 365

**Rear axle:**

# Porsche Cayenne

Install the cacellation kit with the supplied cable ties on the vehicle frame. Fix the Connector with cable ties. Connect the cable from the cacellation kit into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

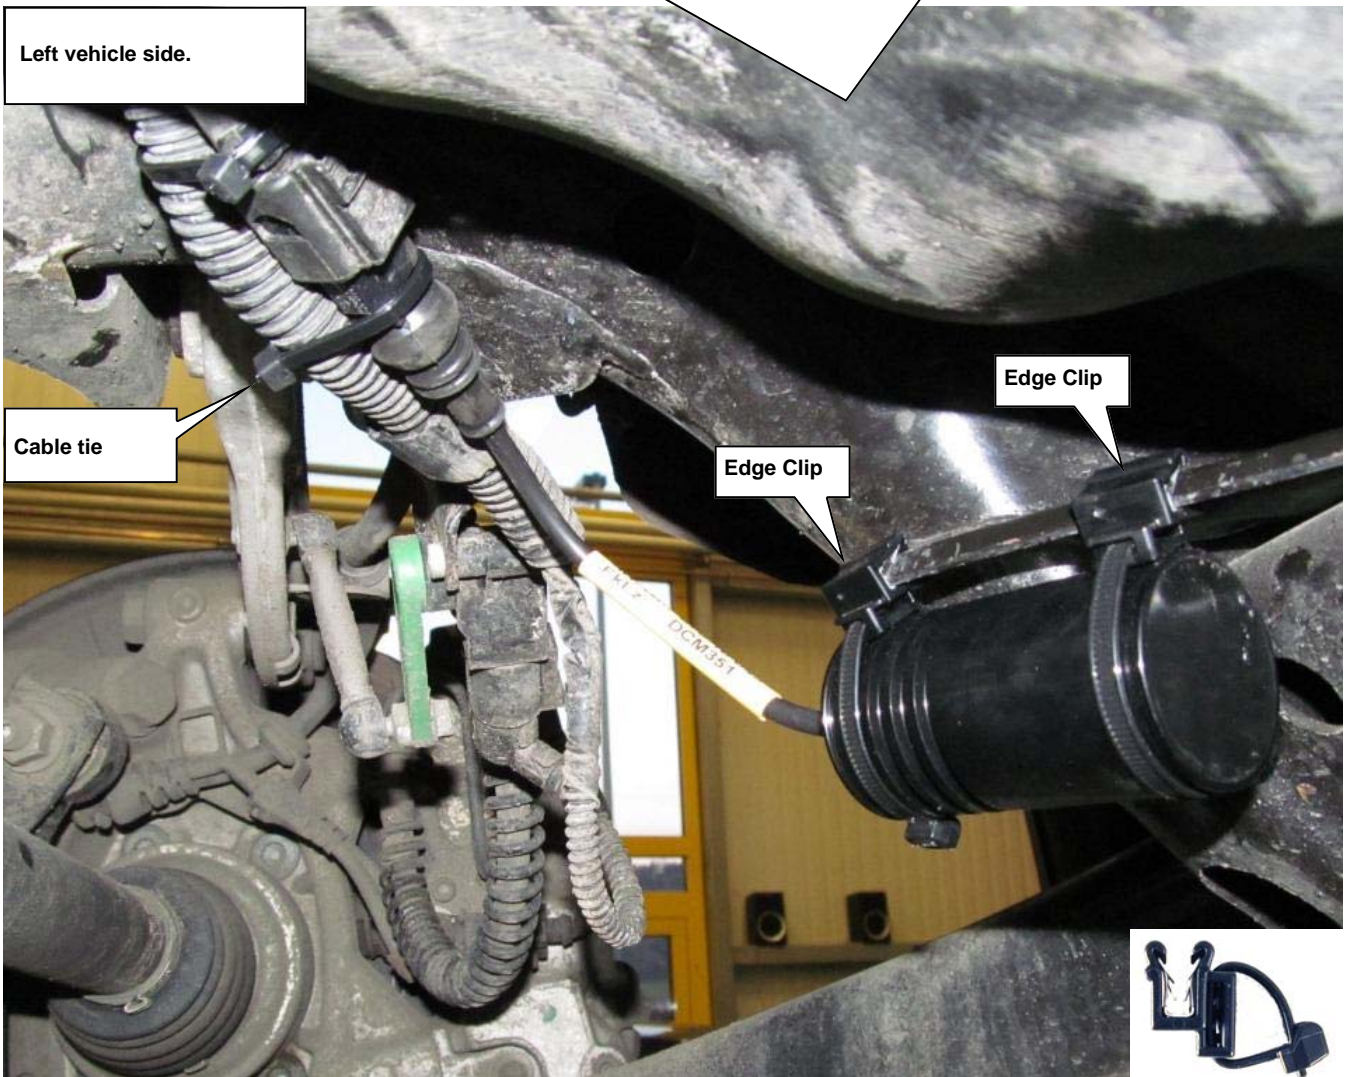**Left vehicle side.****Cable tie****Edge Clip****Edge Clip**



Instruction No.


685 10 365

**Rear axle:**

# Porsche Cayenne

Fix the cacellation kit on the rear axle as shown on the picture. Therefore the original cable need to be returned.

Right vehicle side.

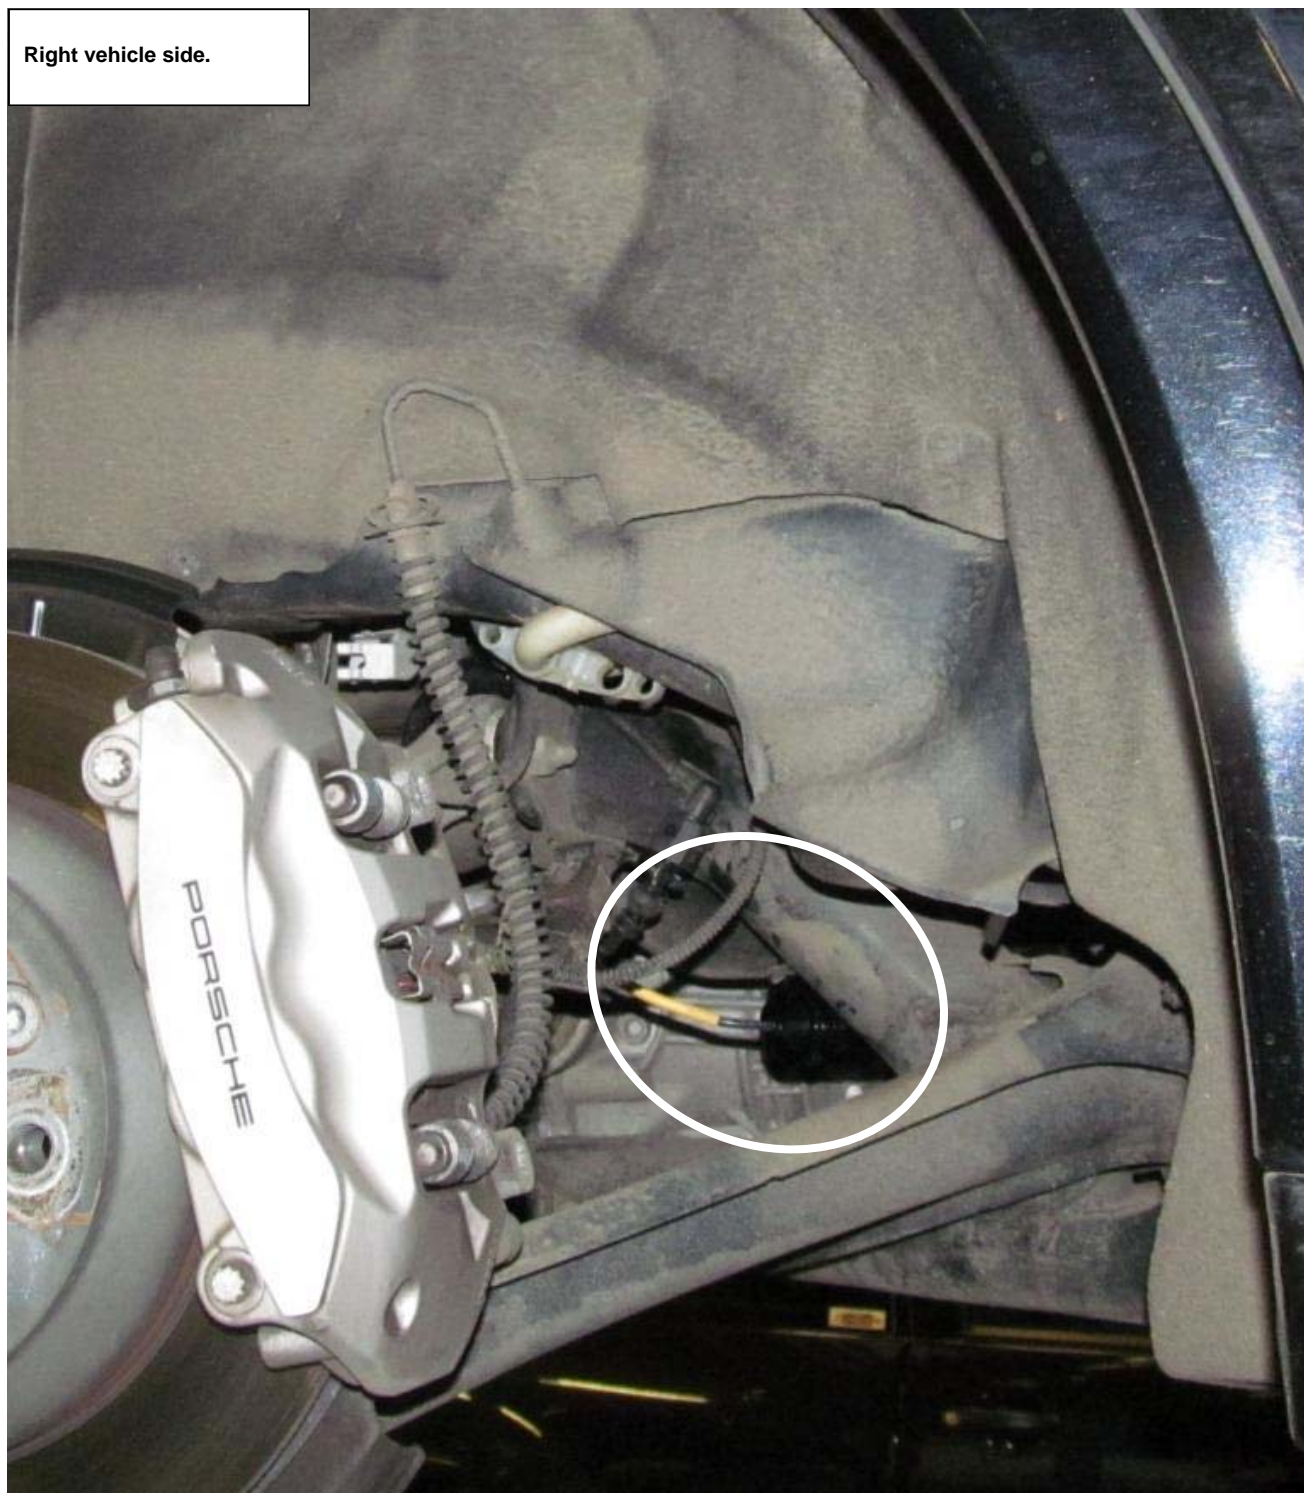

Instruction No.


685 10 365

**Rear axle:**

# Porsche Cayenne

Install the cacellation kit with the supplied cable ties on the vehicle frame. Fix the Connector with a edge clip on the frame. Connect the cable from the cacellation kit into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

**Right vehicle side.**

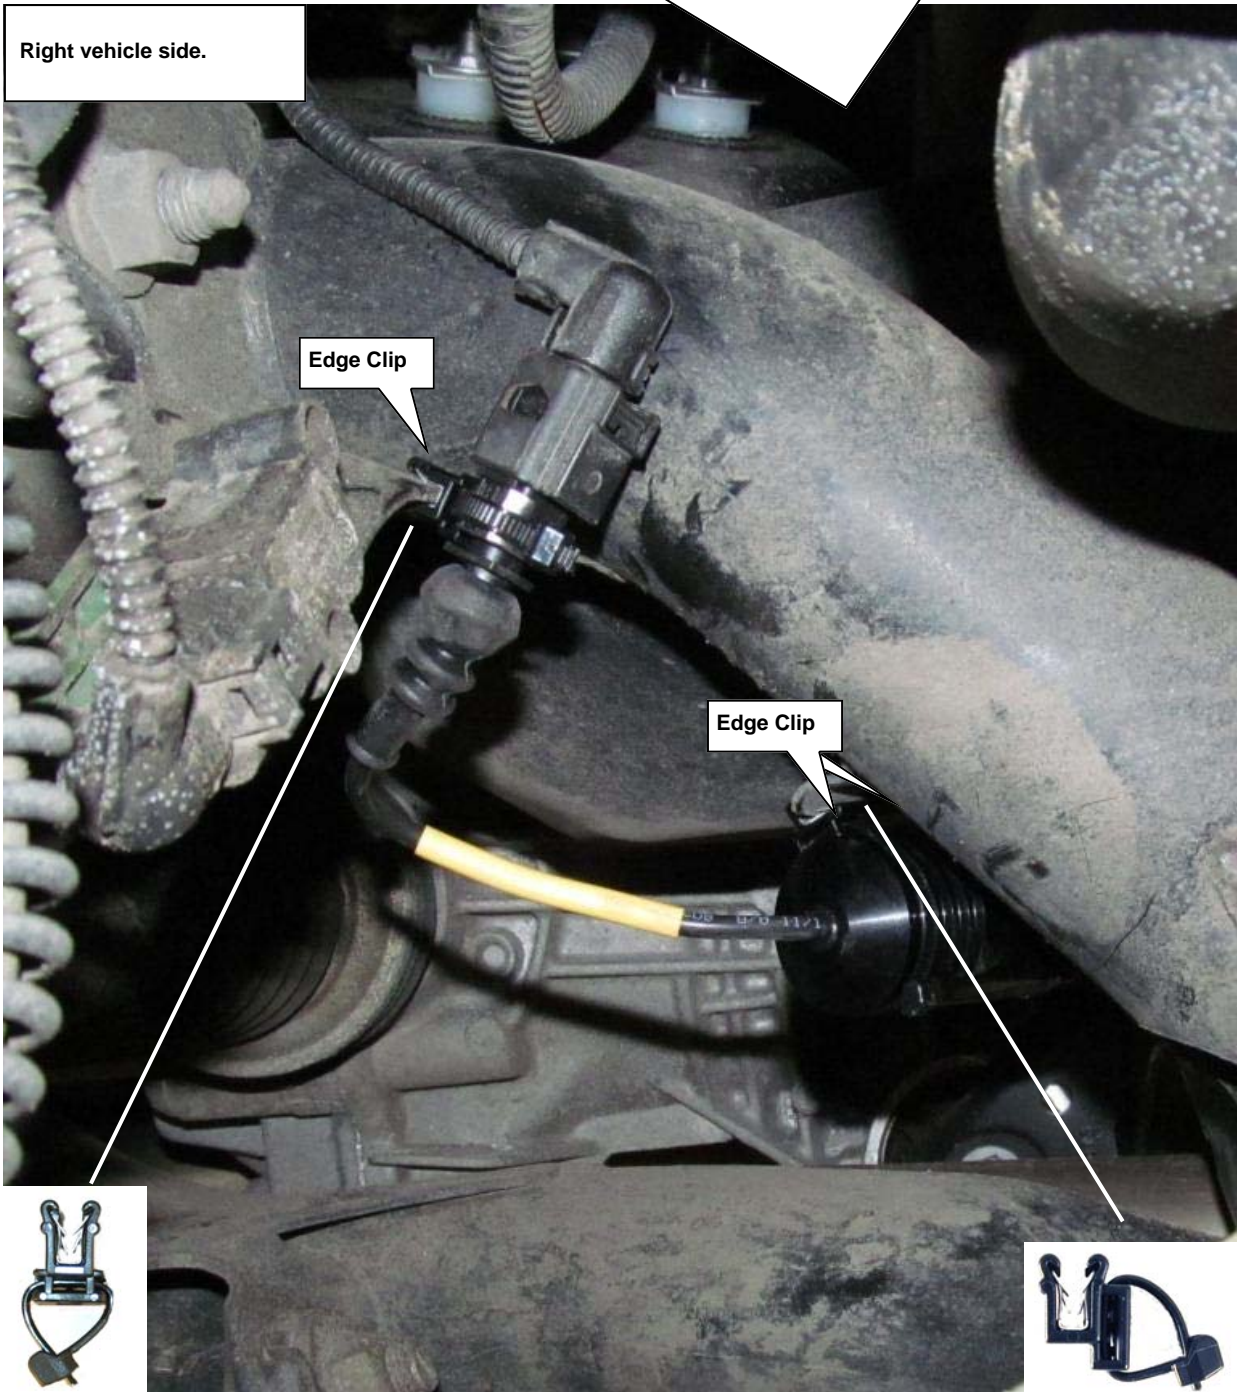



Instruction No.


685 10 365

Front axle:

# Porsche Macan

Install the cacellation kit with the supplied cable ties on the vehicle frame. Connect the cable from the cacellation kit into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

Right vehicle side.

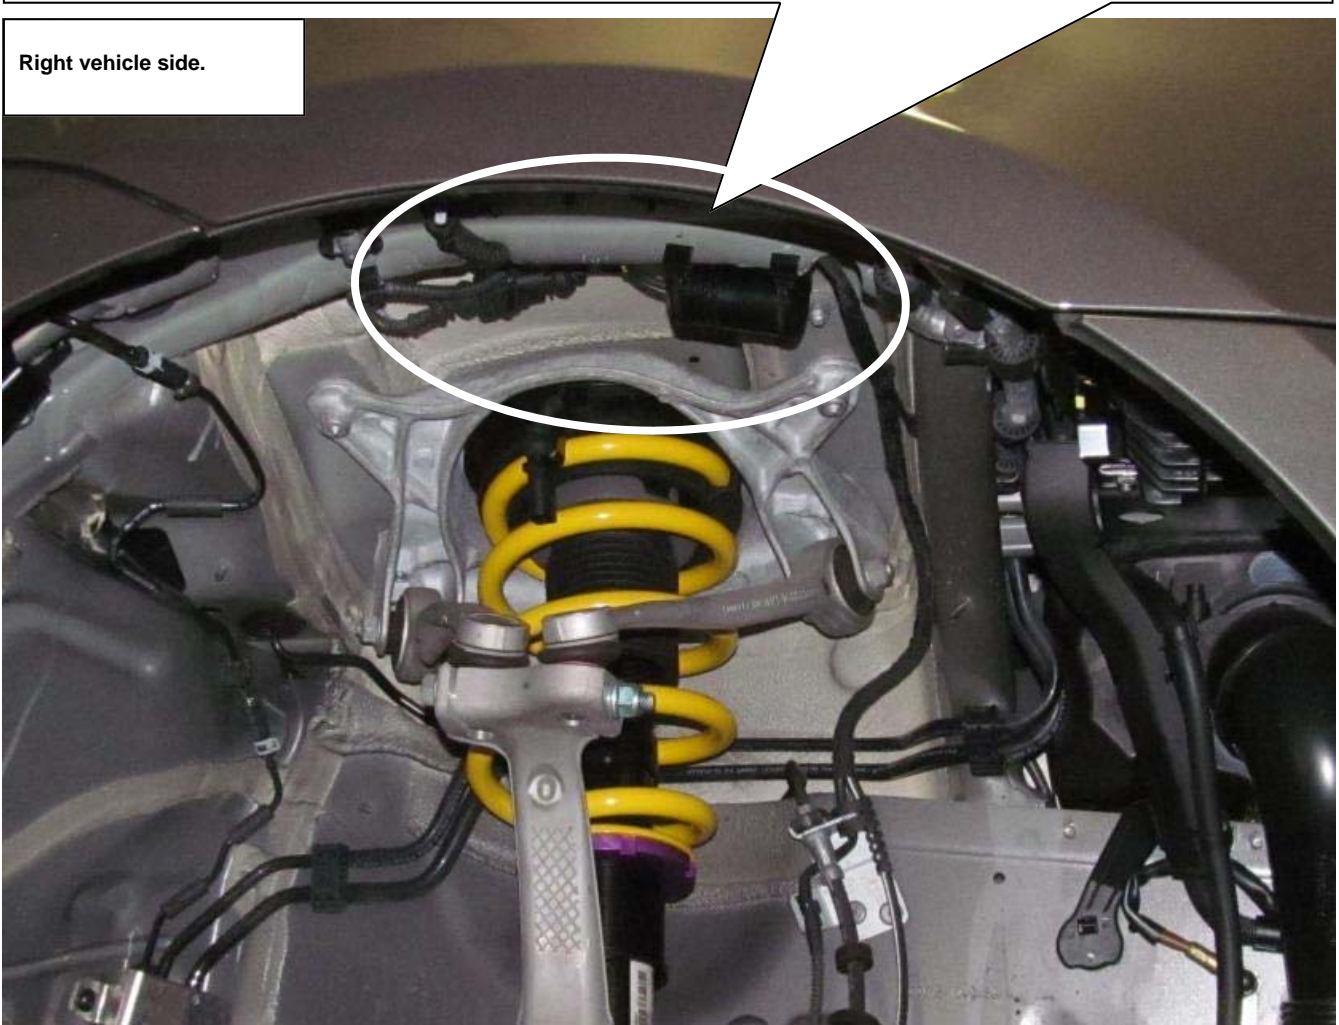

Edge Clip

Edge Clip



Instruction No.


685 10 365

Front axle:

# Porsche Macan

Install the cacellation kit with the supplied cable ties on the vehicle frame. Connect the cable from the cacellation kit into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

Linke Fahrzeugseite.  
Left vehicle side.

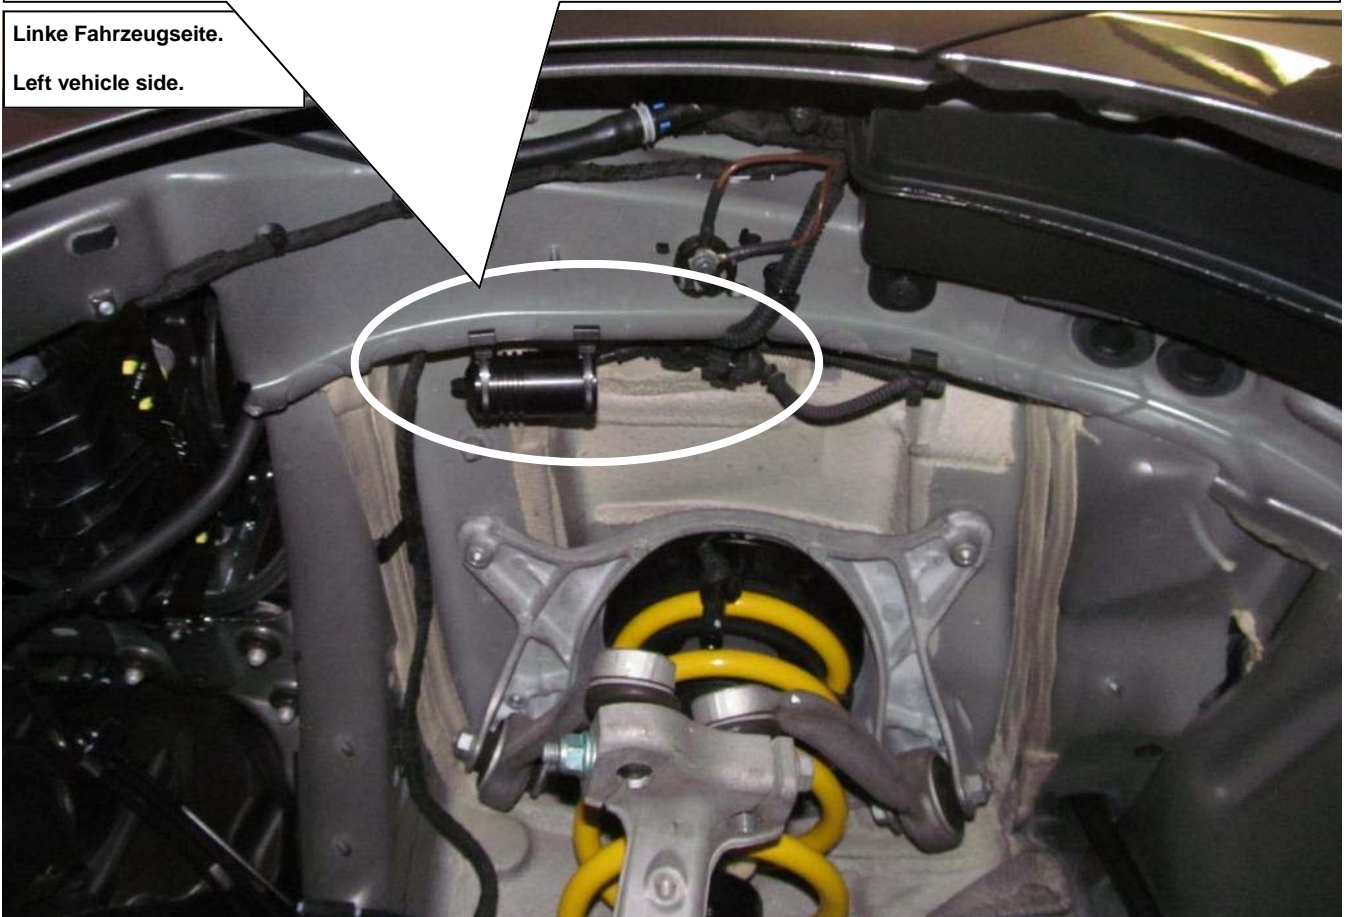



Instruction No.


685 10 365

Hinterachse  
Rear axle:

# Porsche Macan

Install the cacellation kit with the supplied cable ties on the vehicle frame. Connect the cable from the cacellation kit into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

Left vehicle side.

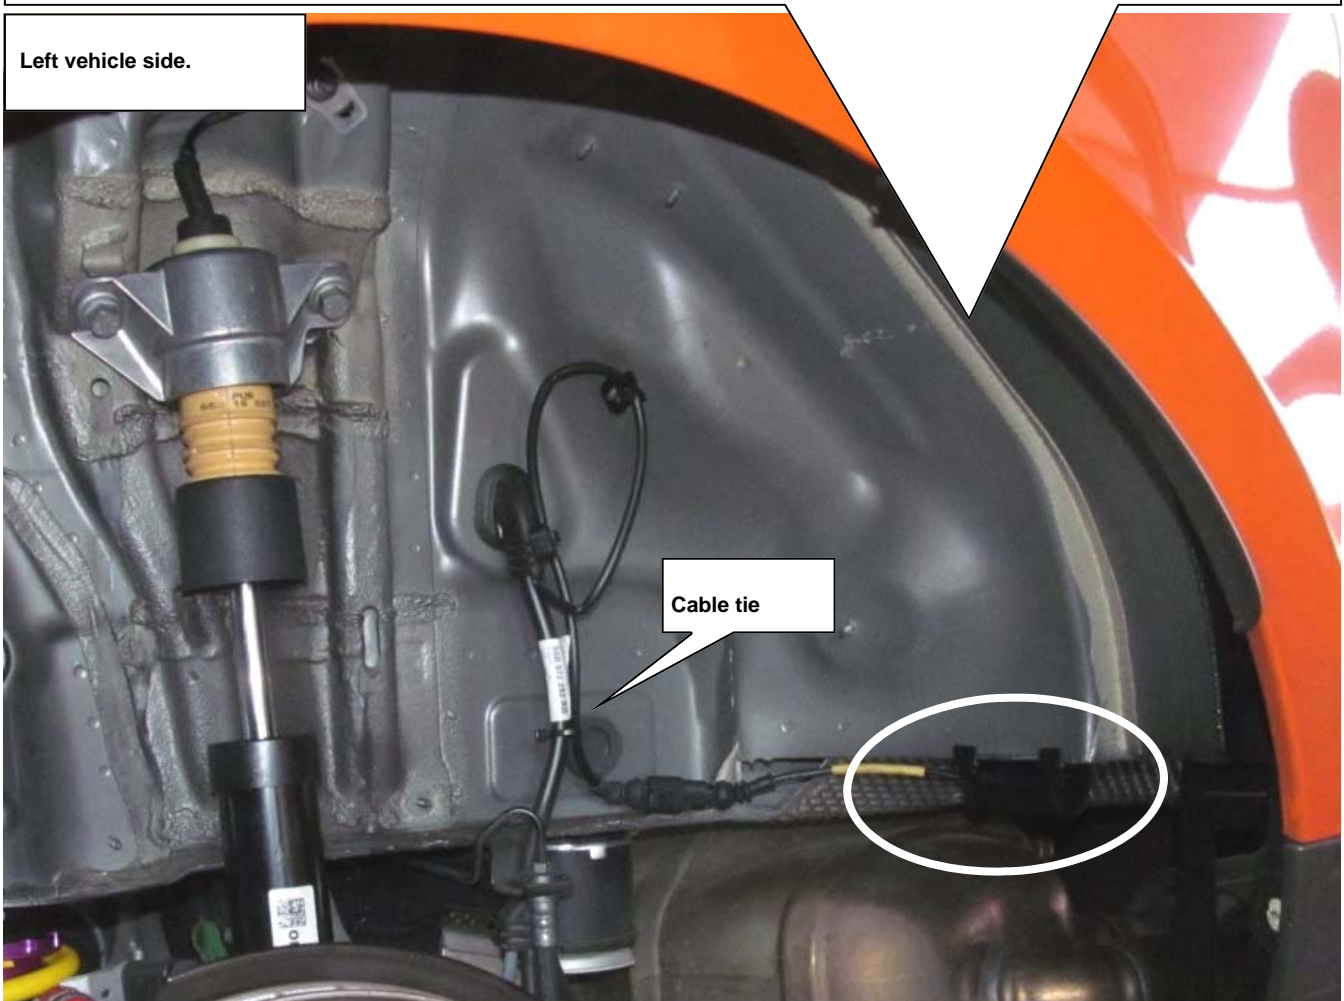

Instruction No.

685 10 365

Rear axle:

# Porsche Macan

Install the cacellation kit with the supplied cable ties on the vehicle frame. Connect the cable from the cacellation kit into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

Left vehicle side.

