



INSTALLATION INSTRUCTIONS



Instruction No.

685 10 456

KW automotive

685 10 456

INSTALLATION INSTRUCTIONS

Cancellation kit

Installation Instructions

KW automotive

Instruction No.

685 10 456

Front axle:

Fix the electronic component on the wire harness with cable ties. Connect the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks.



Fix the wire and the connector with cable ties as shown on the picture.

Installation Instructions


KW automotive

Instruction No.

685 10 456

Rear axle

Fix the electronic component on the wire harness with cable ties. Connect the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component until it locks.

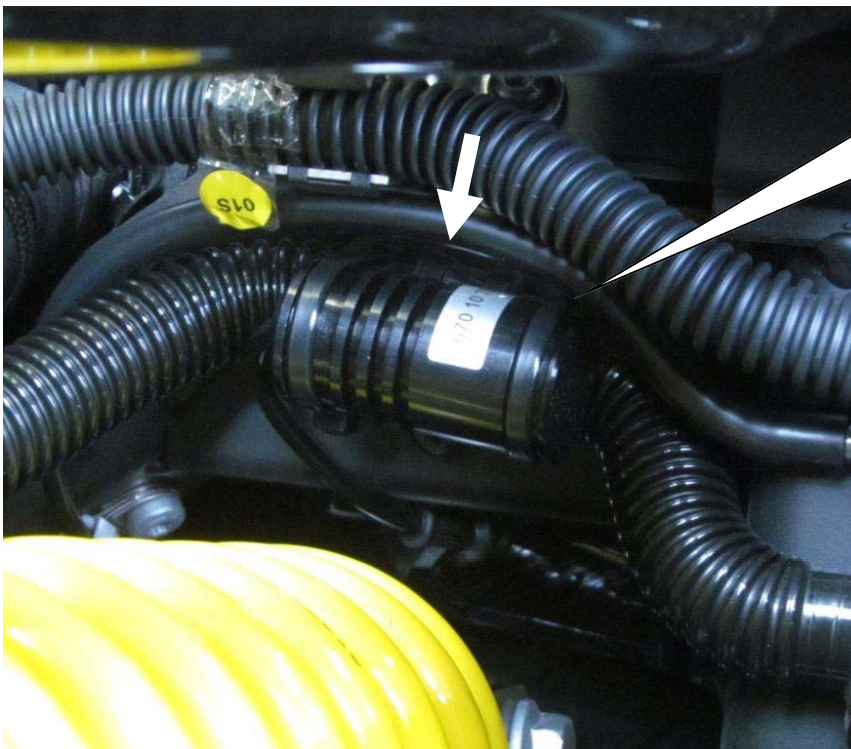

Fix the wire and the connector with cable ties as shown on the picture.