

CANCELLATION KIT



KW automotive

685 10 365

EINBAUHINWEISE

Stillegungssatz

Porsche Cayenne Seite 2-9

Porsche Macan Seite 10-13

685 10 365

INSTALLATION INSTRUCTIONS

Cancellation kit

Porsche Cayenne page 2-9

Porsche Macan page 10-13

Instruction No.

685 10 365

Front axle:

Porsche Cayenne

Install the cacellation kit with the supplied cable ties on the vehicle frame. The assembly position is beside the ABS. Connect the cable from the cacellation kit into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

Right vehicle side.



Instruction No.

685 10 365


Front axle:

Porsche Cayenne

Right vehicle side.

Cable tie

Edge Clip

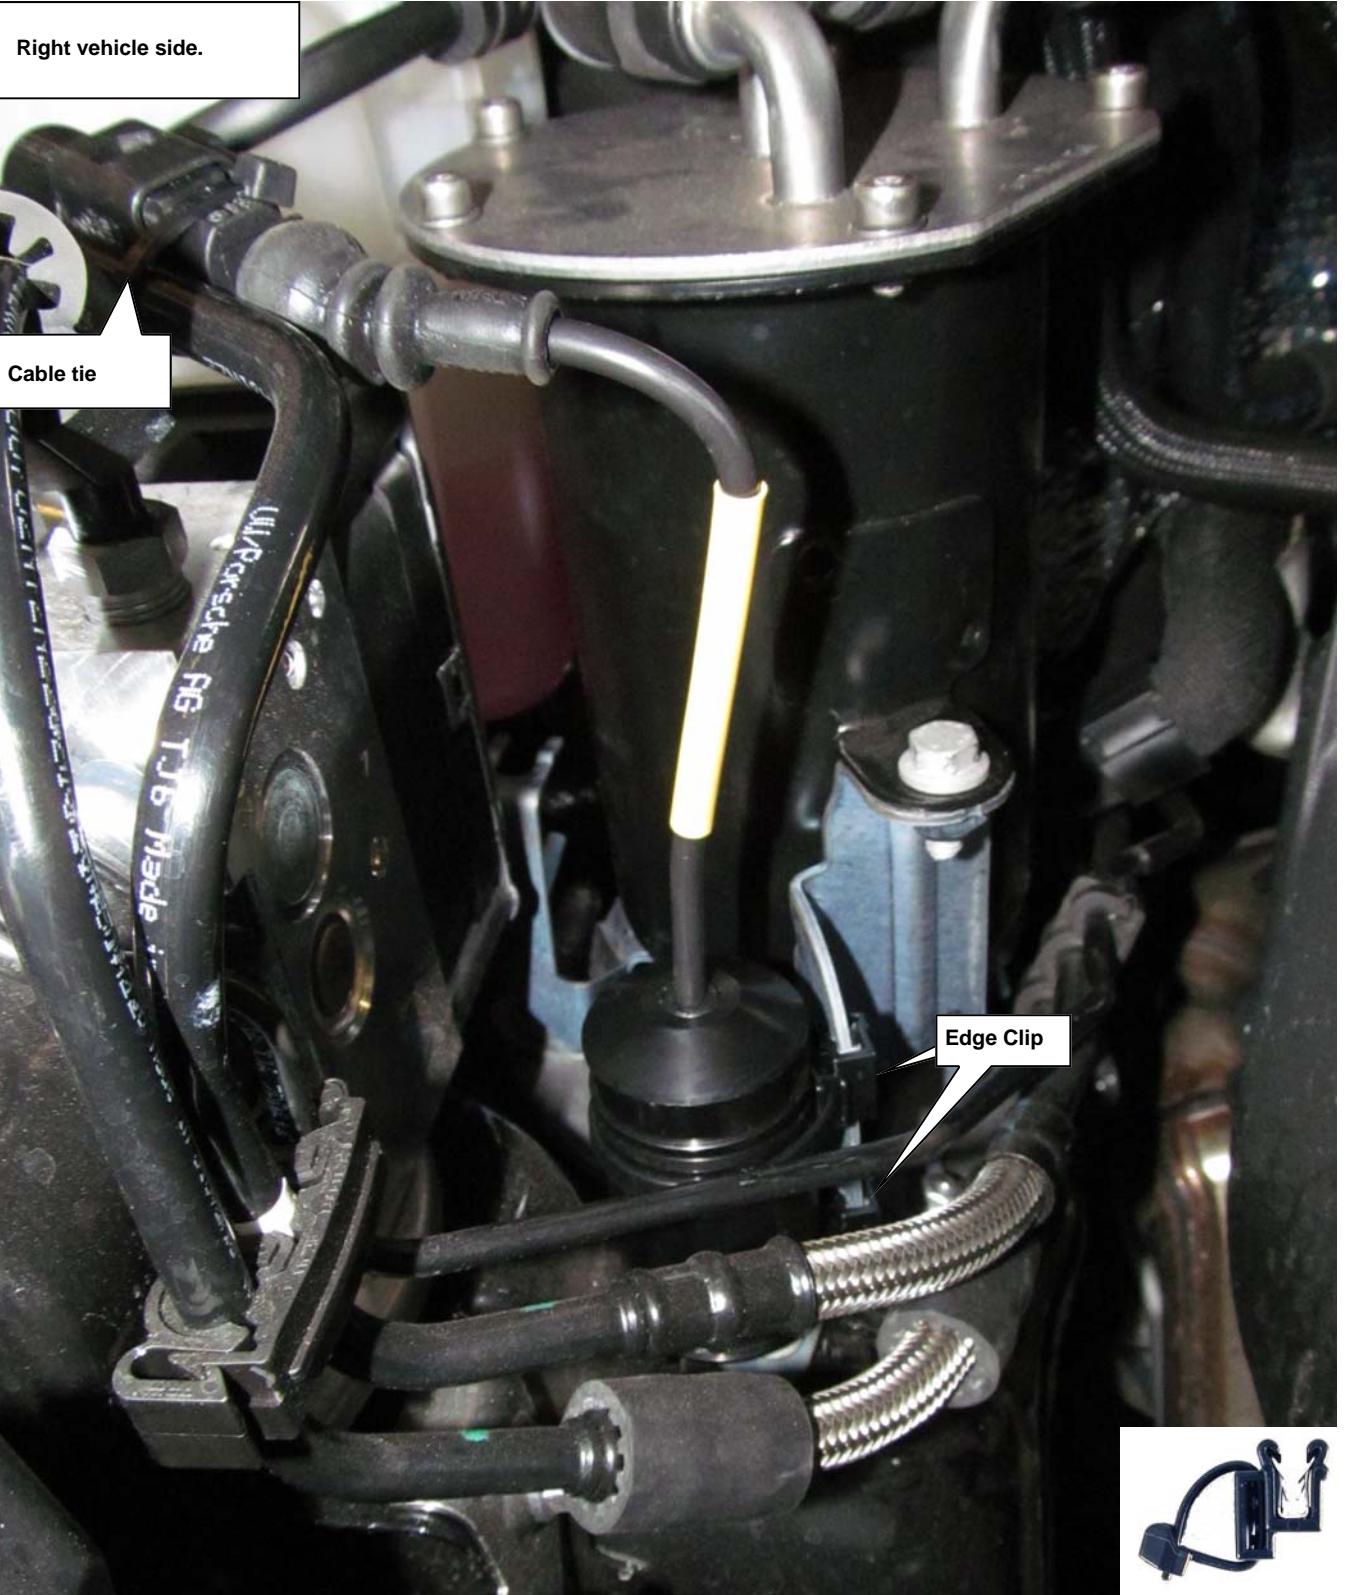

Instruction No.

685 10 365

Front axle:

Porsche Cayenne

Install the cacellation kit with the supplied cable ties on the vehicle frame. The assembly position is beside the battery pole. Connect the cable from the cacellation kit into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

Left vehicle side.

Instruction No.

685 10 365

Front axle:

Porsche Cayenne

Left vehicle side.



Instruction No.

685 10 365

Rear axle:

Porsche Cayenne

Fix the cacellation kit on the rear axle as shown on the picture. Therefore the original cable need to be returned.

Left vehicle side.




Instruction No.

685 10 365

Rear axle:

Porsche Cayenne

Install the cacellation kit with the supplied cable ties on the vehicle frame. Fix the Connector with cable ties. Connect the cable from the cacellation kit into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

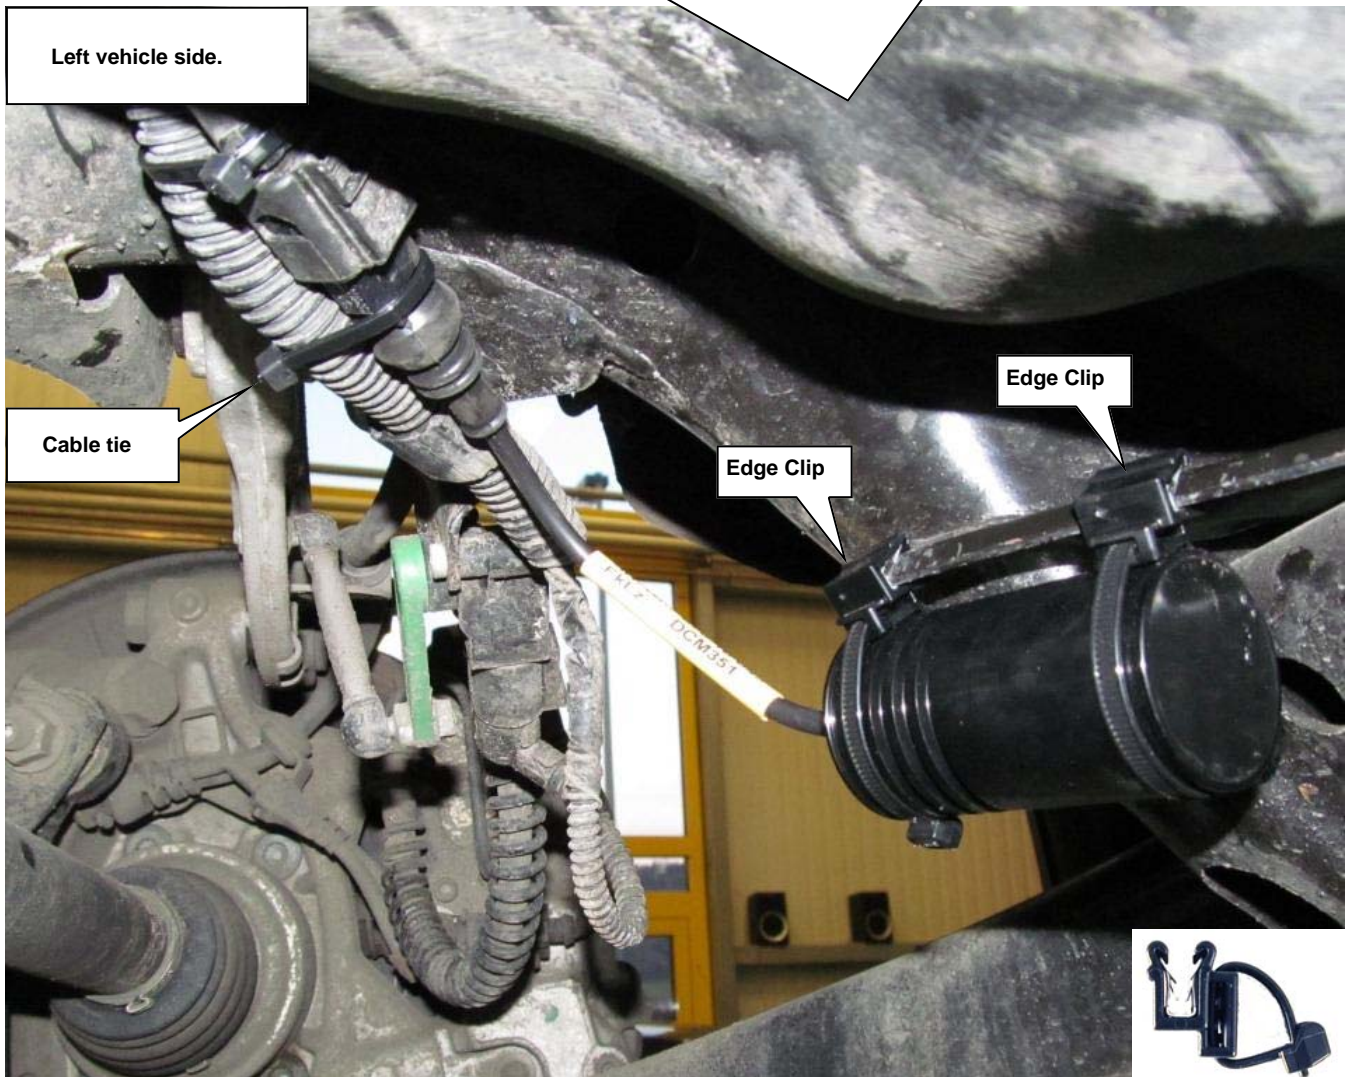Left vehicle side.


Instruction No.

685 10 365

Rear axle:

Porsche Cayenne

Fix the cacellation kit on the rear axle as shown on the picture. Therefore the original cable need to be returned.

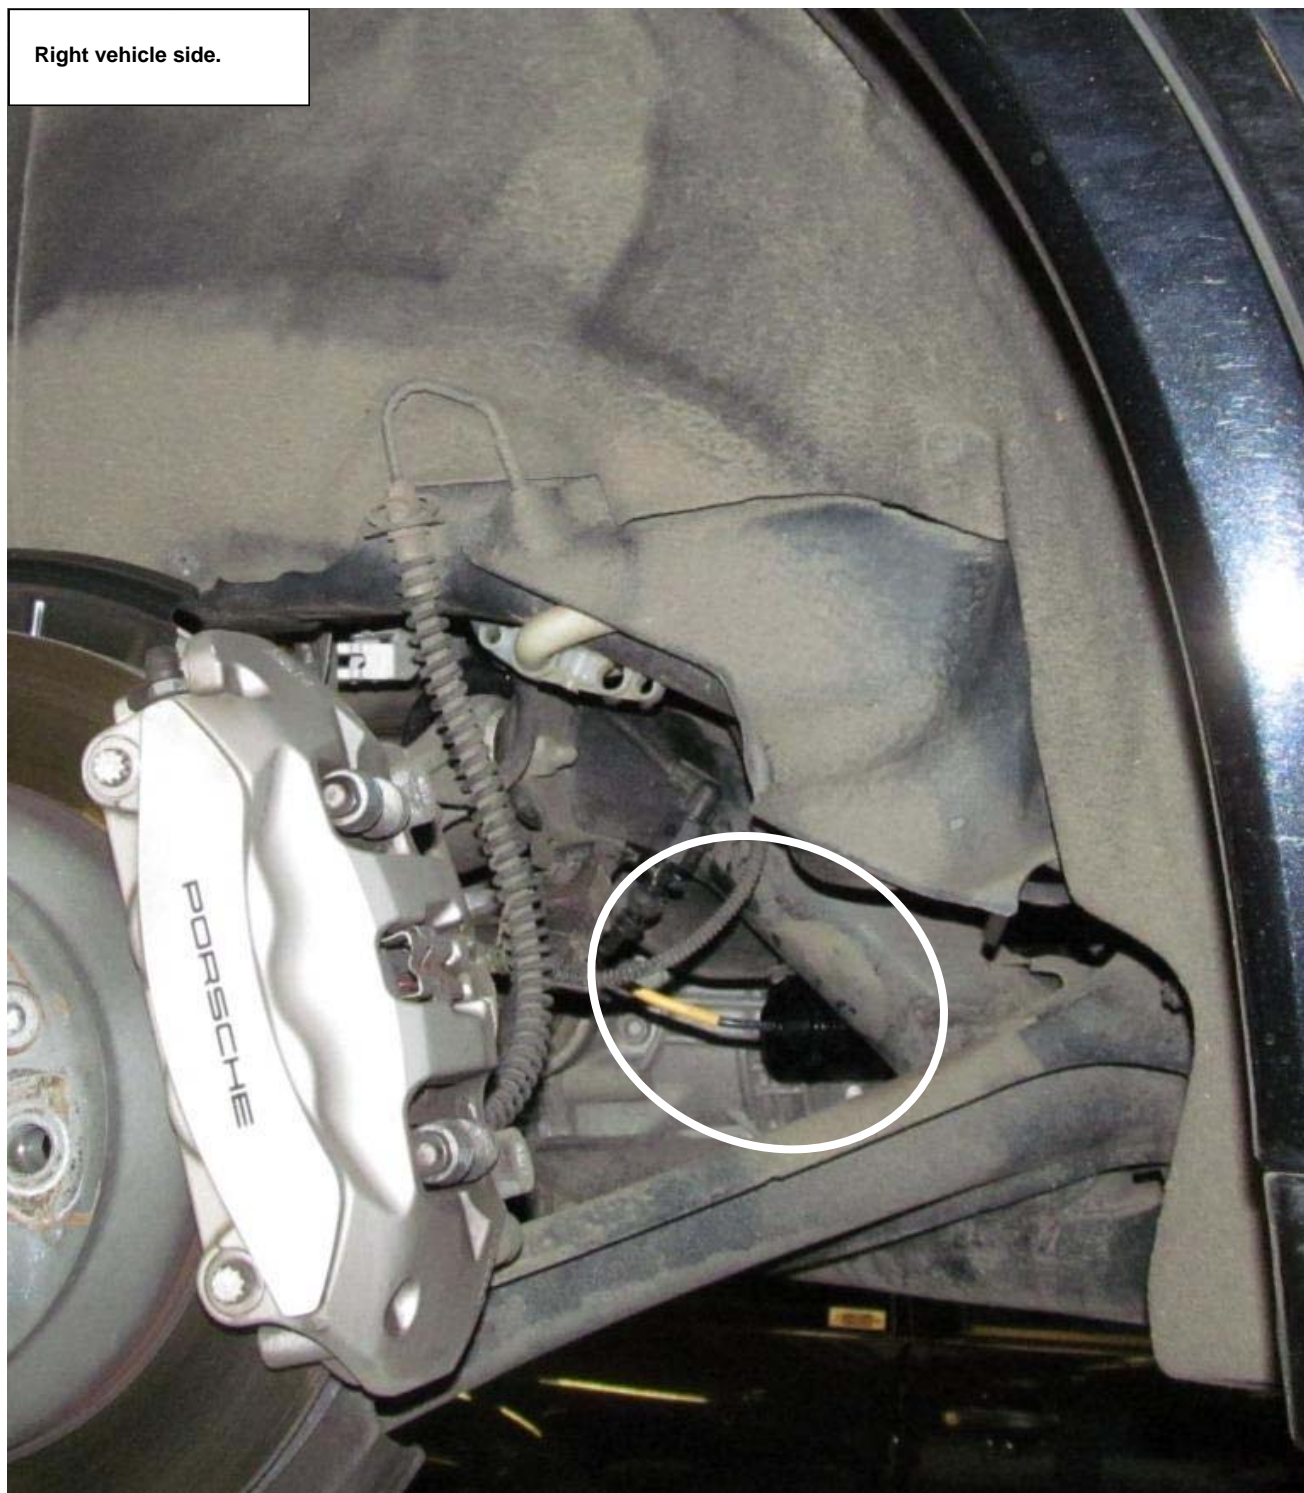Right vehicle side.

Instruction No.


685 10 365

Rear axle:

Porsche Cayenne

Install the cacellation kit with the supplied cable ties on the vehicle frame. Fix the Connector with a edge clip on the frame. Connect the cable from the cacellation kit into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

Right vehicle side.

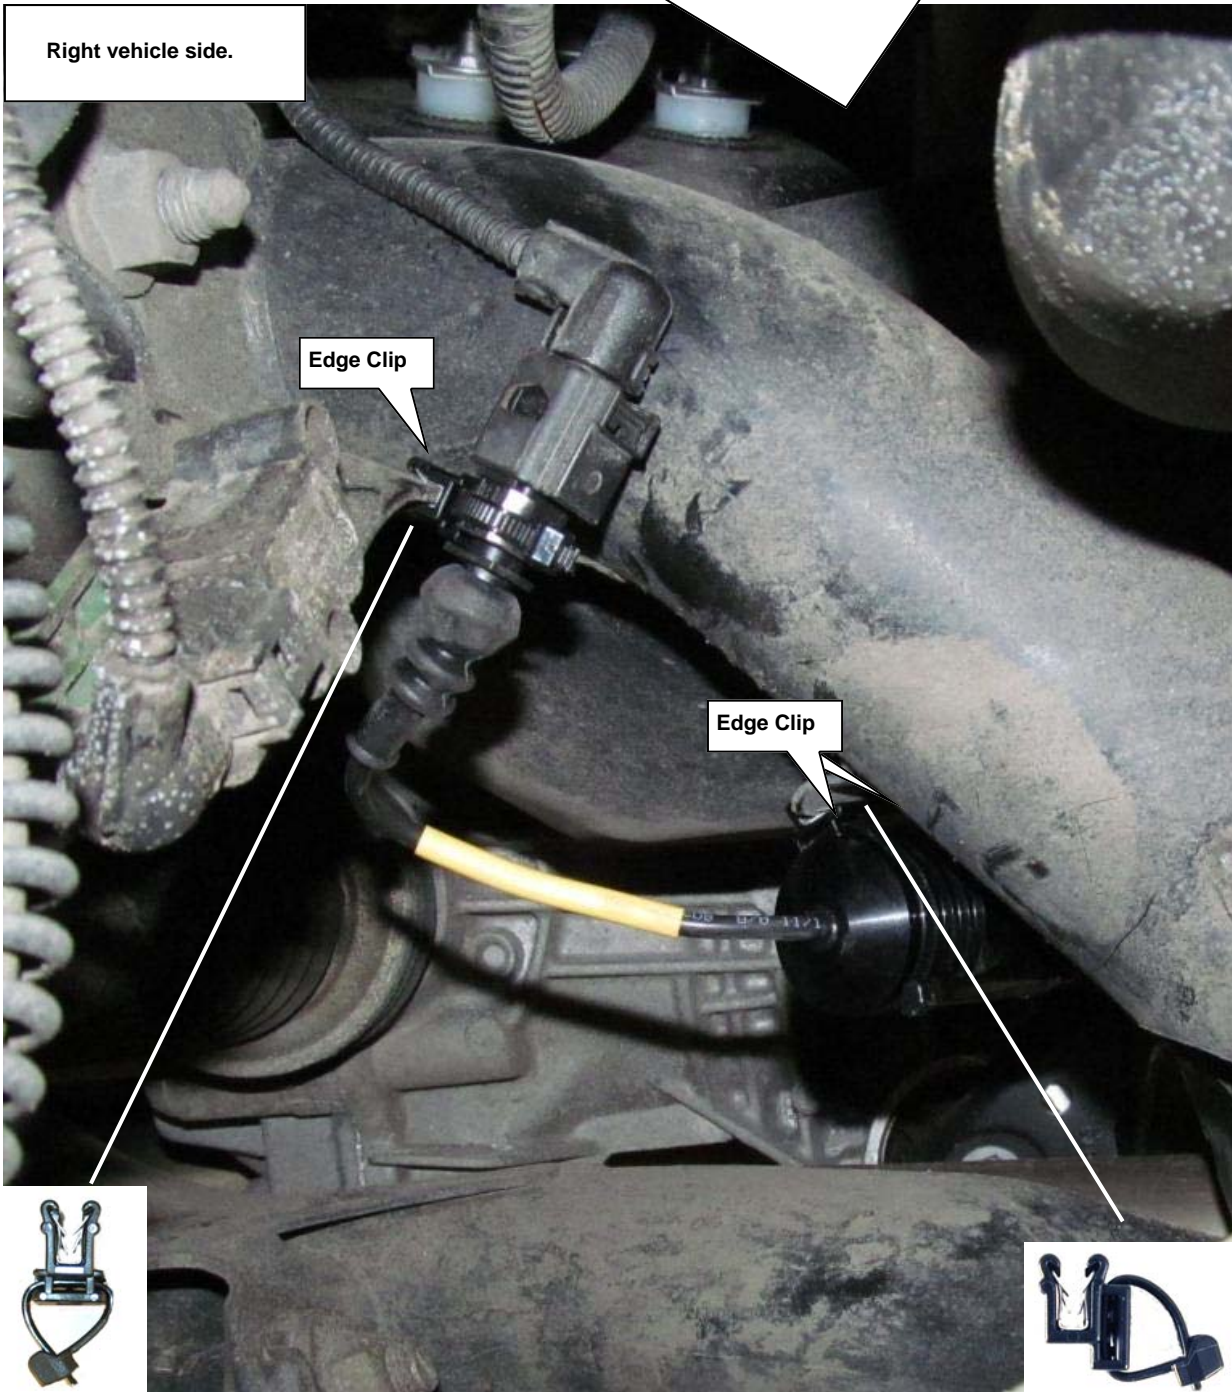

Instruction No.


685 10 365

Front axle:

Porsche Macan

Install the cacellation kit with the supplied cable ties on the vehicle frame. Connect the cable from the cacellation kit into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

Right vehicle side.

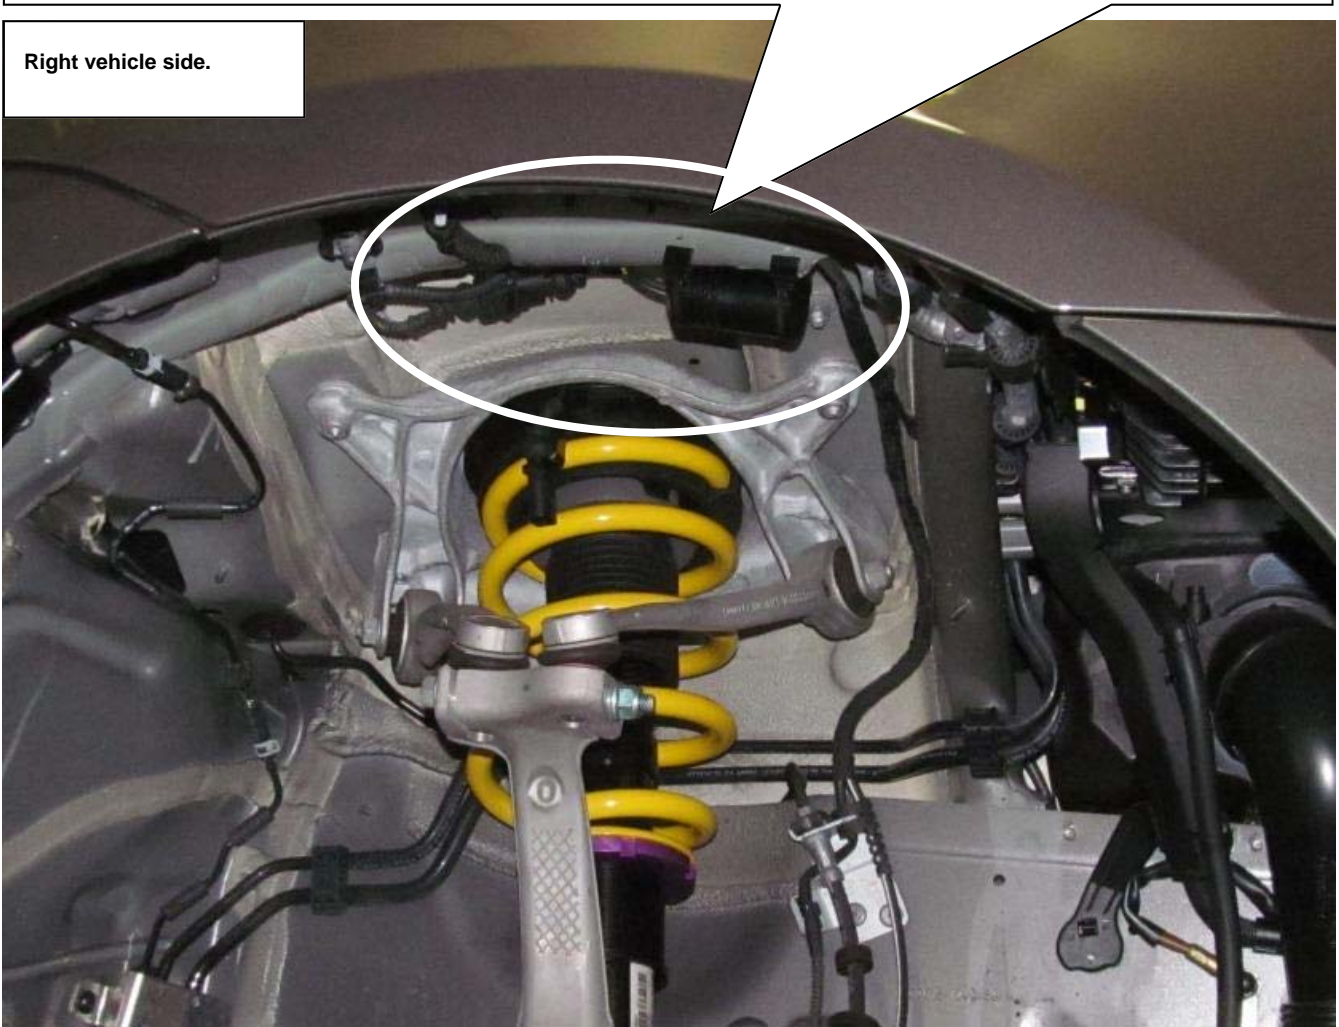

Instruction No.


685 10 365

Front axle:

Porsche Macan

Install the cacellation kit with the supplied cable ties on the vehicle frame. Connect the cable from the cacellation kit into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

Left vehicle side.


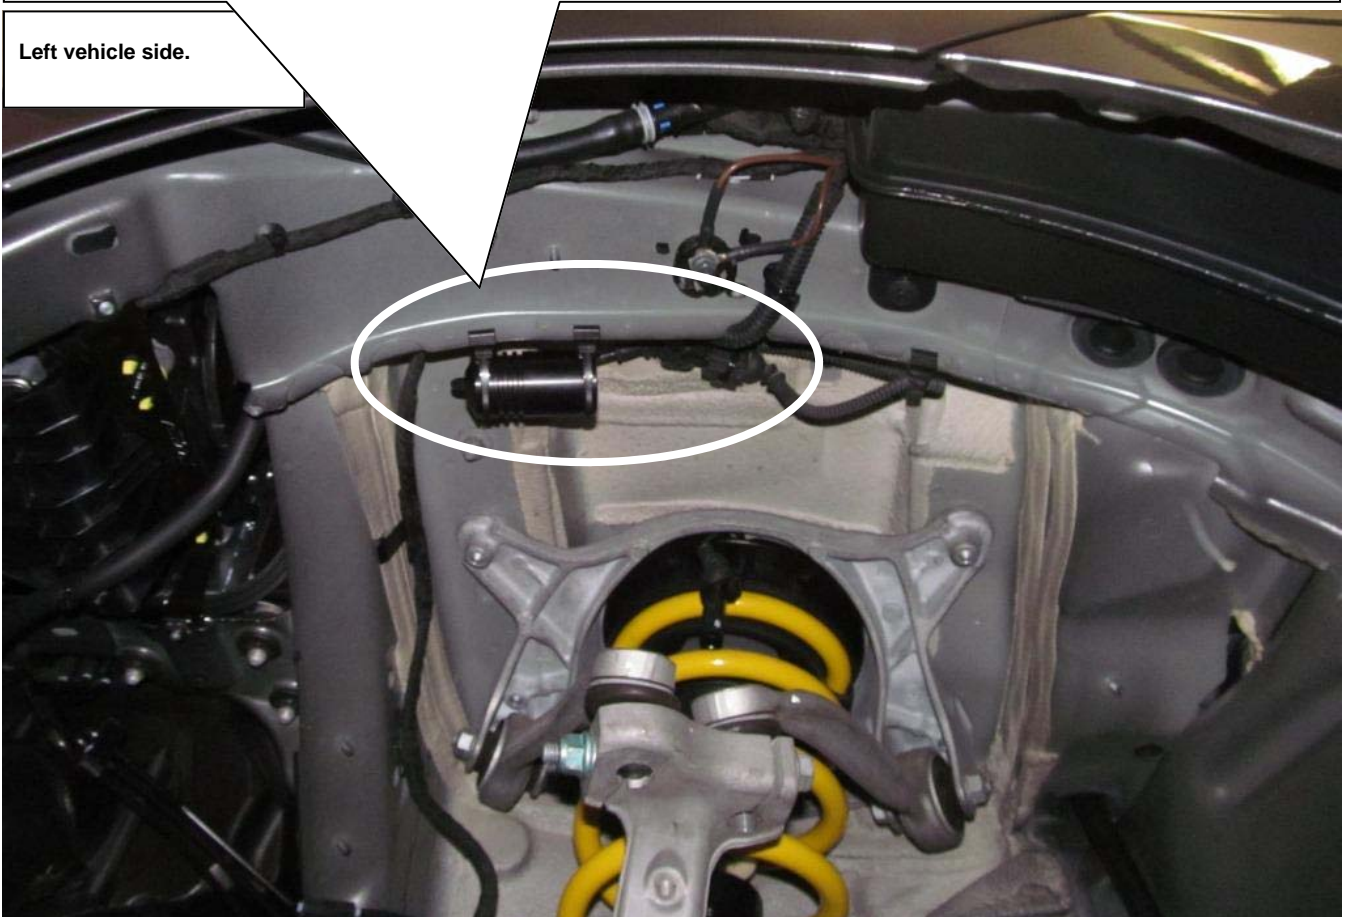


Rear axle:

Porsche Macan

Install the cacellation kit with the supplied cable ties on the vehicle frame. Connect the cable from the cacellation kit into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

Left vehicle side.

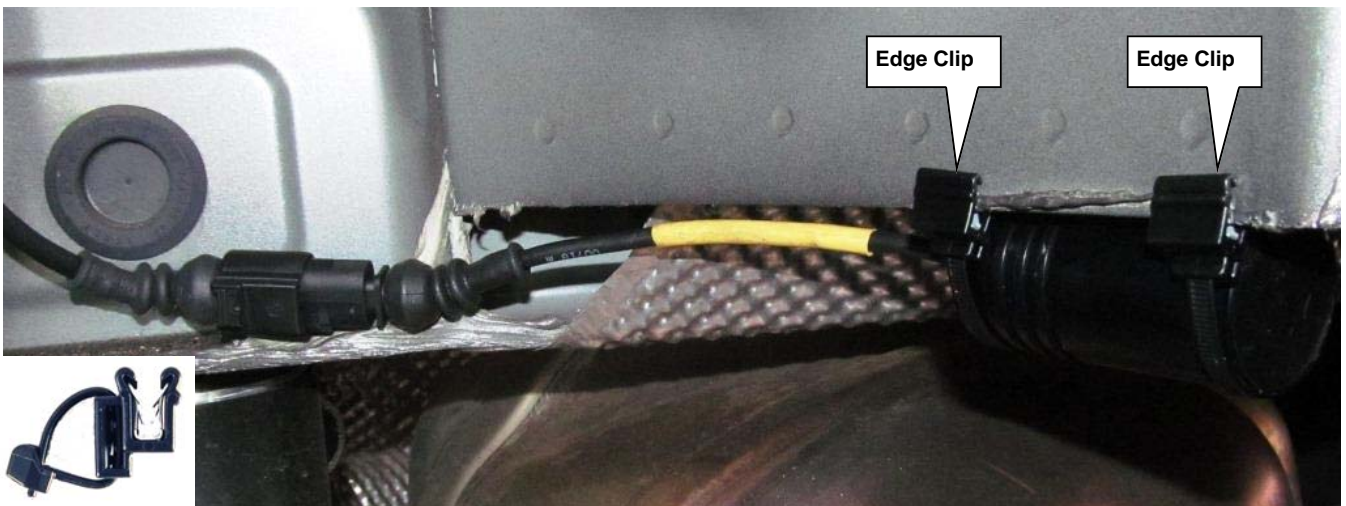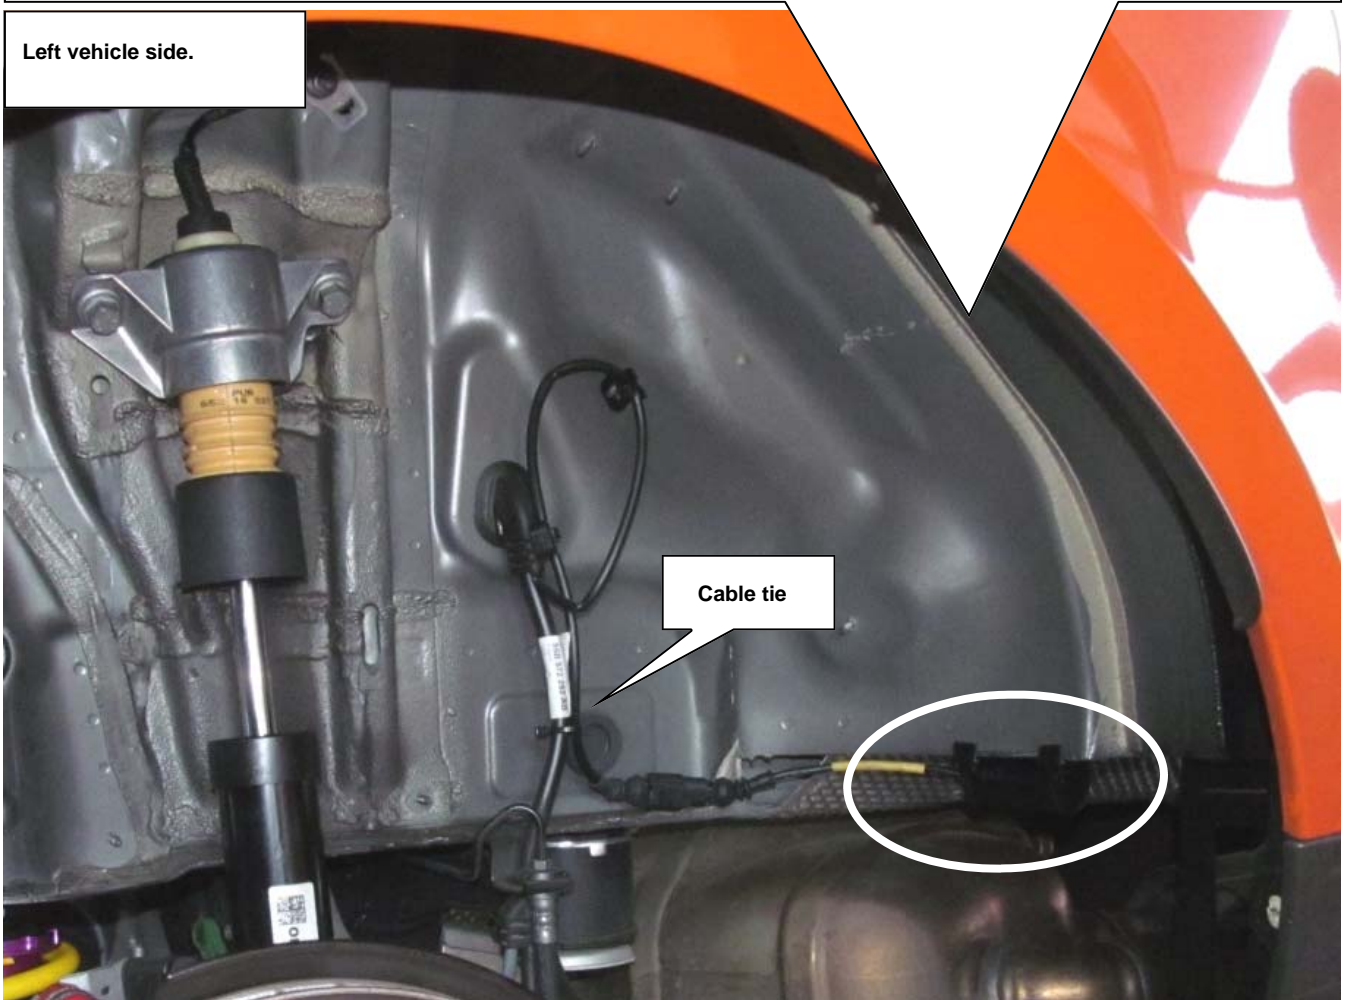

Instruction No.

685 10 365

Rear axle:

Porsche Macan

Install the cacellation kit with the supplied cable ties on the vehicle frame. Connect the cable from the cacellation kit into the standard wire harness of the vehicle. Insert the standard connector into the electronic component connector until it locks.

Left vehicle side.

