




CANCELLATION KIT

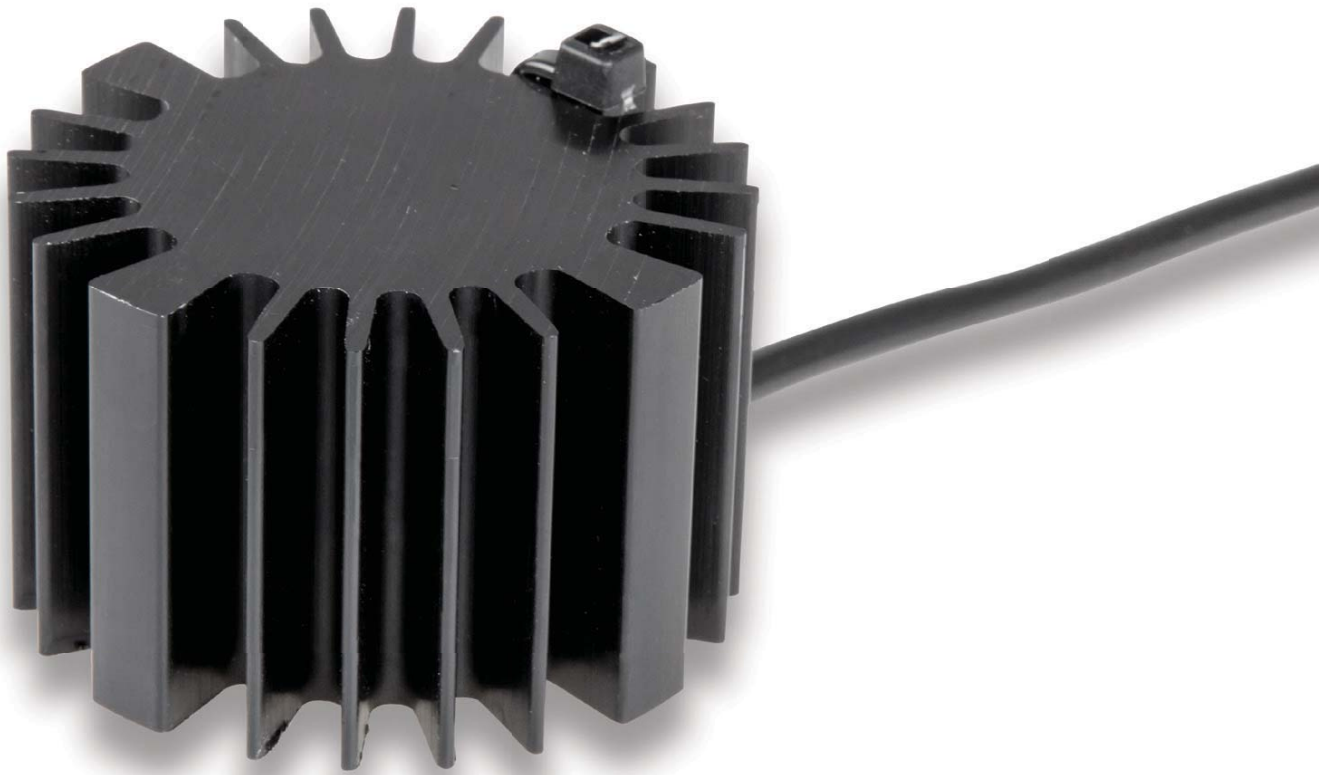

Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 411	

KW automotive

685 10 411

INSTALLATION INSTRUCTIONS

Cancellation kit

Installation Instructions

KW automotive

Instruction No.

685 10 411

Preparation:



Seal the end of the wire with shrinking tube or a tape.



Fix the wire with cable ties on the coilover strut.

Installation Instructions

KW automotive

Instruction No.

685 10 411


Porsche GT3

The control unit is located below parcel shelf.

Dismantle the interior panel. Disconnect the marked connector and fix it with cable ties on the wire harness.



Insert the supplied plug into the control unit and lock..

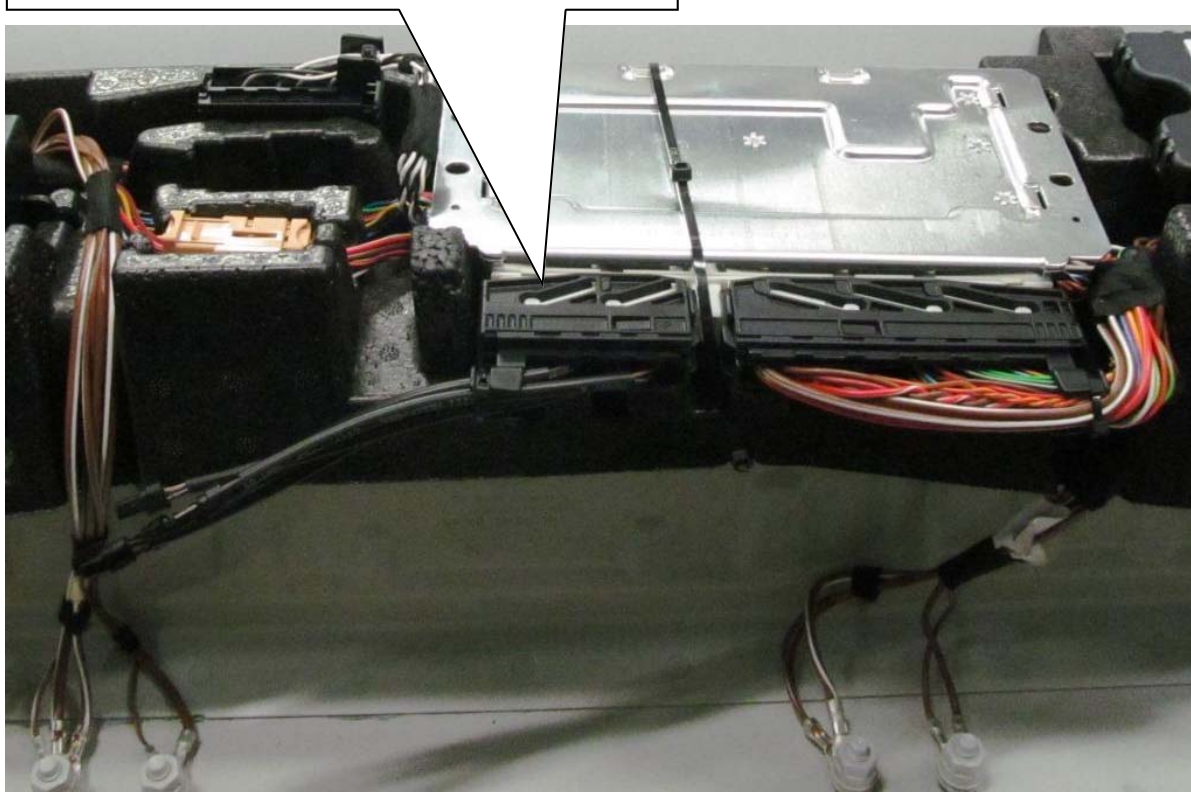

Installation Instructions


KW automotive

Instruction No.


685 10 411

Porsche GT3

Fix the one adhesive tape on the electronic component.
IMPORTANT: Surface must be cleaned and degreased.

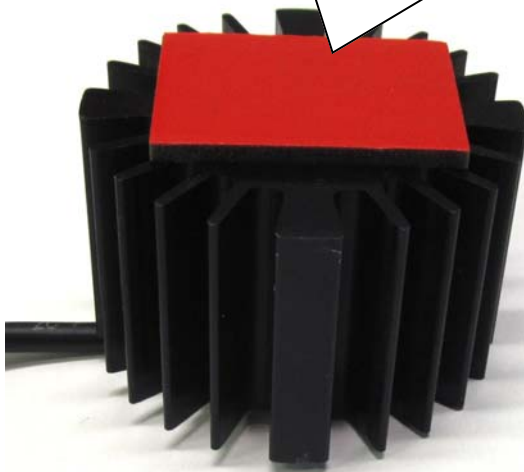

Connect the wire into the supplied electronic component. Check the correct locking the plug! Bond the electronic component on the surface.
IMPORTANT: Surface must be cleaned and degreased.

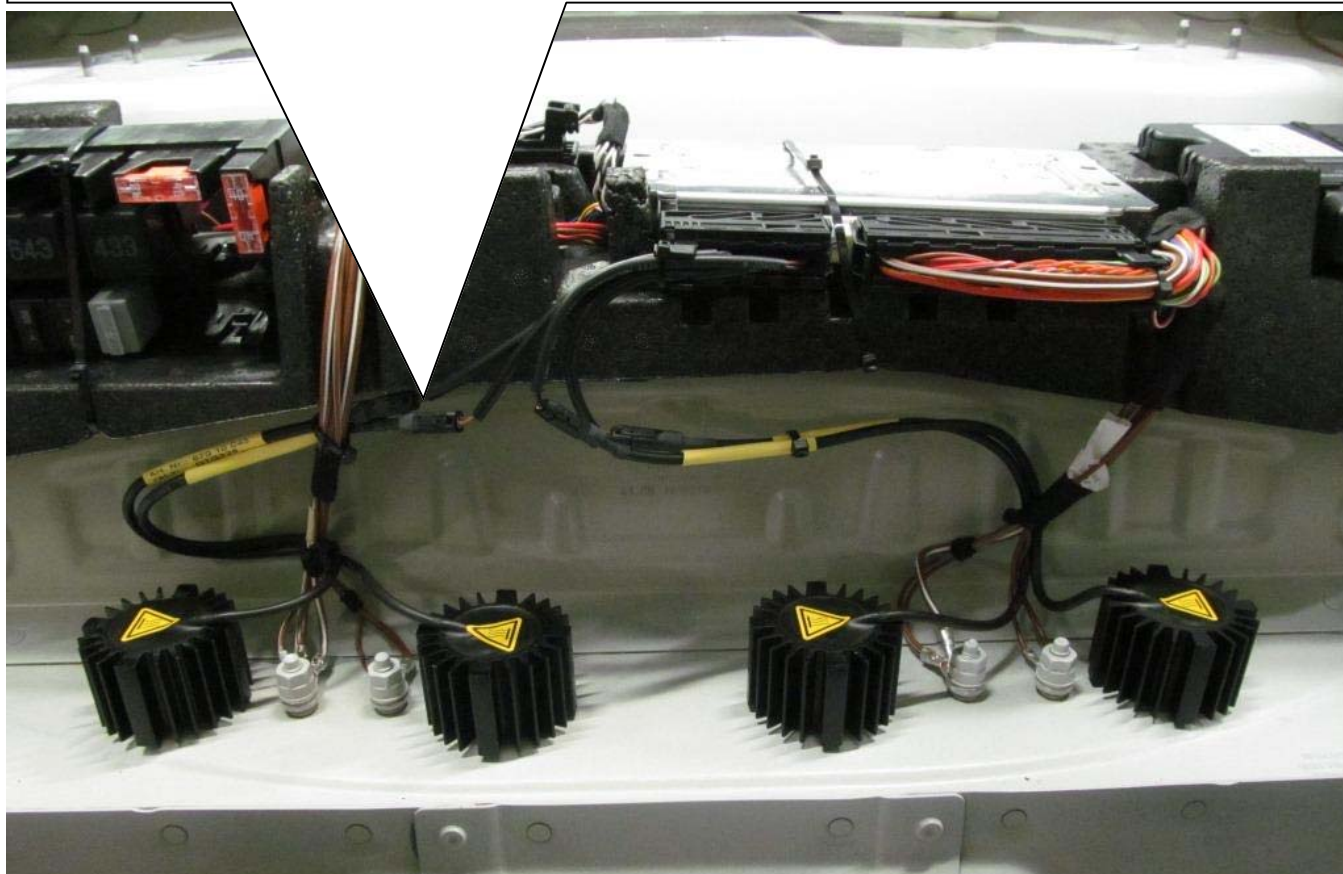

Installation Instructions

KW automotive

Instruction No.

685 10 411


Porsche GT4

The control unit is in the trunk on the right side of the vehicle

Dismantle the interior panel. Disconnect the marked connector and fix it with cable ties on the wire harness.



Insert the supplied plug into the control unit and lock.

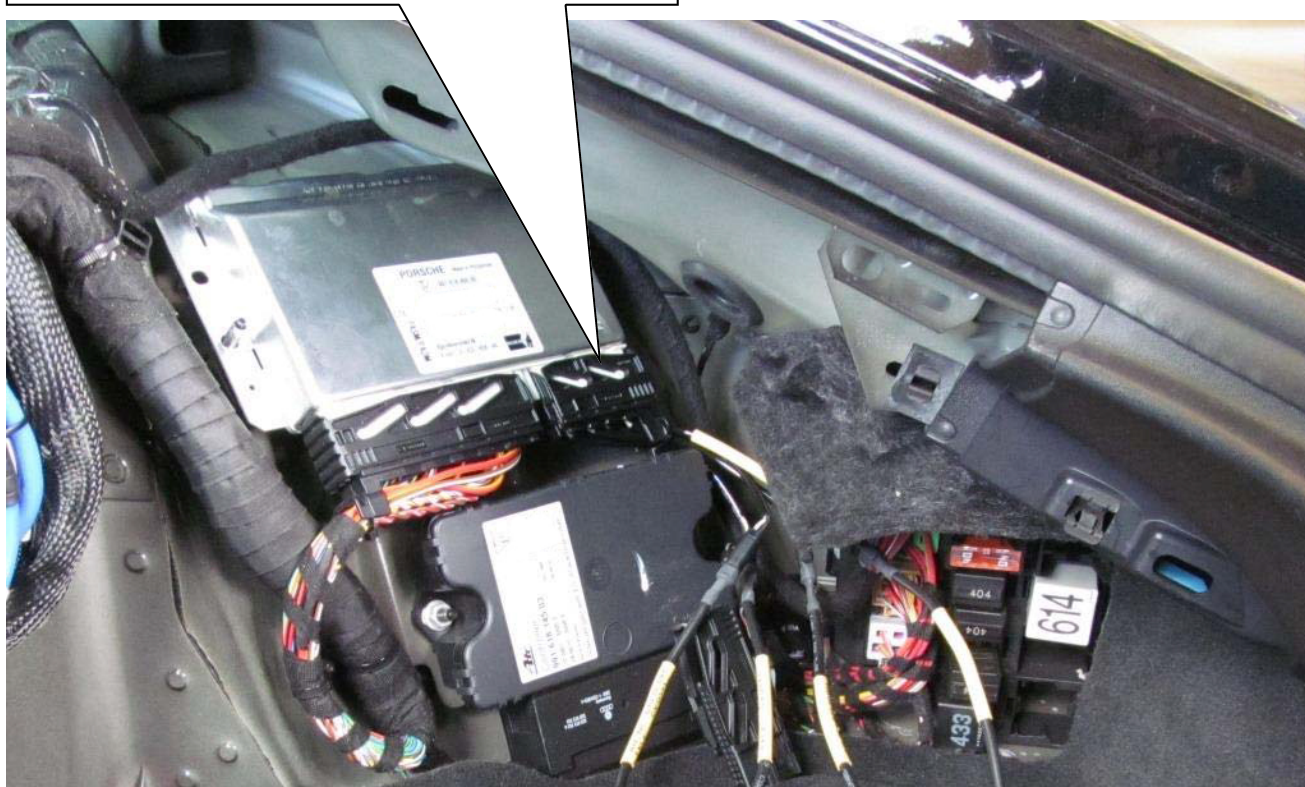

Installation Instructions


KW automotive

Instruction No.

685 10 411

Porsche GT4

Fix the one adhesive tape on the electronic component.
IMPORTANT: Surface must be cleaned and degreased.

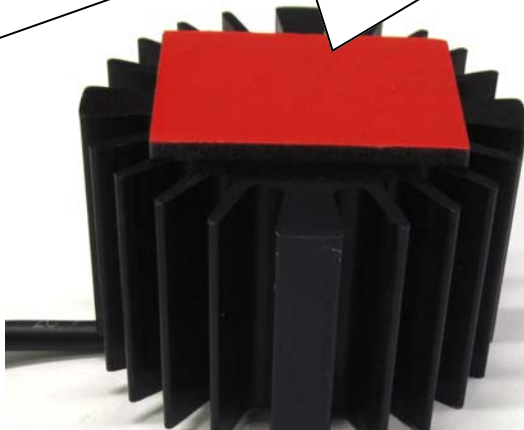

Connect the wire into the supplied electronic component. Check the correct locking the plug! Bond the electronic component on the surface.
IMPORTANT: Surface must be cleaned and degreased.

