



INSTALLATION INSTRUCTIONS



Installation Instructions		<i>KW automotive</i>	
Instruction No.	685 10 168		

KW automotive

685 10 168


INSTALLATION INSTRUCTIONS

Cancellation kit

Installation Instructions		KW automotive	
Instruction No.	685 10 168		

Front axle:

Install the cancellation kits with the supplied M4 screws on the holder plate.

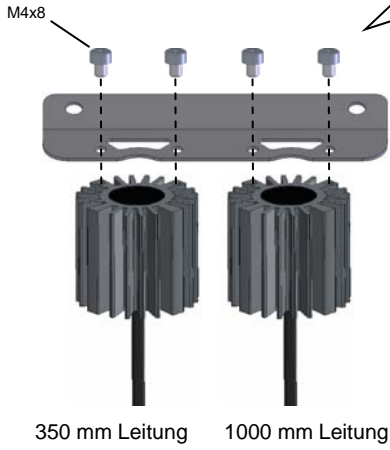

Install the cancellation kit and the holder with the supplied screws and a stopp nut in the vehicle. The assembly position is beside the battery.
ATTENTION: The cancellation kit gets very hot! All attached lines within a distance of 2 cm / 0,8 inch have to be removed further away from the kit.




Installation Instructions	<i>KW automotive</i>
----------------------------------	-----------------------------

Instruction No.	685 10 168	
-----------------	------------	--


Vorderachse Front axle:	Front axle with a up side down coiloverstrut
------------------------------------	---

Run the standard wire along the marked points into the battery box.

Left vehicle side

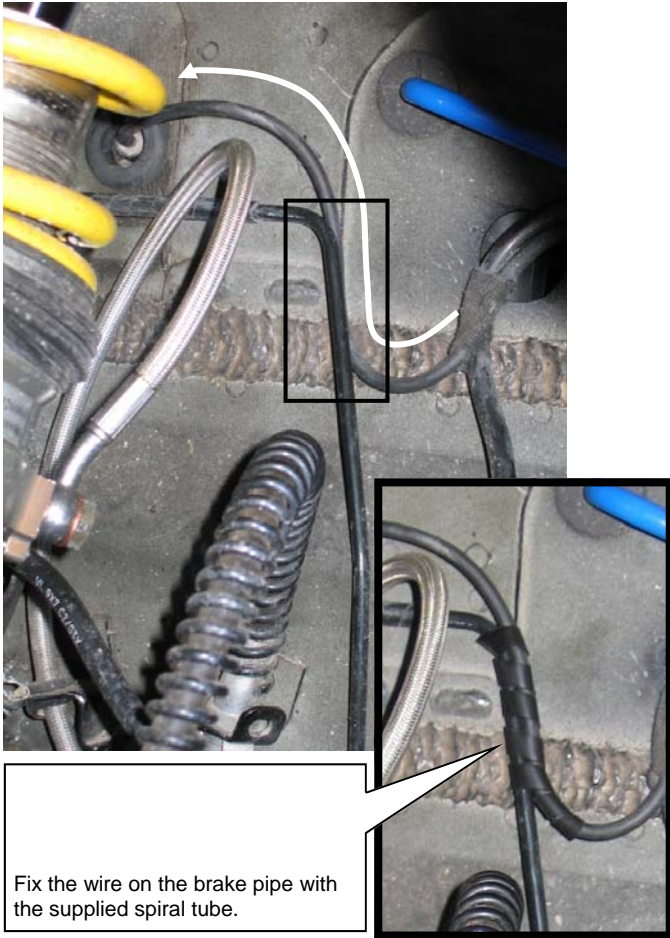


Right vehicle side

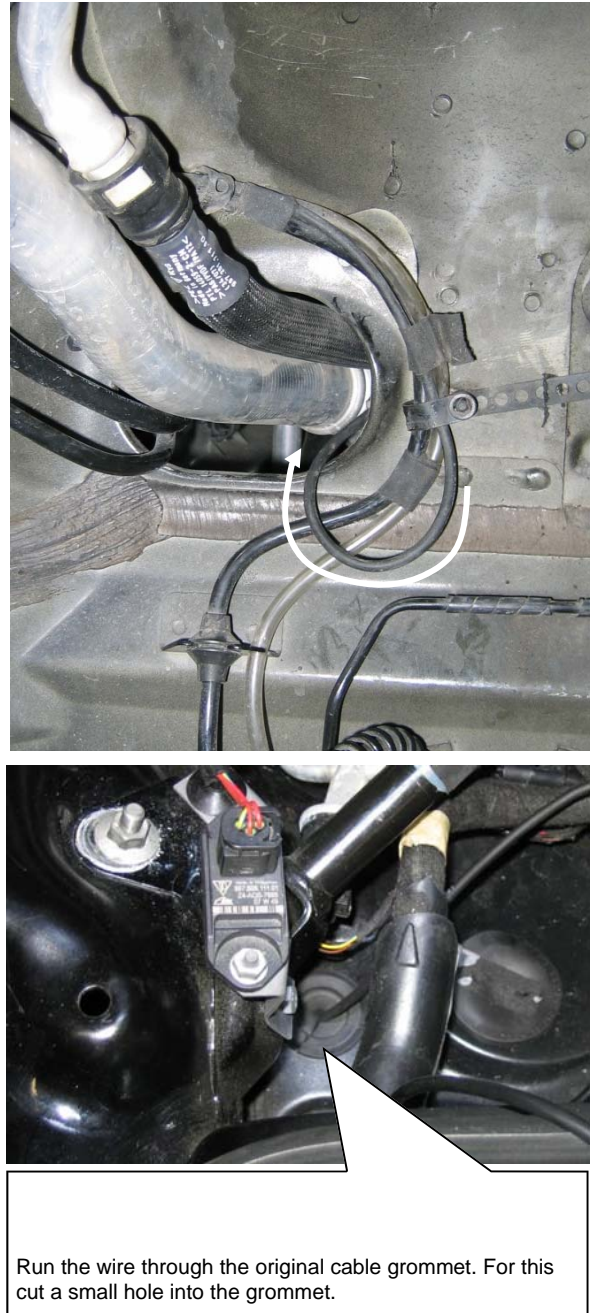

Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 168	

Front axle:

Run the standard damper control wire to the cacellation kit connector. Insert the standard connector into the cacellation kit connector until it locks. Fix the wire with cable ties.

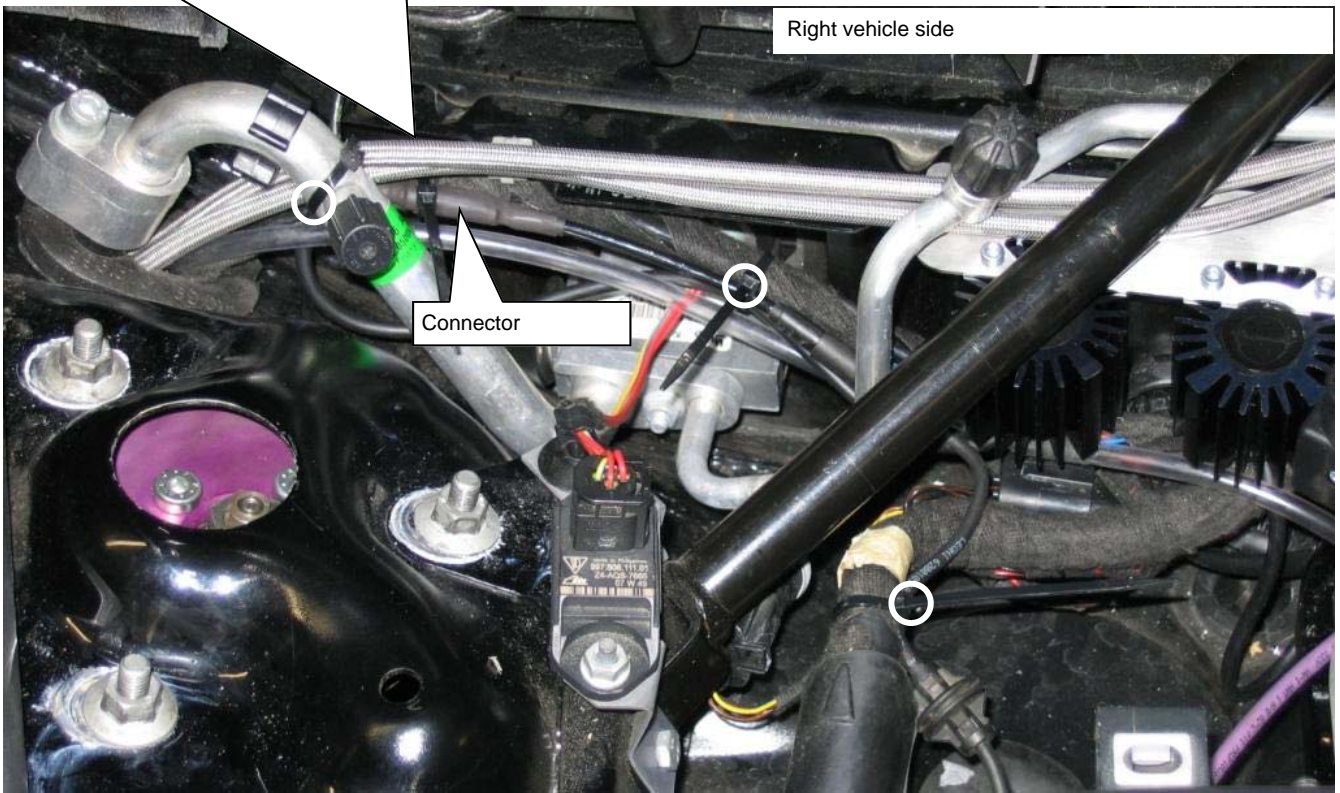


Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 168	

Rear axle:

Dismantle the cover of the control-box. The cover is behind the hatrack. Dismantle the controlbox from the cover.




Drill 4 holes with \varnothing 4,5mm / 0,18 inch into the cover on the marked points.

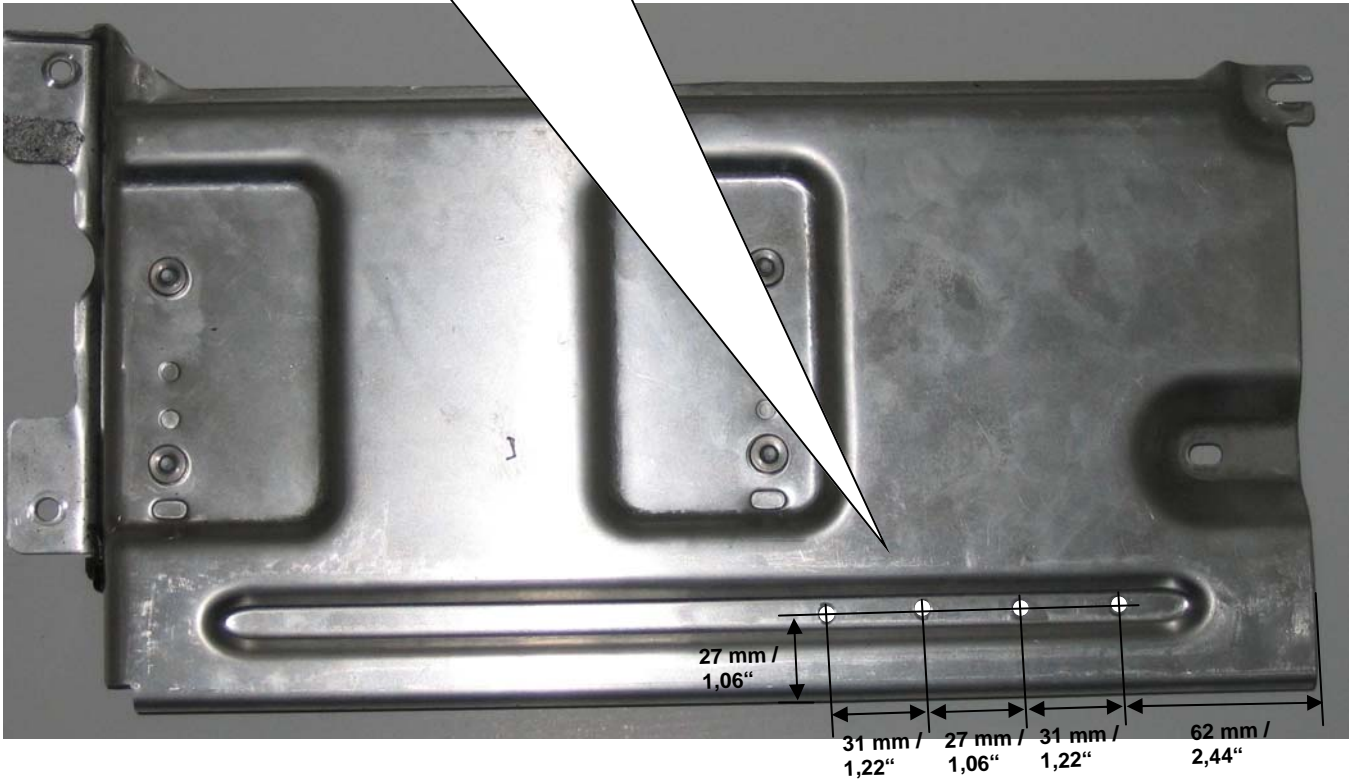

Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 168	

Rear axle:

Fix the cacellation kit with the adapter cable on the bottom side of the cover. Use the supplied screws.

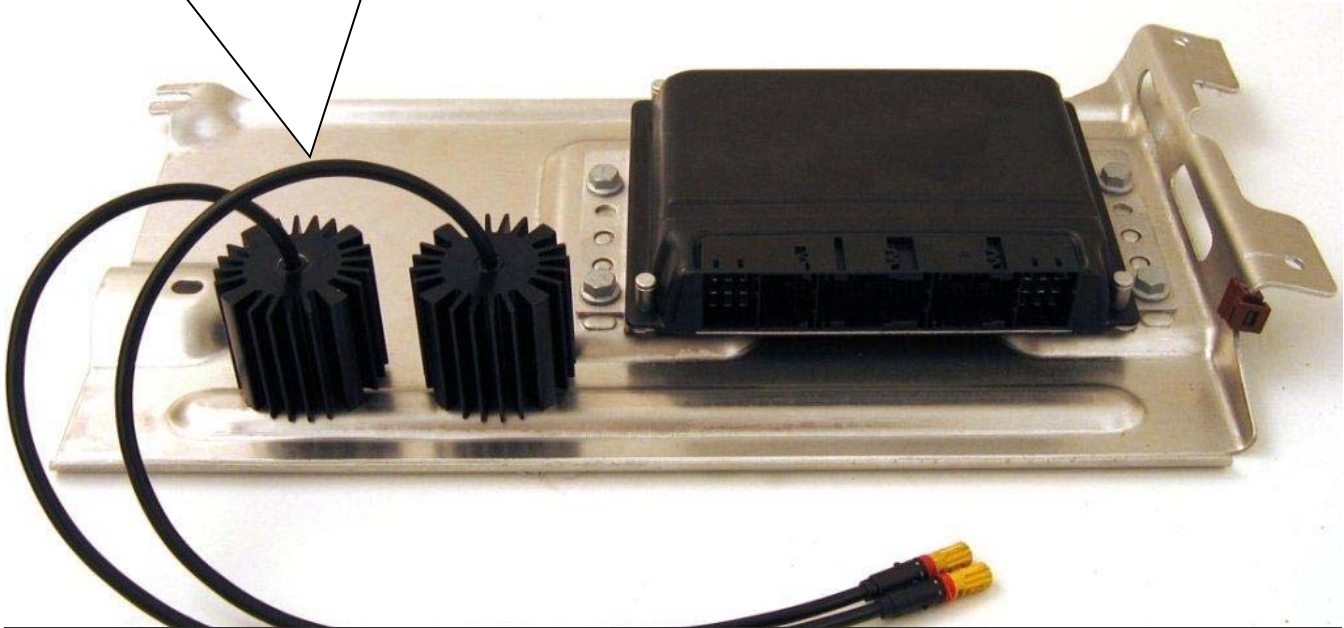

Run the standard damper control wire with adapter to the supplied cacellation kit connector. Insert the standard connector into the supplied cacellation kit until it locks and reassembly the cover.
ATTENTION: The cancellation kit gets very hot! All attached lines within a distance of 2 cm / 0,8 inch have to be removed further away from the kit.

