



INSTALLATION INSTRUCTIONS



Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 165	

KW automotive

685 10 165


INSTALLATION INSTRUCTIONS

Cancellation kit

Installation Instructions		KW automotive	
Instruction No.	685 10 165		

Front axle:

Install the cancellation kits with the supplied M4 screws on the holder plate.

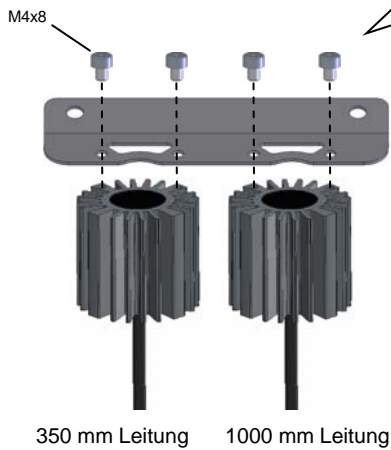

Install the cancellation kit and the holder with the supplied screws and a stopp nut in the vehicle. The assembly position is beside the battery.
ATTENTION: The cancellation kit gets very hot! All attached lines within a distance of 5 cm / 2,0 inch have to be removed further away from the kit.



Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 165	

Front axle:

Run the standard damper control wire to the cacellation kit connector. Insert the standard connector into the cacellation kit connector until it locks. Fix the wire with cable ties.



Installation Instructions

KW automotive

Instruction No.

685 10 165


Rear axle:

The assembly position is under the convertible top.



Install the cacellation kit and the holder with the supplied cable ties in the vehicle.

ATTENTION: The cancellation kit gets very hot! All attached lines within a distance of 5 cm / 2,0 inch have to be removed further away from the kit.

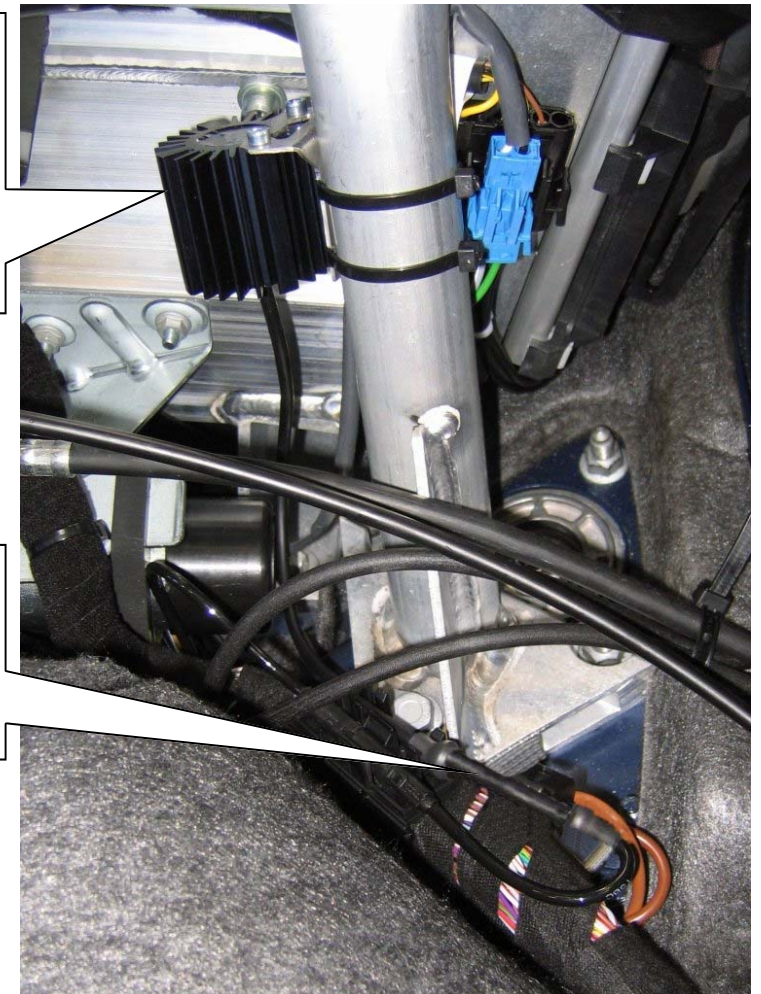

Run the standard damper control wire to the cacellation kit connector. Insert the standard connector into the cacellation kit connector until it locks. Fix the wire with cable ties.