

Installation Instructions		<i>KW automotive</i>	
Instruction No.	685 10 141		

KW automotive

685 10 141

INSTALLATION INSTRUCTIONS

[Cancellation kit](#)



Installation Instructions		KW automotive
----------------------------------	--	----------------------

Instruction No.	685 10 141	
-----------------	------------	--

Front axle:

Right vehicle side.

Fix the holder on the damper with cable ties 4,8mm x 290mm. Mount the holder facing to the front of the vehicle as shown on the picture

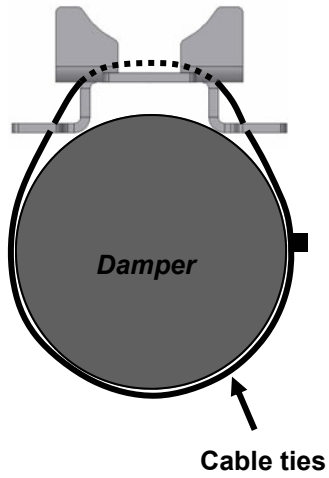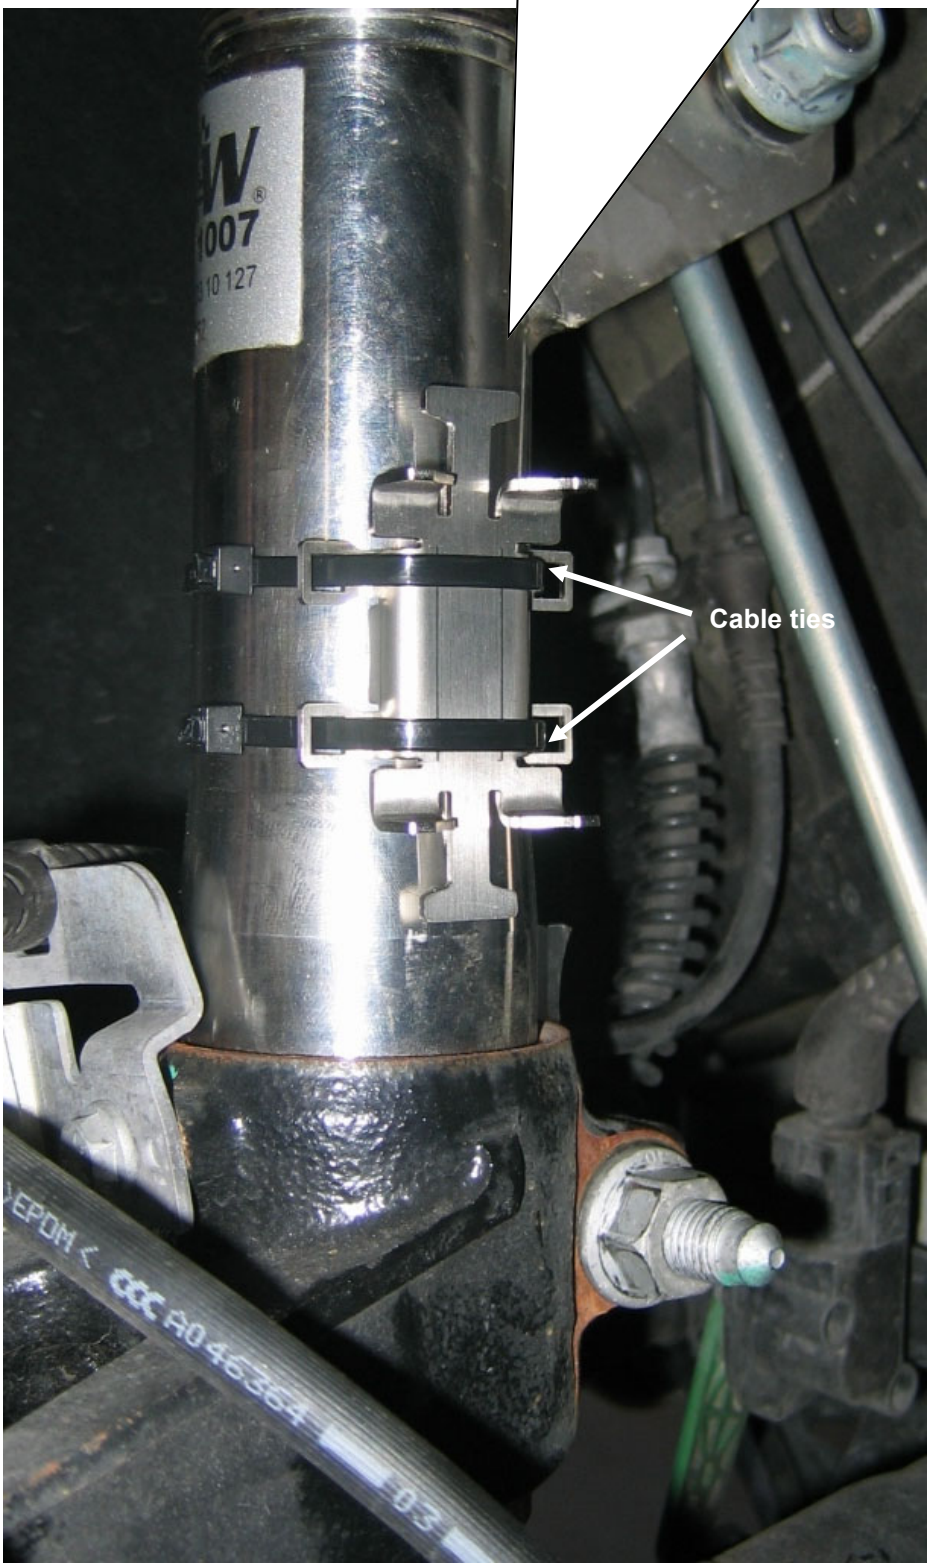


Installation Instructions	KW automotive
----------------------------------	----------------------

Instruction No.	685 10 141	
-----------------	------------	--

Front axle:

Right vehicle side.

Fix the supplied electronic component with cable ties 4,8mm x 290mm.
Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component until it locks.

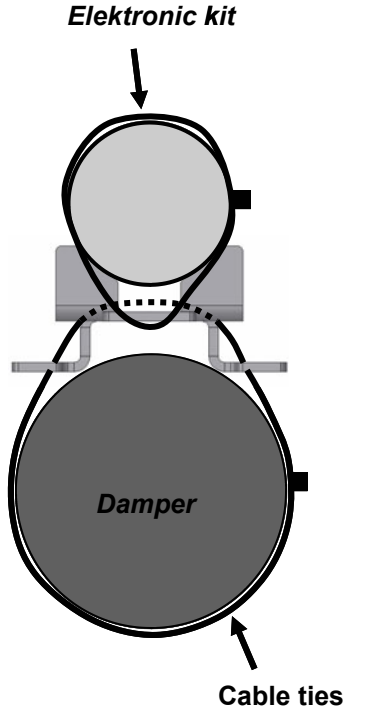

Run the standard damper control wire around the coil over strut and fix it with the small cable ties.

Cable ties

Warning: Make sure that the damper pipe has enough clearance on the complete spring travel.


Installation Instructions		KW automotive
----------------------------------	--	----------------------

Instruction No.	685 10 141	
-----------------	------------	--

Rear axle:

Left vehicle side.

Fix the holder on the damper with cable ties 4,8mm x 290mm. mount the holder slandwise facing outside to the rear of the vehicle as shown on the picture

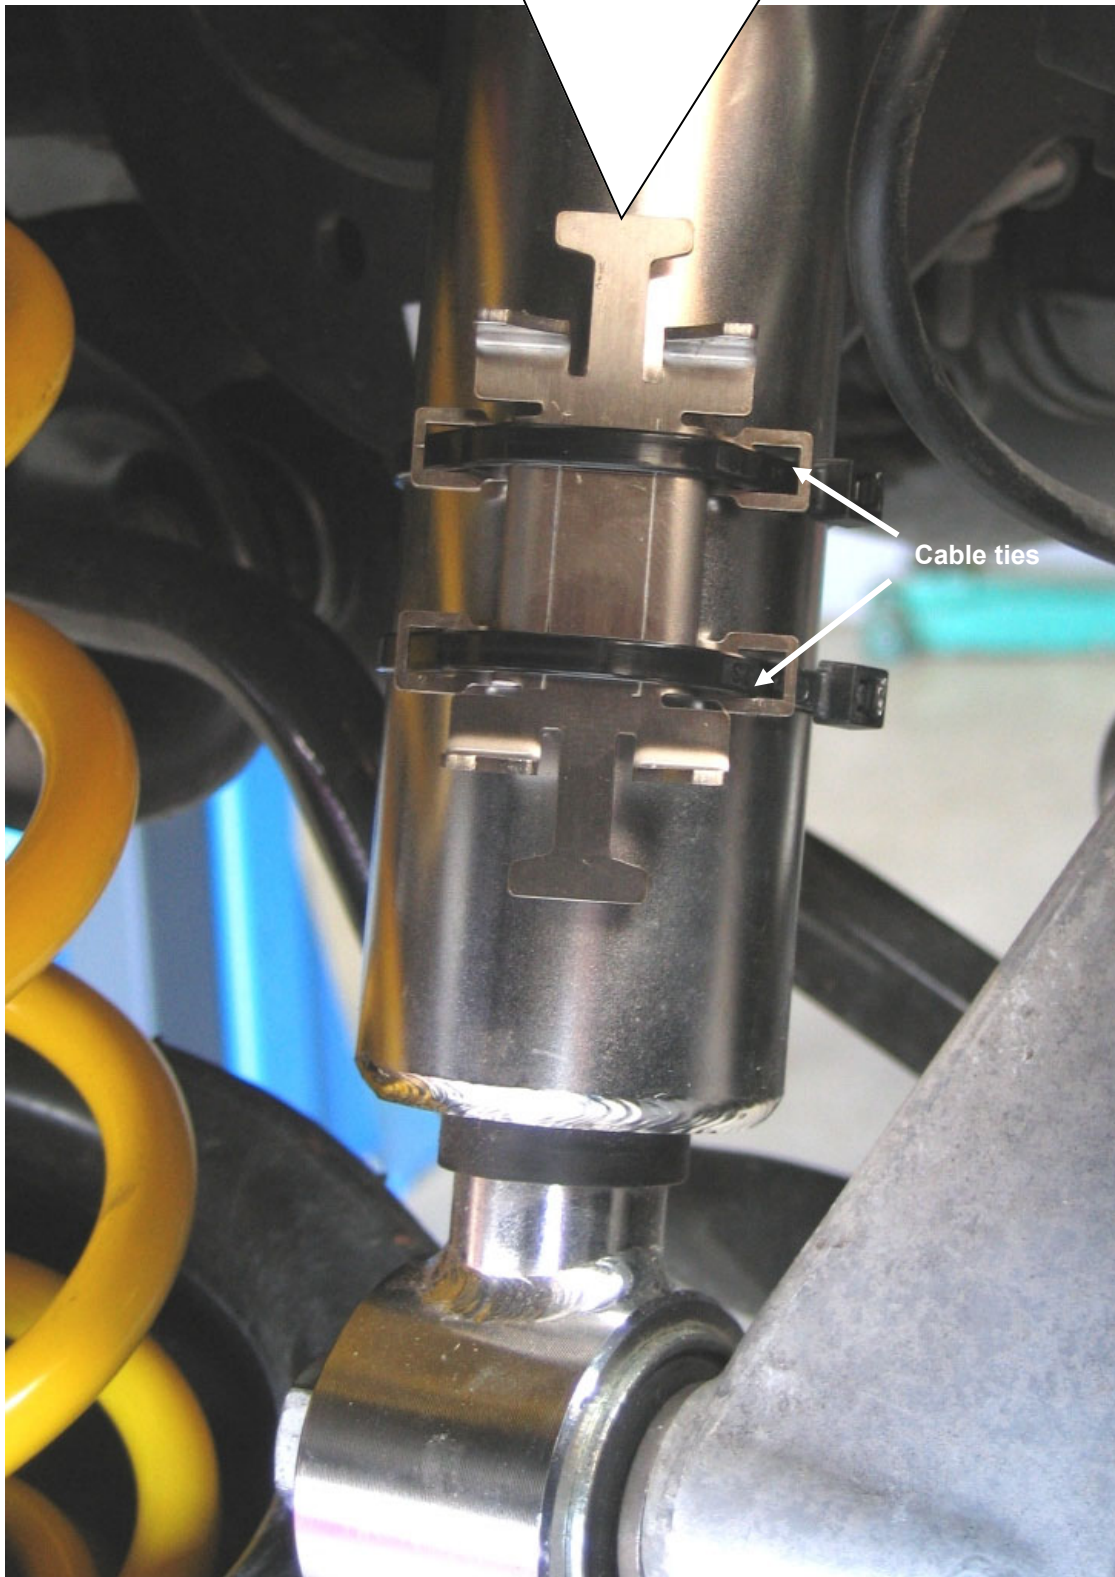

Installation Instructions		KW automotive
Instruction No.	685 10 141	


Rear axle:

Left vehicle side.

Warning: Make sure that the damper pipe has enough clearance on the complete spring travel.



Run the standard damper control and fix it with the small cable ties.

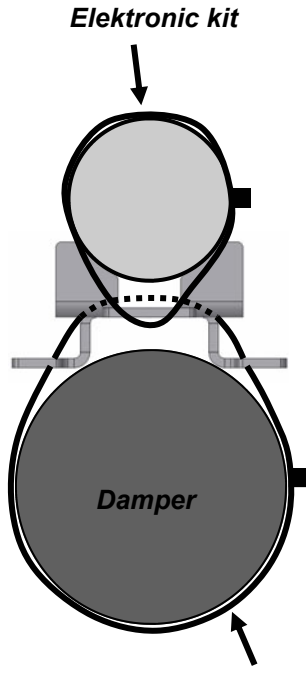

Fix the supplied electronic component with cable ties 4,8mm x 290mm.
Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks.