



INSTALLATION INSTRUCTIONS



Installation Instructions		<i>KW automotive</i>	
Instruction No.	685 10 144		

KW automotive

685 10 144

INSTALLATION INSTRUCTIONS

Cancellation kit

Installation Instructions		<i>KW automotive</i>
----------------------------------	--	-----------------------------

Instruction No.	685 10 144	
-----------------	------------	--

Front axle:

Fix the electronic component on the inside of the wheel house with the supplied edge clips on the chassis edge.



Installation Instructions		KW automotive	
Instruction No.	685 10 144		

Front axle:




Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Pay attention the a correct cable running.

Installation Instructions		KW automotive
----------------------------------	--	----------------------

Instruction No.	685 10 144	
-----------------	------------	--


Rear axle:

Fix the holder on the supplied electronic component with cable ties.

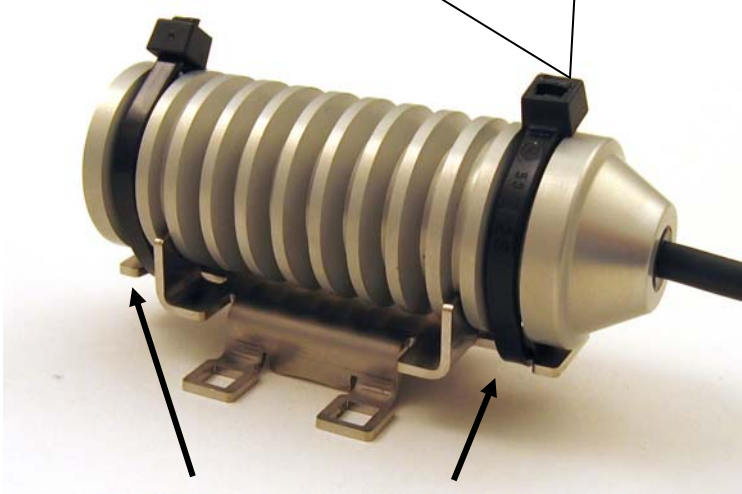


Cable ties

Fix the tape on the installed holder. Adherend must be cleaned and degreased.

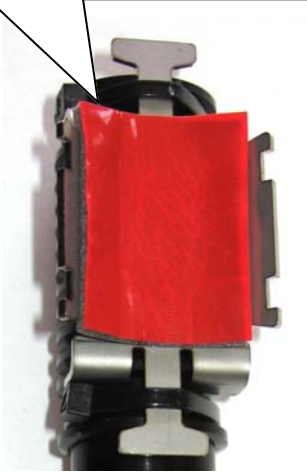

Fix the holder included the electronic kit on the damper with cable ties.

Elektronic kit

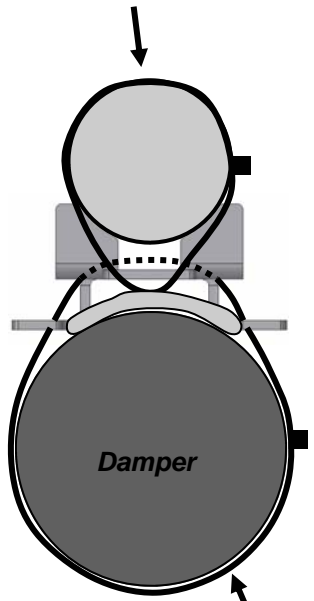

Cable ties

Installation Instructions		<i>KW automotive</i>	
Instruction No.	685 10 144		

Rear axle:



Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Pay attention the a correct cable running.