

INSTALLATION INSTRUCTIONS




KW automotive

Instruction No.

685 10 144

KWautomotive

685 10 144 INSTALLATION INSTRUCTIONS Cancellation kit

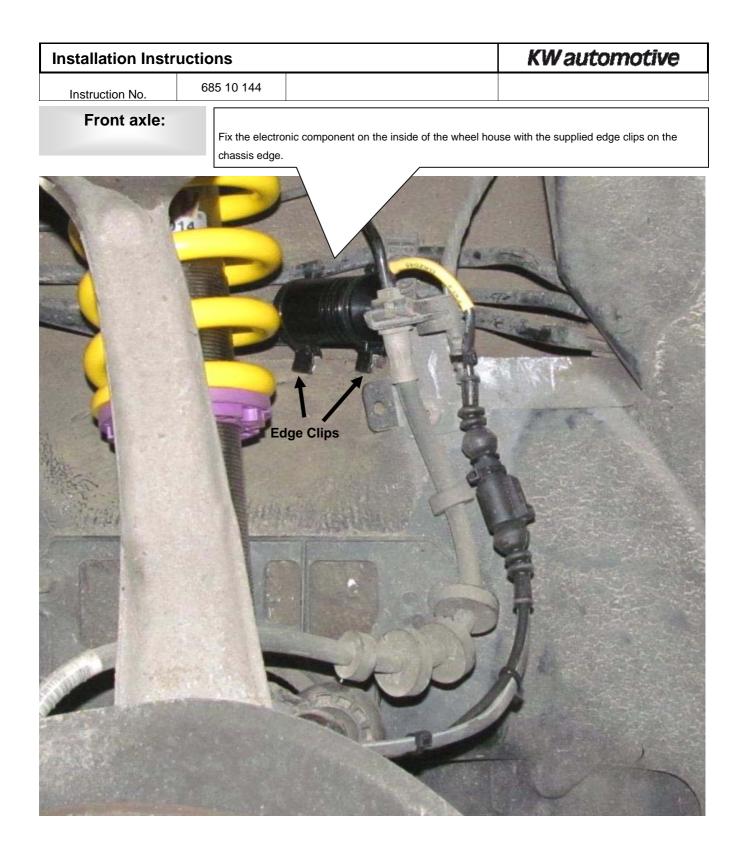


Installation Instructions

Instruction No.


685 10 144

KW automotive

Front axle:

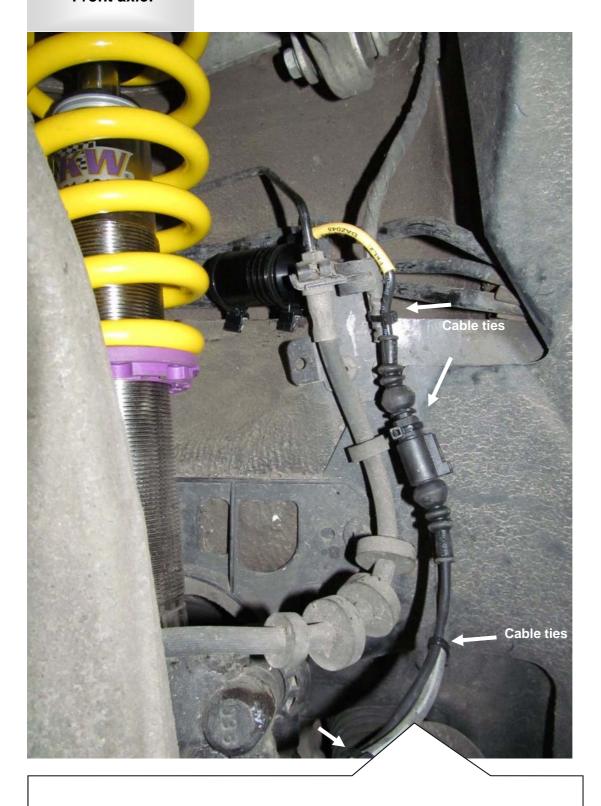

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Pay attension the a correct cable running.

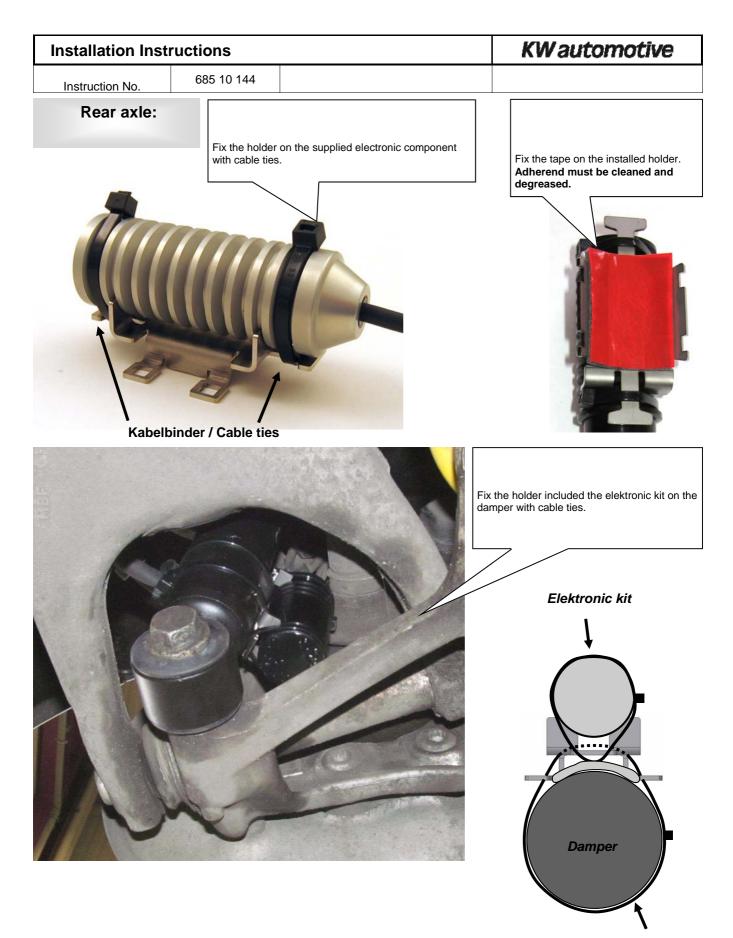

Cable ties


Installation Instructions

Instruction No.

685 10 144

KW automotive

Rear axle:

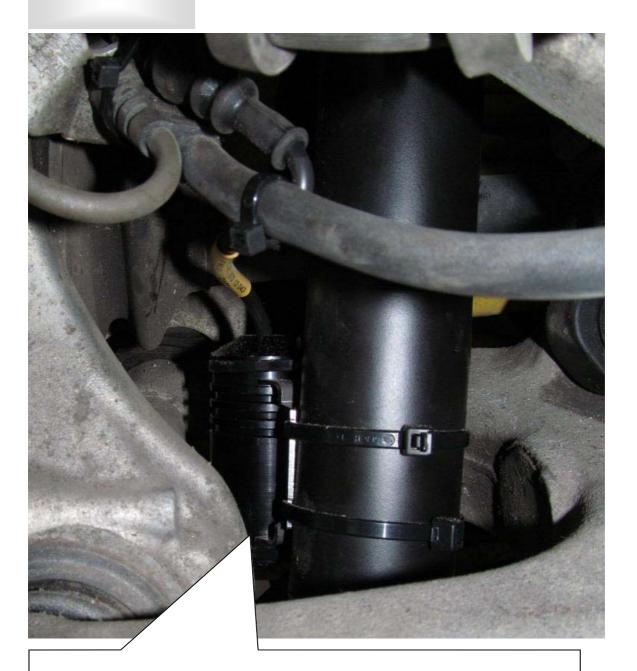

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Pay attension the a correct cable running.