



INSTALLATION INSTRUCTIONS



Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 342	

KW automotive

685 10 342



INSTALLATION INSTRUCTIONS

Cancellation kit

Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 342	


Front axle:

Fix the holder on the electronic component with cable ties 4,8mm x 290mm.

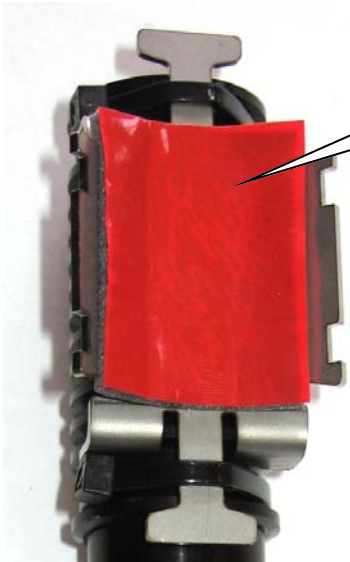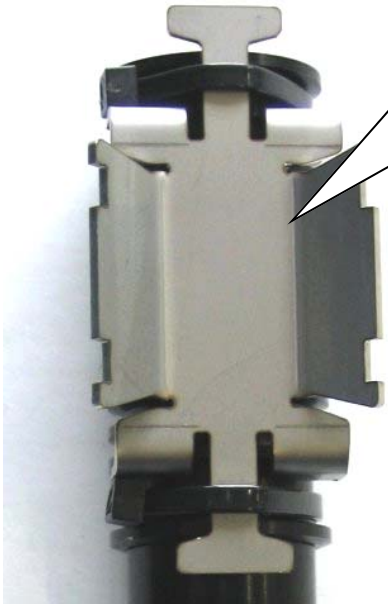

Fix the tape on the installed holder. **Adherend must be cleaned and degreased.**

Fix the electronic component on the damper with cable ties 4,8mm x 290mm.
IMPORTANT: Adherend must be cleaned and degreased. Mount the electronic component facing to the rear of the vehicle as shown on the picture

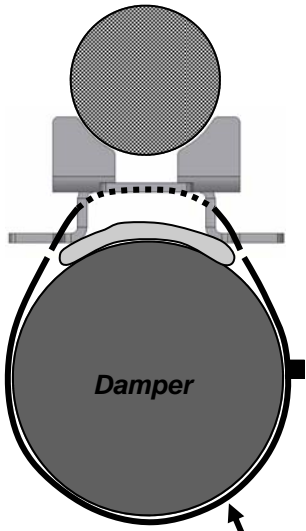

Cable ties

Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 342	

Front axle:

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks and fix it with cable ties.






Installation Instructions		KW automotive
Instruction No.	685 10 342	

Rear axle:

Fix the holder on the electronic component with cable ties 4,8mm x 290mm.

Fix the tape on the installed holder. **Adherend must**

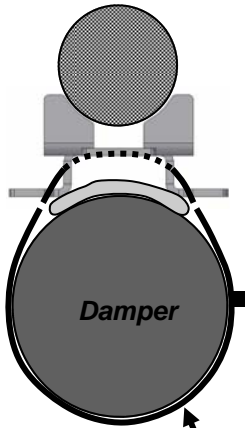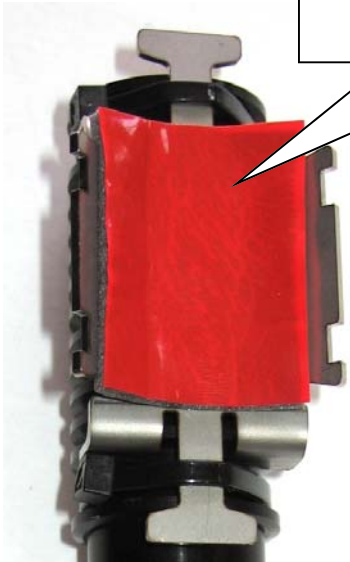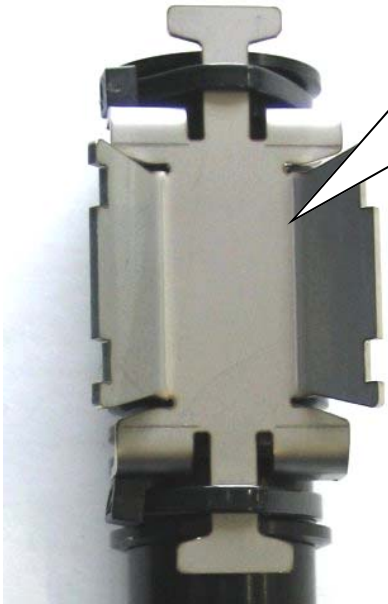

Cable ties

Fix the electronic component on the damper with cable ties 4,8mm x 290mm.
IMPORTANT: Adherend must be cleaned and degreased. Mount the electronic component facing to the outside of the vehicle as shown on the picture

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks and fix it with cable ties.

