

Installation Instructions		<i>KW automotive</i>	
Instruction No.	685 10 144		

KW automotive

685 10 144

INSTALLATION INSTRUCTIONS


Cancellation kit

Installation Instructions	KW automotive
----------------------------------	----------------------

Instruction No.	685 10 144	
-----------------	------------	--


Front axle:

Fix the electronic component on the inside of the wheel house with the supplied edge clips on the chassis edge.

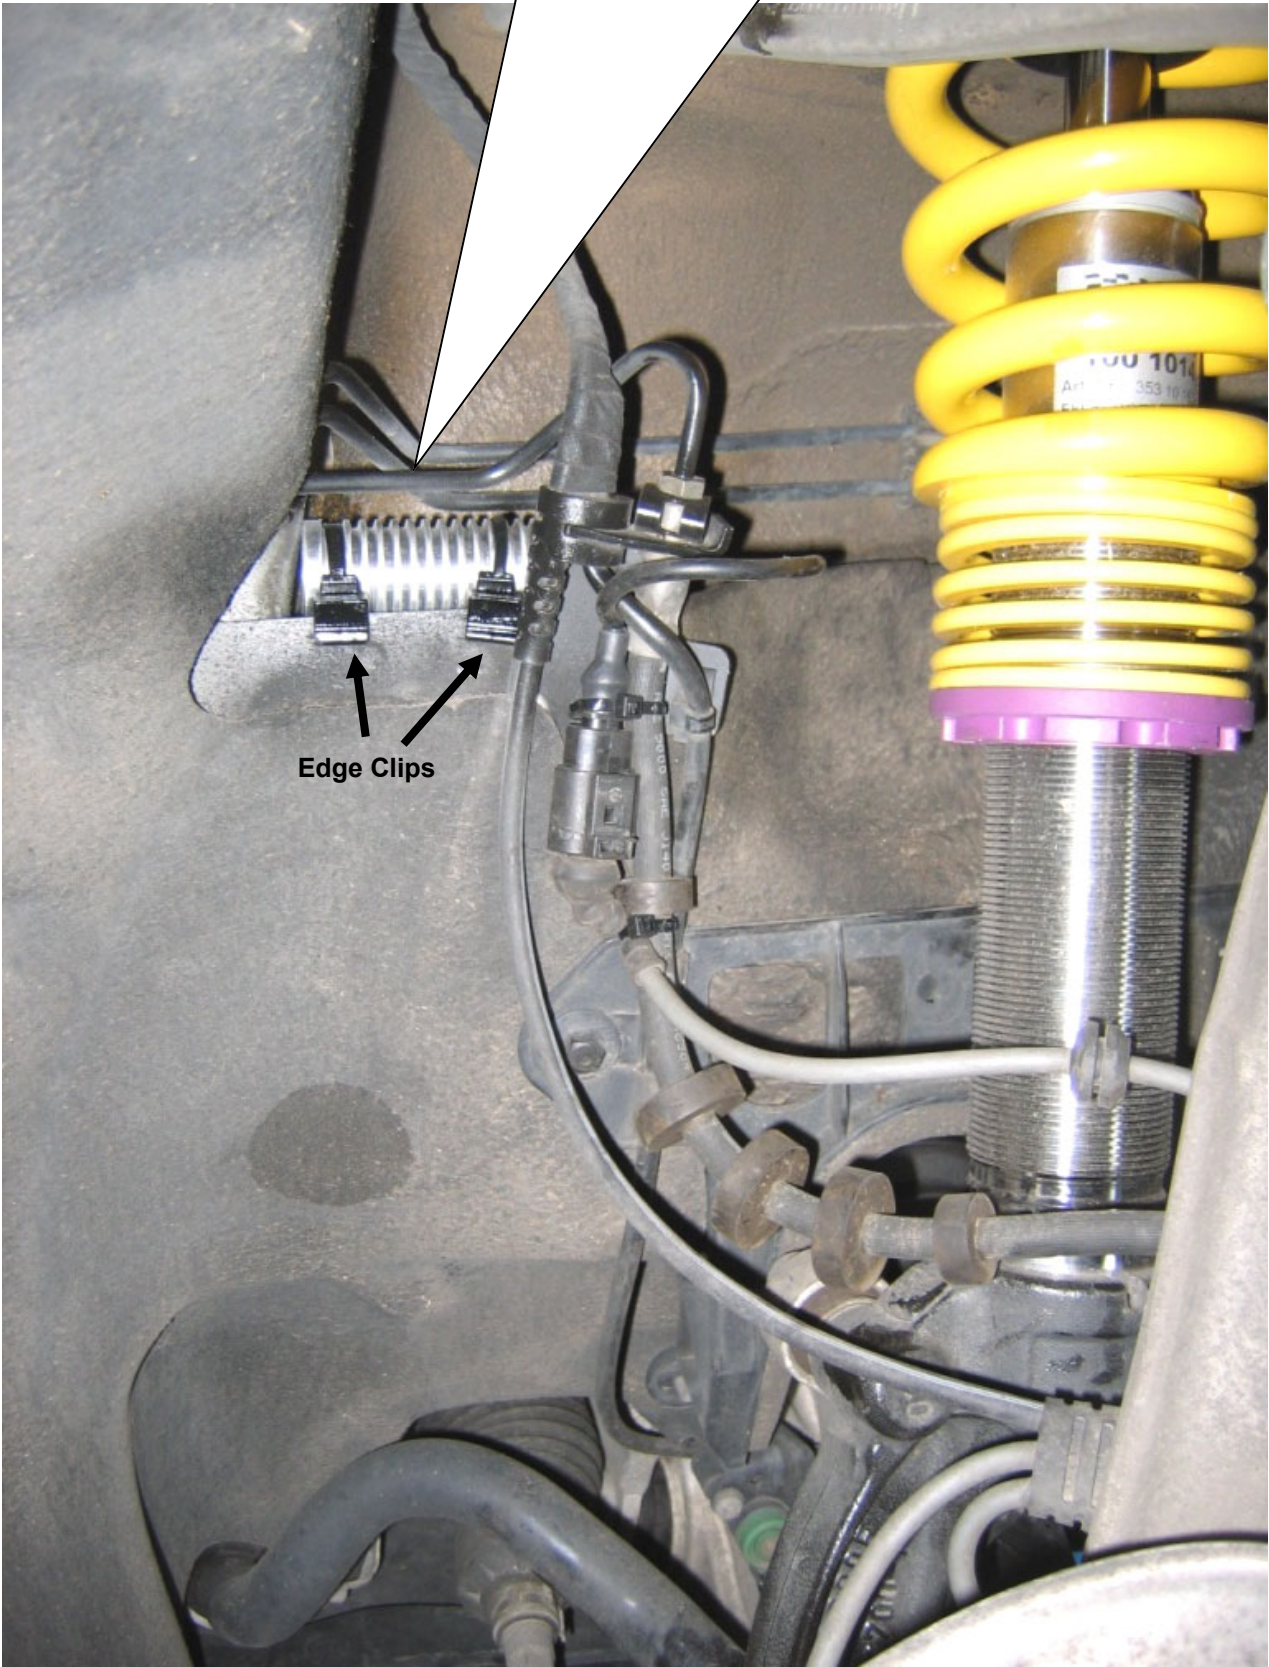

Installation Instructions		KW automotive
Instruction No.	685 10 144	

Front axle:

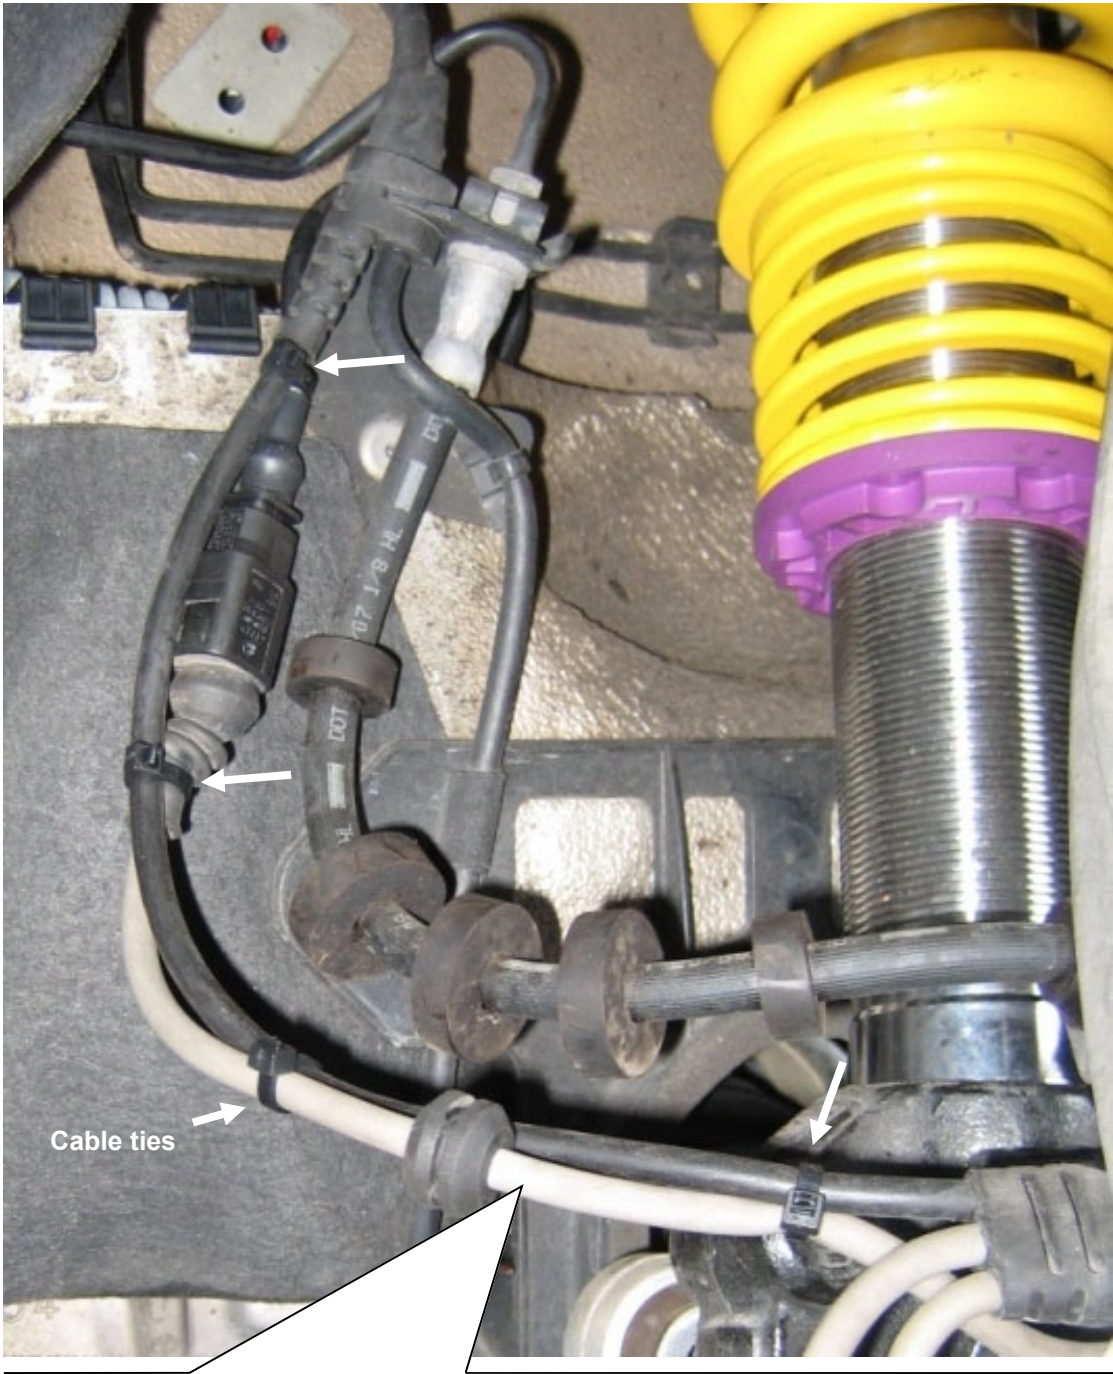


Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Pay attention the a correct cable running.

Installation Instructions		KW automotive
----------------------------------	--	----------------------

Instruction No.	685 10 144	
-----------------	------------	--

Rear axle:


Fix the holder on the supplied electronic component with cable ties.

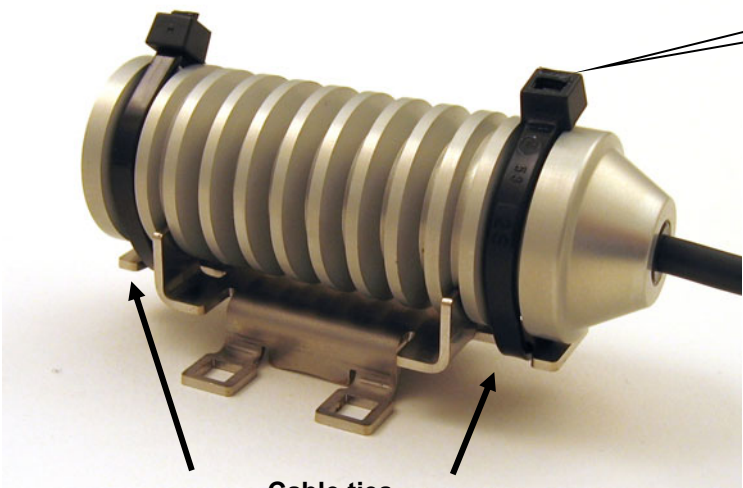

Cable ties



Fix the holder included the electronic kit on the damper with cable ties.

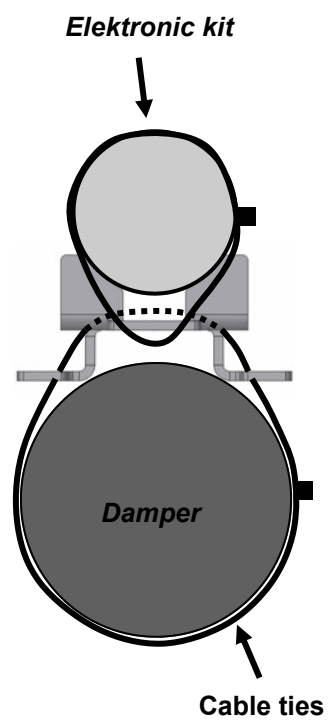

Installation Instructions		<i>KW automotive</i>	
Instruction No.	685 10 144		

Rear axle:



Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Pay attention the a correct cable running.