



INSTALLATION INSTRUCTIONS



| | | |
|----------------------------------|------------|----------------------|
| Installation Instructions | | <i>KW automotive</i> |
| Instruction No. | 685 10 149 | |

KW automotive

685 10 149

INSTALLATION INSTRUCTIONS

Elektronic Kit

| | | |
|----------------------------------|--|-----------------------------|
| Installation Instructions | | <i>KW automotive</i> |
|----------------------------------|--|-----------------------------|

| | | |
|-----------------|------------|--|
| Instruction No. | 685 10 149 | |
|-----------------|------------|--|


Front axle:

left vehicle side.

Run the original shock absorber cable along the marked point and fix it on the chassis with the supplied adhesive clips and edge clips. Insert the standard connector into the electronic component connector until it locks. Pay attention the a correct cable running.



| Installation Instructions | | KW automotive | |
|---------------------------|---|---------------|--|
| Instruction No. | 685 10 149 | | |
| Front axle: | Run the original shock absorber cable along the marked point and fix it on the original wire harness with the supplied cable ties. Insert the standard connector into the electronic component connector until it locks. Pay attention the a correct cable running. | | |
| Right vehicle side. | | | |

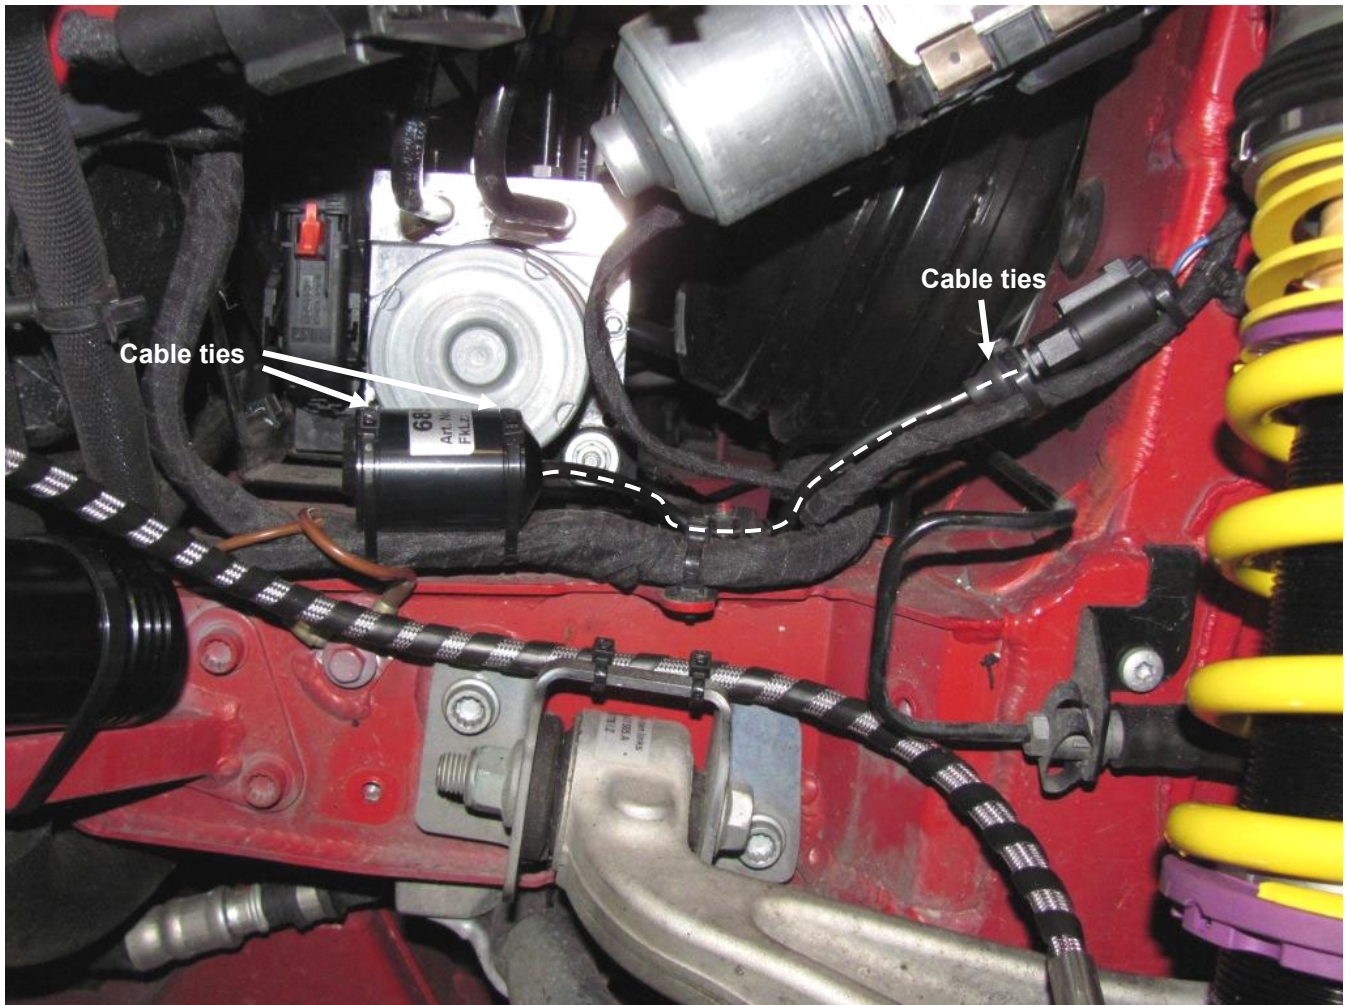

| | | |
|----------------------------------|--|-----------------------------|
| Installation Instructions | | <i>KW automotive</i> |
|----------------------------------|--|-----------------------------|

| | | |
|-----------------|------------|--|
| Instruction No. | 685 10 149 | |
|-----------------|------------|--|

Rear axle:

Right vehicle side.

Run the original shock absorber cable along the marked point and fix it on the original wire harness with the supplied cable ties. Fix the electronic component with edge clips on the chassis. Insert the standard connector into the electronic component connector until it locks. Pay attention the a correct cable running.



| | | |
|----------------------------------|--|-----------------------------|
| Installation Instructions | | <i>KW automotive</i> |
|----------------------------------|--|-----------------------------|

| | | |
|-----------------|------------|--|
| Instruction No. | 685 10 149 | |
|-----------------|------------|--|

Rear axle:

Left vehicle side.

Run the original shock absorber cable along the marked point and fix it on the original wire harness with the supplied cable ties. Fix the electronic component with edge clips on the chassis. Insert the standard connector into the electronic component connector until it locks. Pay attention the a correct cable running.

