

Installation Instructions		<i>KW automotive</i>	
Instruction No.	685 10 150	Erstellt am/ Date	29.07.2010

KW automotive

685 10 150

INSTALLATION INSTRUCTIONS


Cancellation kit

Installation Instructions		<i>KW automotive</i>
----------------------------------	--	-----------------------------

Instruction No.	685 10 150	
-----------------	------------	--

Preparation:


1. Cut off the control cable (the cable from the standard damper control box to the standard damper) in the middle.

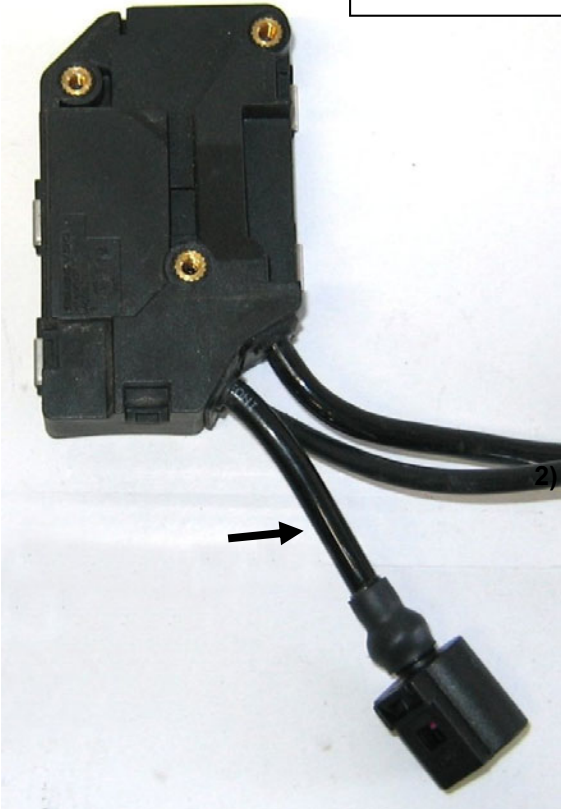


2. Remove 15 mm / 0,6 inch of the cable insulation and 4-5 mm / 0,16 - 0,2 inch of the wire insulation. Attach the heat shrink tube.



3. Install the supplied pin contact with a correct tool.

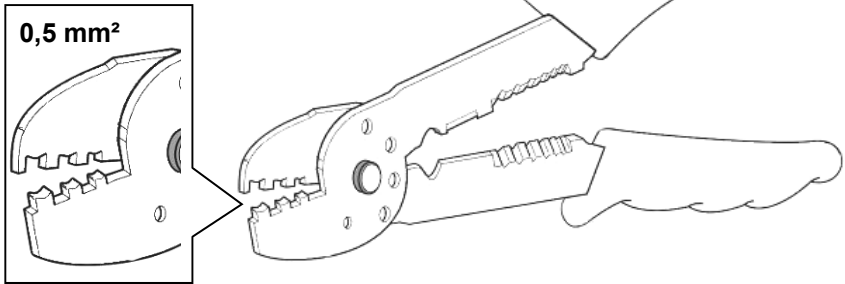

4. Insert the completed wire with sealings into the connector until to the lock. The pinposition / cable colour is not relevant. Move the heat shrink tube to the middles of the connector / the wire and heat it.

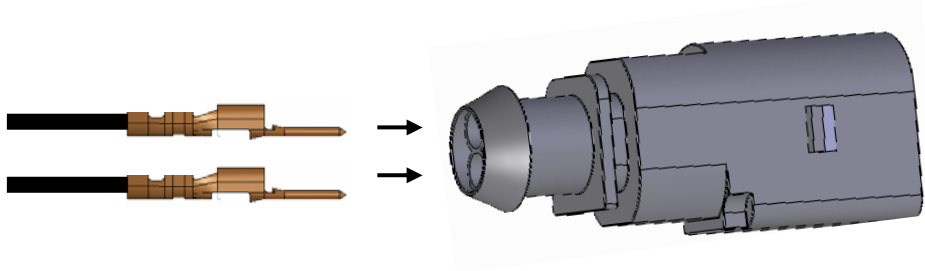

Installation Instructions

KW automotive

Instruction No.

685 10 150


Front axle:

Mount the damper controlbox on the coilover strut. Use the supplied screws, washers and the distance bushes.

Distance bush

Fix the stainless steel holder with the supplied double-sided tape on the coilover strut. Fix the stainless steel holder opposite of the damper controlbox. **Adherend must be cleaned and degreased.**

Fix the electronic component on the stainless steel holder with cable ties 4,8mm x 290mm. Additionally fix the plug-in connection on the original control box with a cable tie.

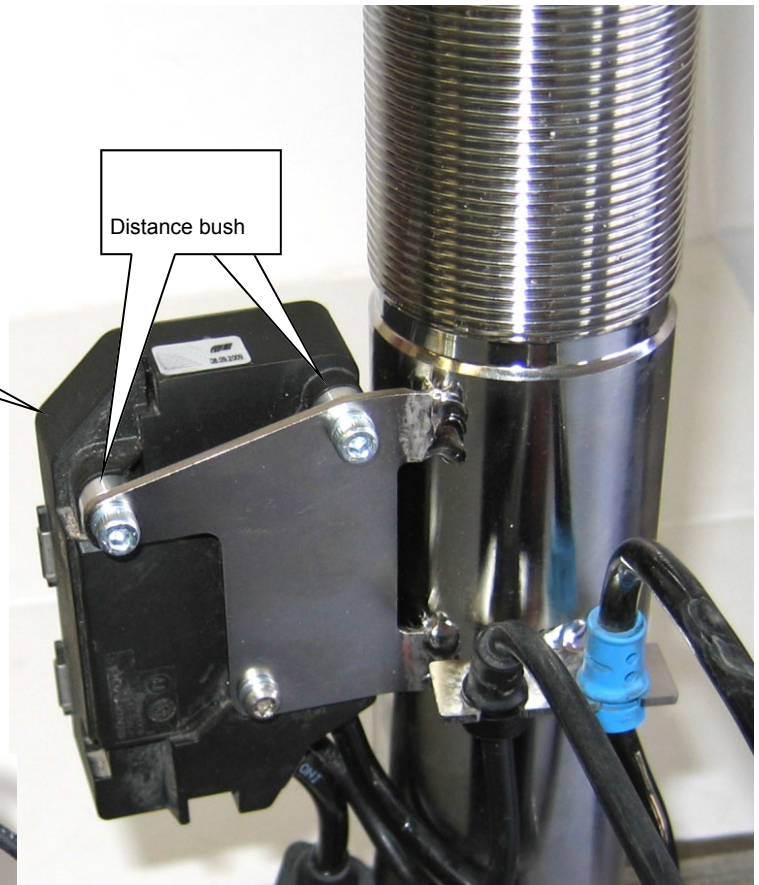


Installation Instructions		KW automotive
Instruction No.	685 10 150	

Rear axle:

Mount the damper controlbox on the coilover strut. Use the supplied screws, washers and the distance bushes.

Fix the stainless steel holder with the supplied double-sided tape on the coilover strut. Fix the stainless steel holder opposite of the damper controlbox. **Adherend must be cleaned and degreased.**

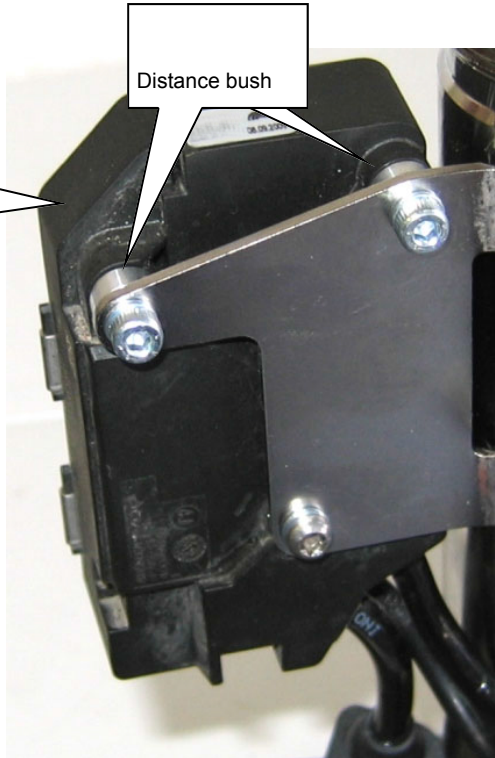

Fix the electronic component on the stainless steel holder with cable ties 4,8mm x 290mm. Additionally fix the plug-in connection on the original control box with a cable tie.

