

Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 145	

KW automotive

685 10 145


INSTALLATION INSTRUCTIONS

Cancellation kit

Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 145	

Front axle and Rear axle:

At some vehicles may the connectors do not match. Please remove the coding in the vehicle conec-tor. Use a small cutter.


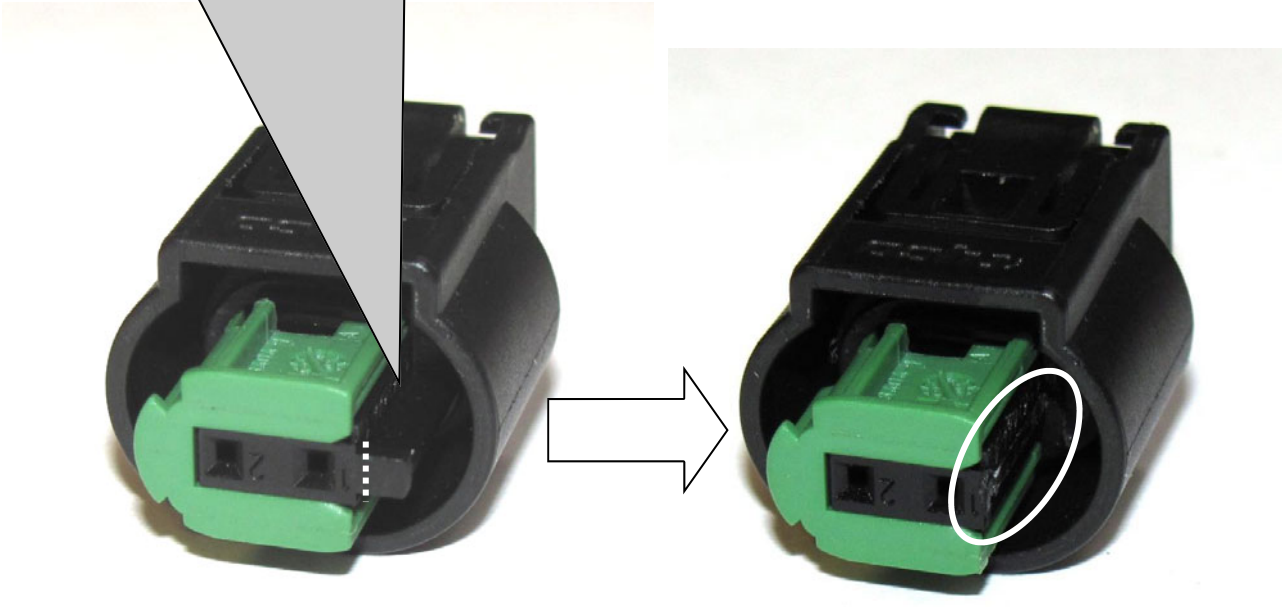


Installation Instructions	<i>KW automotive</i>
----------------------------------	----------------------

Instruction No.	685 10 145	
-----------------	------------	--

Front axle:

Assembly position of the elektronic component.

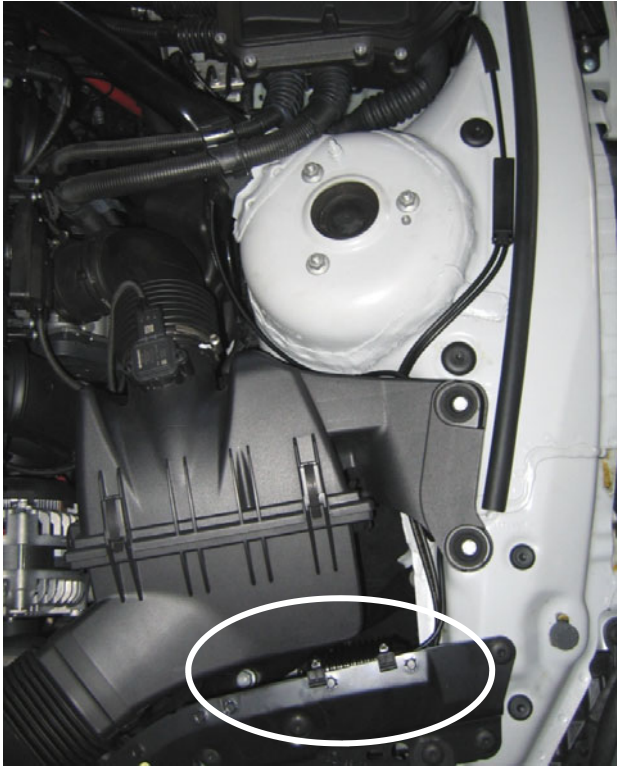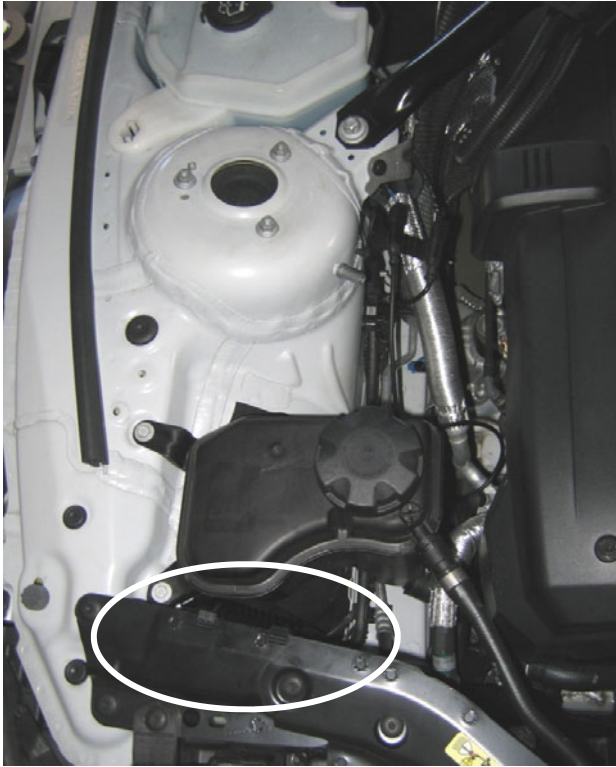

Fix the electronic component with the supplied edge clips on the front strut.



Installation Instructions		<i>KW automotive</i>	
Instruction No.	685 10 145		

Front axle:


Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks.



Installation Instructions		<i>KW automotive</i>
----------------------------------	--	-----------------------------

Instruction No.	685 10 145	
-----------------	------------	--

Rear axle:	Right vehicle side.	Assembly position of the electronic component.
-------------------	---------------------	--

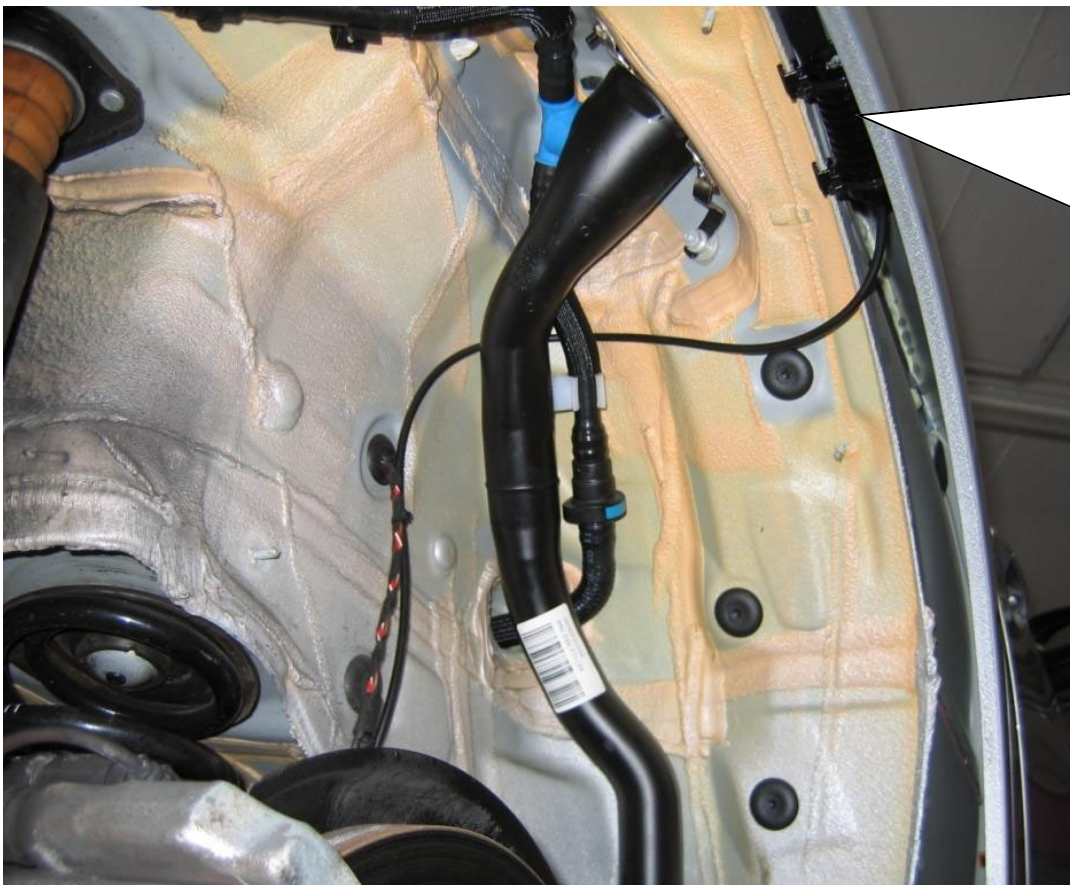

Fix the electronic component with the supplied edge clips on the front stud. Fix the wire with cable ties on the wire harness.

Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 145	

Rear axle:

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks.

