



INSTALLATION INSTRUCTIONS



Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 390	

KW automotive

685 10 390

INSTALLATION INSTRUCTIONS

Cancellation kit

Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 390	

Front axle and Rear axle:


1. Open the connector lock. Remove the Standard wire out of the connector. Use a correct tool.



Connector lock




2. Insert the completed wire with sealings into the supplied connector until to the lock. The pinposition / cable colour is not relevant. After this lock the connector.

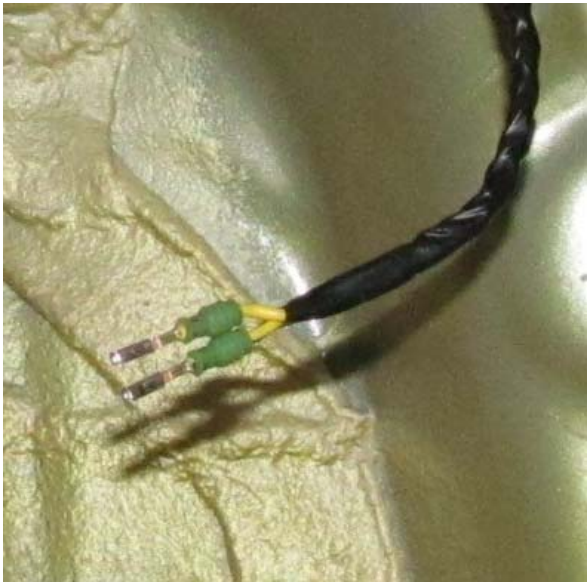

Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 390	

Front axle:

Fix the front cancellation kit with the supplied cable ties on the wire harness. Insert the standard connector into the cancellation kit connector until it locks. Fix the wire with cable ties on the wire harness.

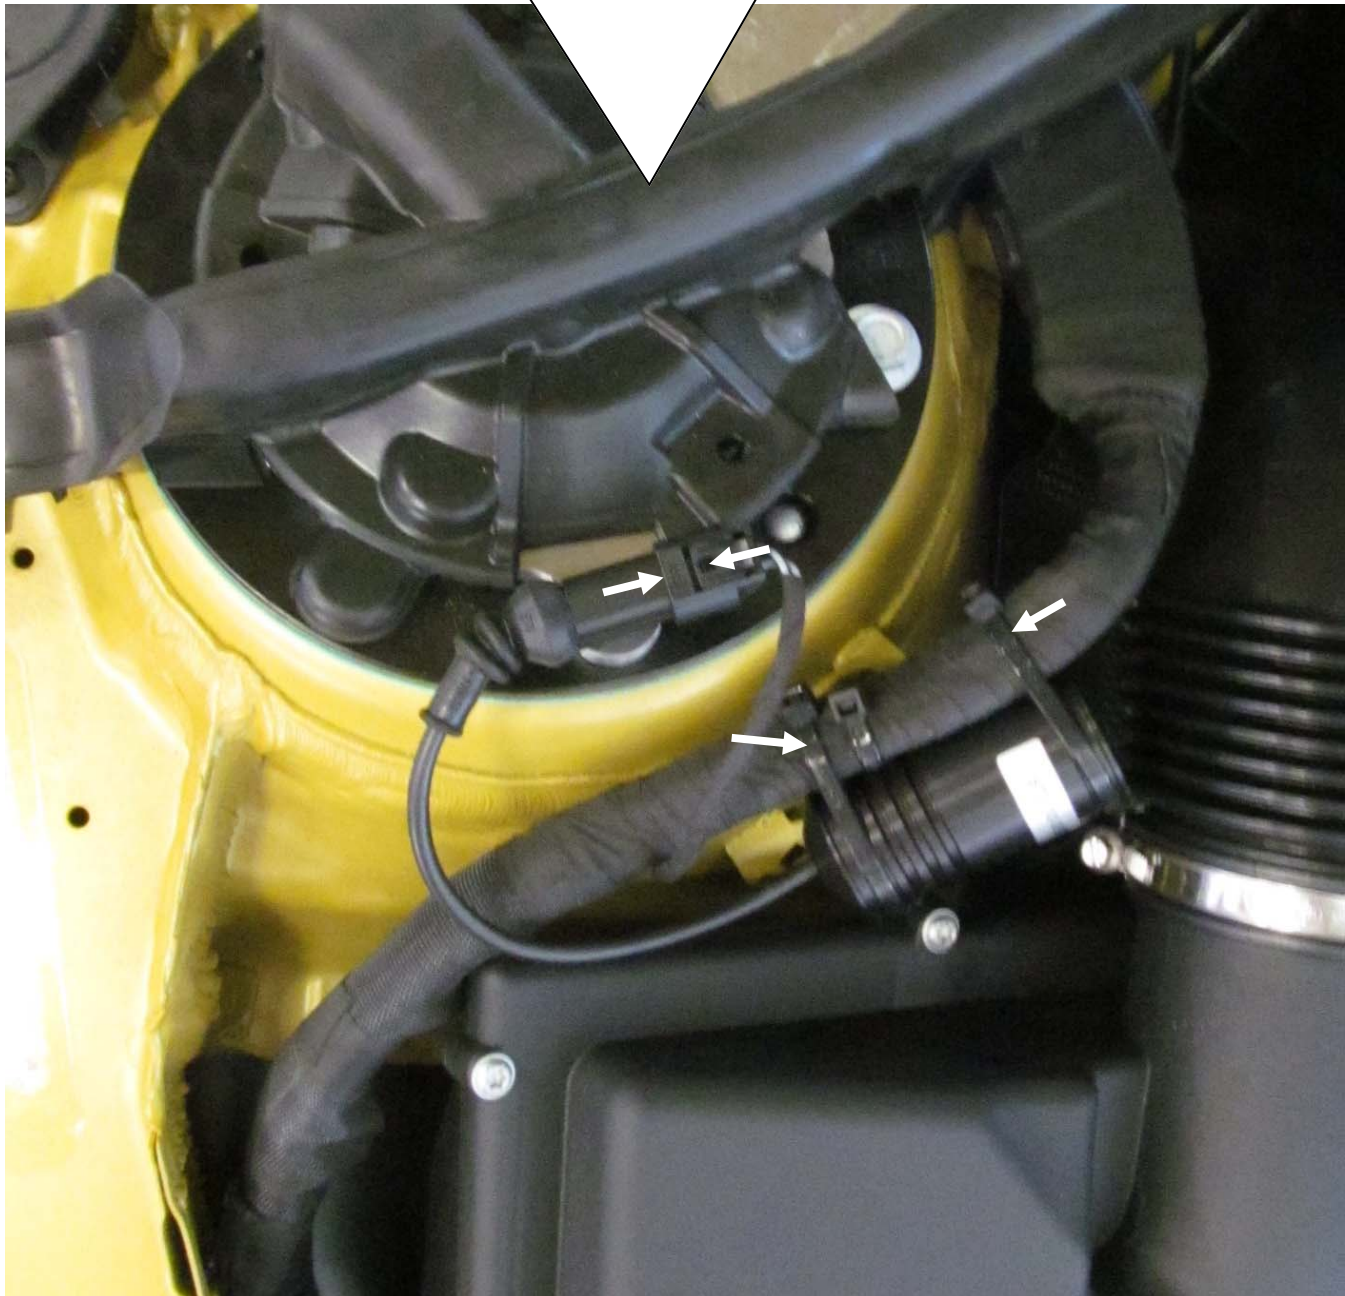

Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 390	

Rear axle :


The delivery still seals, covers and screws included. These are absolutely required for the installation of the coilover. The original seal, cover, and the distance is no longer necessary.

Included in delivery

2x Seal

2x Cover

Screws

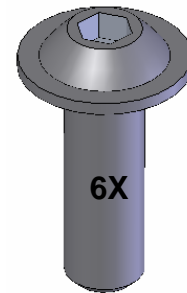

Installation Instructions		<i>KW automotive</i>	
Instruction No.	685 10 390	Erstellt am/ Date	16.02.2016

Rear axle left:

Fix the rear cancellation kit with the supplied edge clips on the bracket as shown in the picture. Insert the standard connector into the cancellation kit connector until it locks. Fix the wire with cable ties on the wire harness.



Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 390	

Rear axle right:

Fix the rear cancellation kit with the supplied cable ties on the wire harness as shown in the picture. Insert the standard connector into the cancellation kit connector until it locks. Fix the wire with cable ties on the wire harness.

