



INSTALLATION INSTRUCTIONS



Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 421	

KW automotive

685 10 421


INSTALLATION INSTRUCTIONS

Cancellation kit

Installation Instructions		KW automotive
Instruction No.	685 10 421	

Front axle:

Fix the edge clips on the electronic component.

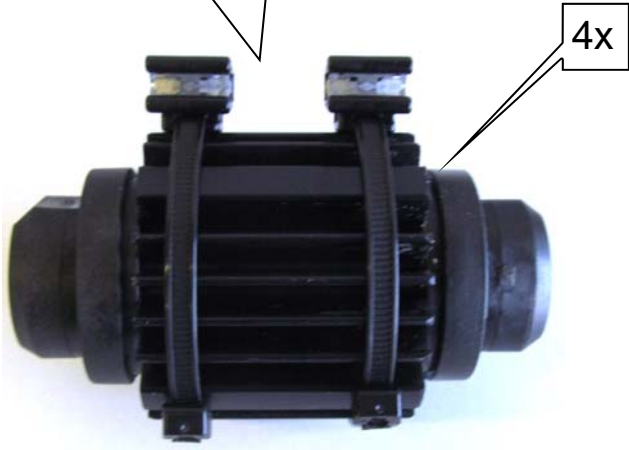


Fix the electronic component with the edge clips on the chassis edge as shown in the picture.



Installation Instructions		<i>KW automotive</i>	
Hinweis Nr./ Instruction No.	685 10 421		

Front axle:

FA left

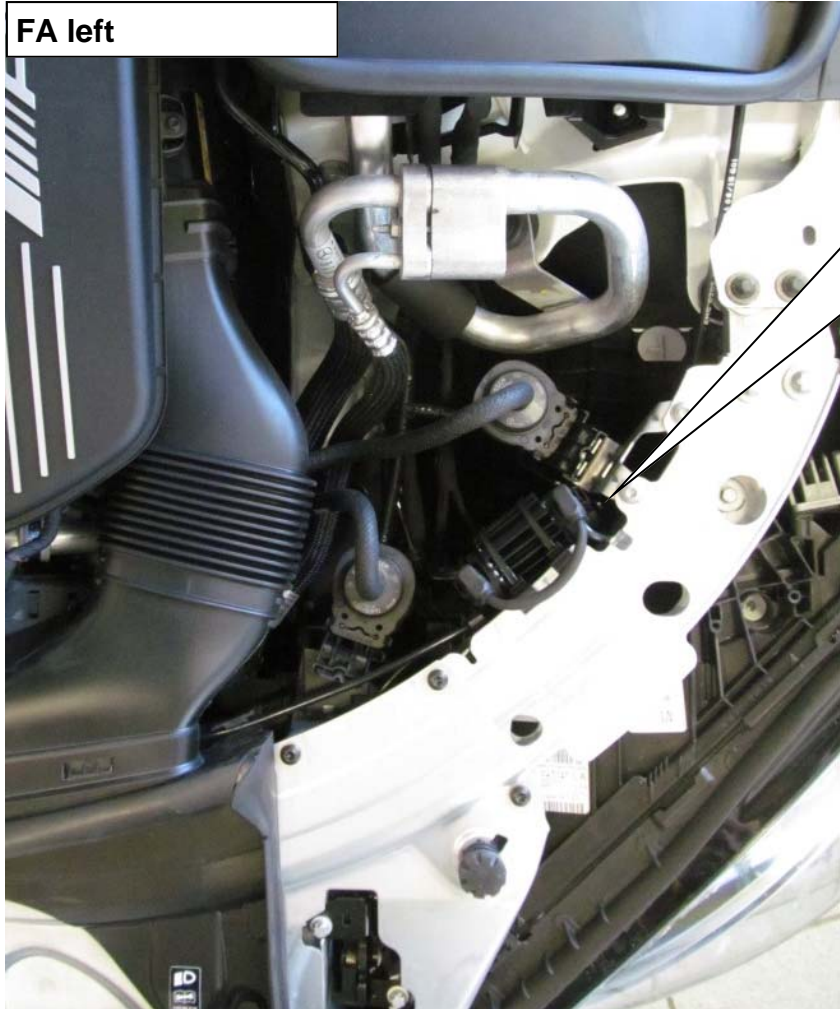


Fix the electronic component with the edge clips on the chassis edge as shown in the picture.

Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 421	

**Vorderachse/
Front axle:**

Run the standard damper control wire into the engine bay.

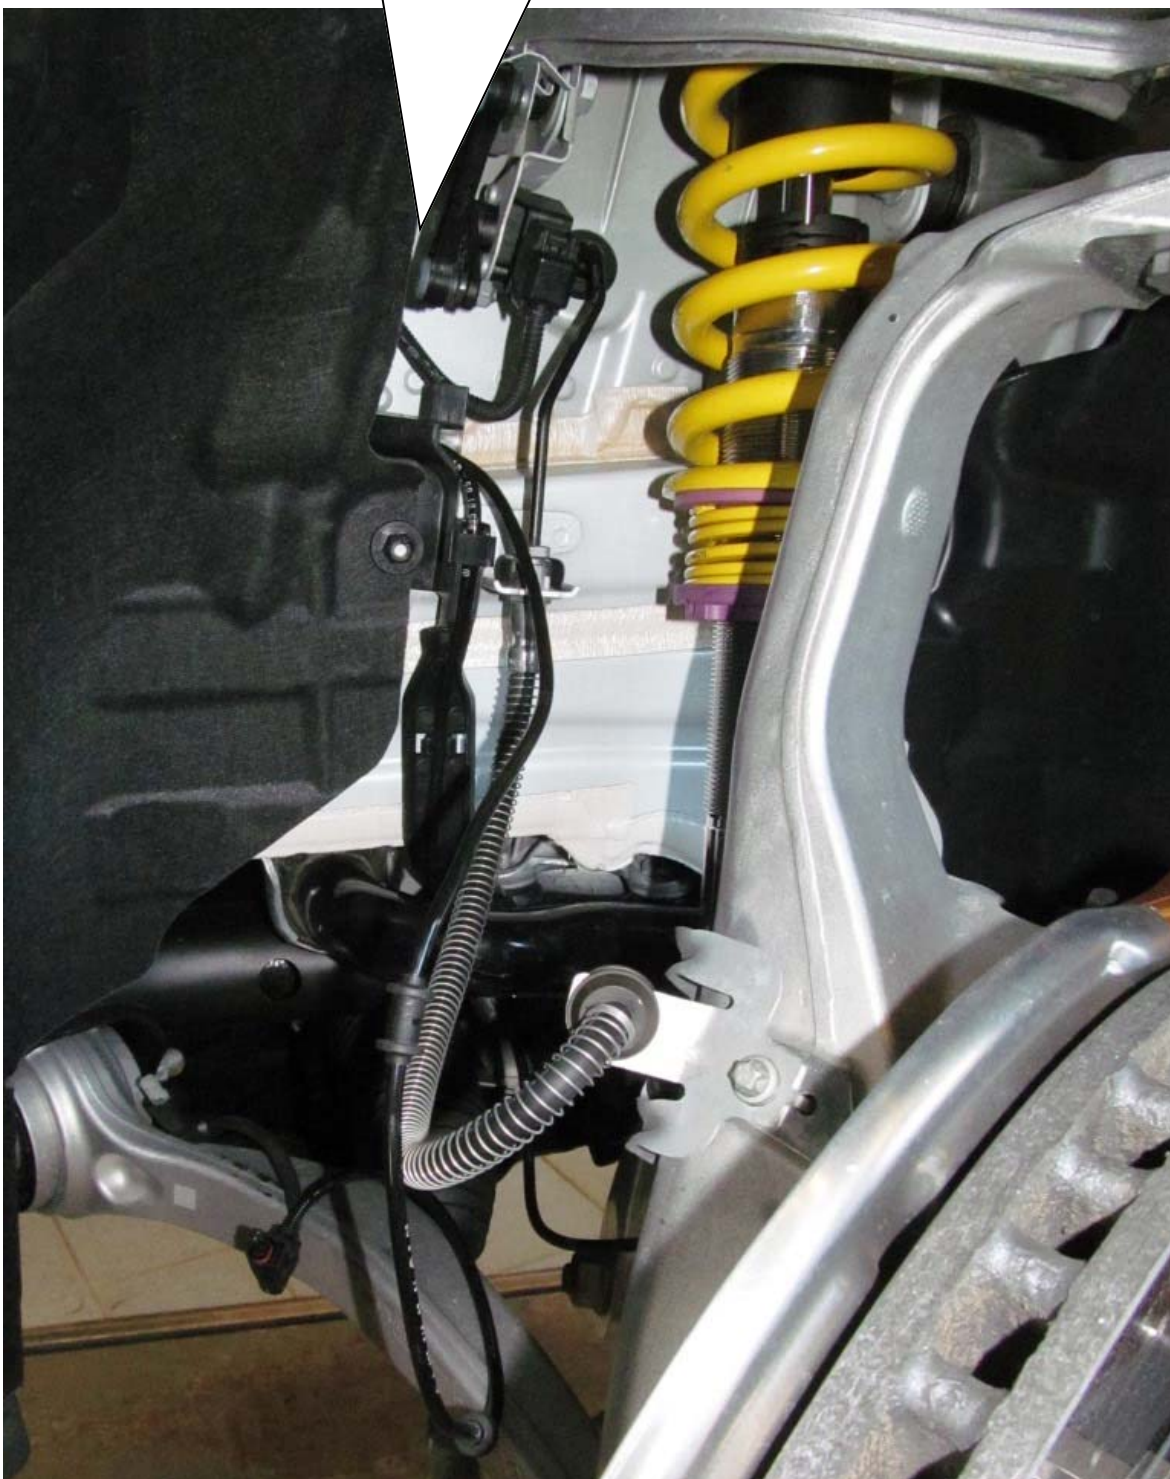

Installation Instructions		<i>KW automotive</i>	
Instruction No.	685 10 421		

Front axle:

Run the standard damper control wire to the electronic component connector. Insert the standard connector into the electronic component connector until it locks. Pay attention the a correct cable running.



Installation Instructions		<i>KW automotive</i>	
Instruction No.	685 10 421		

Rear axle:

Fix the electronic component with the edge clips on the rear axle as shown in the picture.



Installation Instructions		<i>KW automotive</i>	
Instruction No.	685 10 421		

Rear axle:

Run the standard damper control wire to the electronic component connector. Insert the standard connector into the electronic component connector until it locks. Pay attention the a correct cable running.

