



# INSTALLATION INSTRUCTIONS






## INSTALLATION INSTRUCTIONS

KW Coilovers for automobile suspensions are designed for easy installation. If not otherwise stipulated in these instructions, all suspension components are installed and removed in accordance with the manufacturer's specifications for installing and removing standard springs and damper components. At the time of printing all instructions and specifications are correct.

Technical data	<u>Coilover</u> part number 352 28 806	
Vehicle model	Dodge Charger mod. 05, 6 - 8 cyl, Dodge Challenger mod. 08, 6 + 8 Zyl.	
	<b>front axle</b>	<b>rear axle</b>
Spring signature	KW 20-60-80 / KW 100-200*	KW 2507
Coilover strut / Shock absorber signature	272 1008	272 1108

**Front axle:**

Supplied coilover strut.

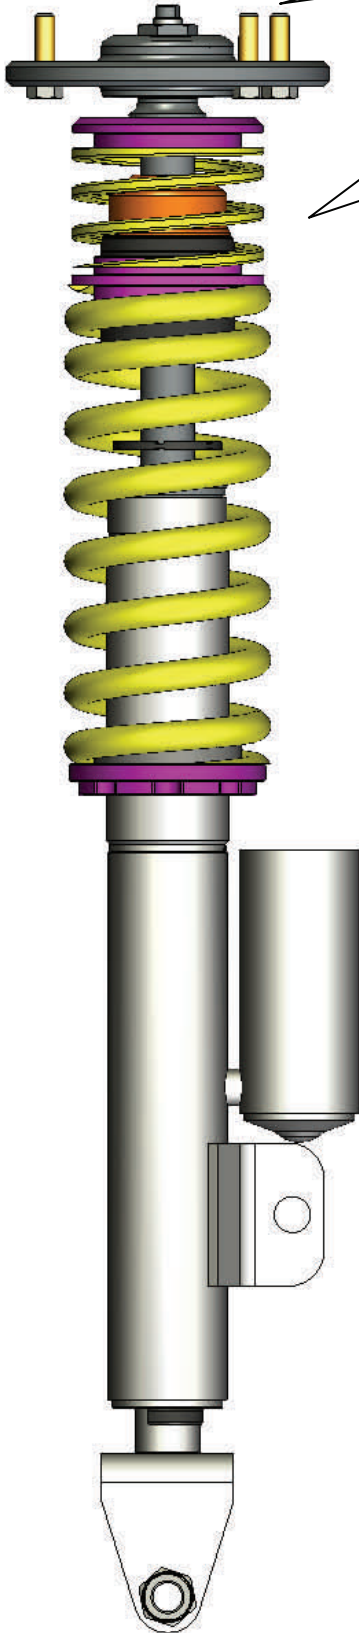


Please install the strut unit to manufacturers recommended settings regarding tightening torque and fixing specifications.

Montiertes Federbein.  
Installed coilover strut.



## Rear axle:

The rear axle shock absorber according to the car manufacturer installation instructions. Unless there is no bump stop in the delivery contents, the standard bump stop has to be used. The standard bump stop has to be in a good condition, otherwise it has to be replaced.

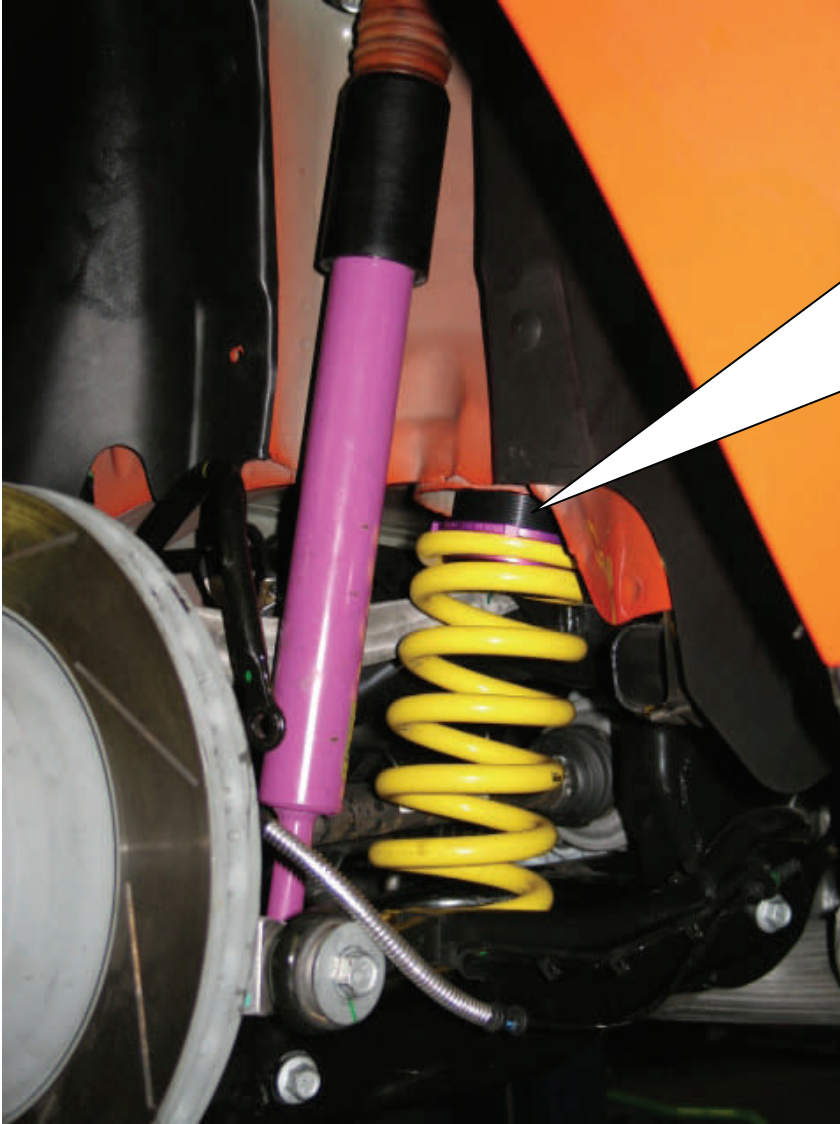

Mount the rear axle adjustment between spring and chassis. The original spring support is not needed anymore. You have to remove this part to correct (screw up the threaded ring) the car height. Please install the damper unit to manufacturers recommended settings regarding fixing specifications.