



INSTALLATION INSTRUCTIONS



Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 420	

KW automotive

685 10 420

INSTALLATION INSTRUCTIONS

Cancellation kit

Installation Instructions		KW automotive	
----------------------------------	--	----------------------	--


Instruction No.	685 10 420		
-----------------	------------	--	--

Preparation:


1. Cut off 150 mm / 5,9 inch of the standard damper control cable.



2. Remove 15 mm / 0,6 inch of the cable insulation and 4-5 mm / 0,16 - 0,2 inch of the wire insulation. Attach the heat shrink tube.

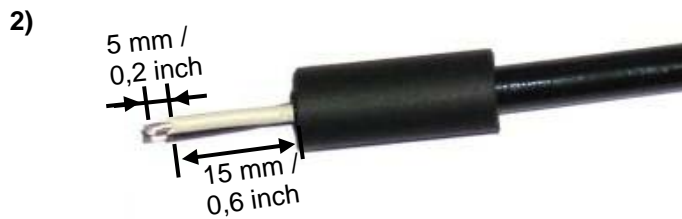

3. Install the supplied pin contact with a correct tool.

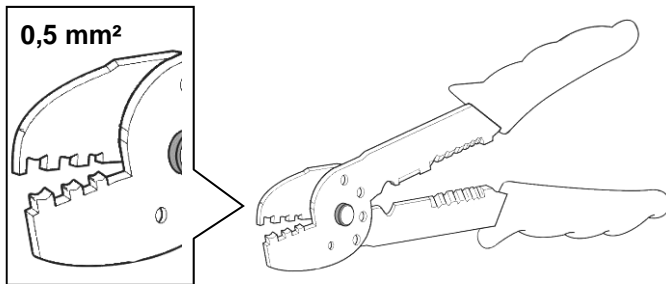


4. Insert the completed wire into the connector until to the lock. After this lock the connector and move the heat shrink tube to the middles of the connector / the wire and heat it. The pinposition / cable colour is not relevant.



Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 420	

Front axle:

Fix the adhesive tapes on the electronic component.
IMPORTANT: Surface must be cleaned and degreased.

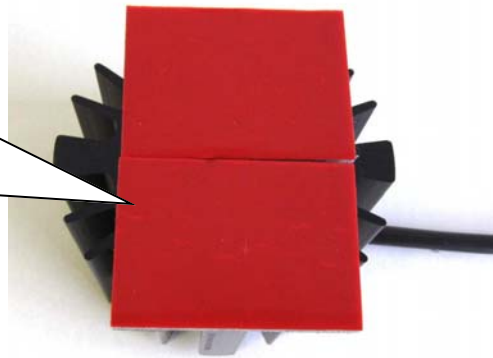

Connect the standard damper control wire into the new adapter wire until it locks. Fix the wire with cable ties.



Installation Instructions

KW automotive

Instruction No.

685 10 420

Front axle:

Connect the wire of the electronic component into the adapter. Fix the wire with cable ties.




Fix the canceller with supplied adhesive tape on the vehicle chassis.

IMPORTANT: Surface must be cleaned and degreased.


Installation Instructions		KW automotive	
Instruction No.	685 10 420		

Front axle:

Pull the Edge Clip from the small cable ties and fit on the supplied cable ties, length 300mm.

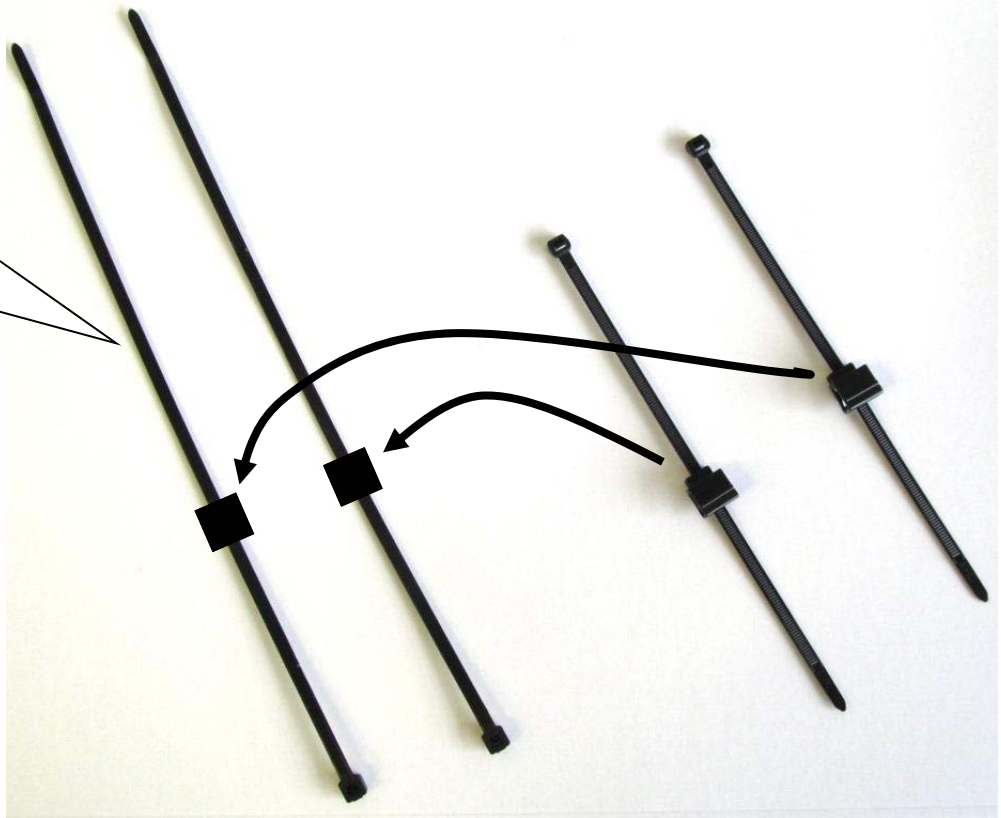

Connect the standard damper control wire into the new adapter wire until it locks. Fix the wire with cable ties. Then connect the extension cable to the adapter.

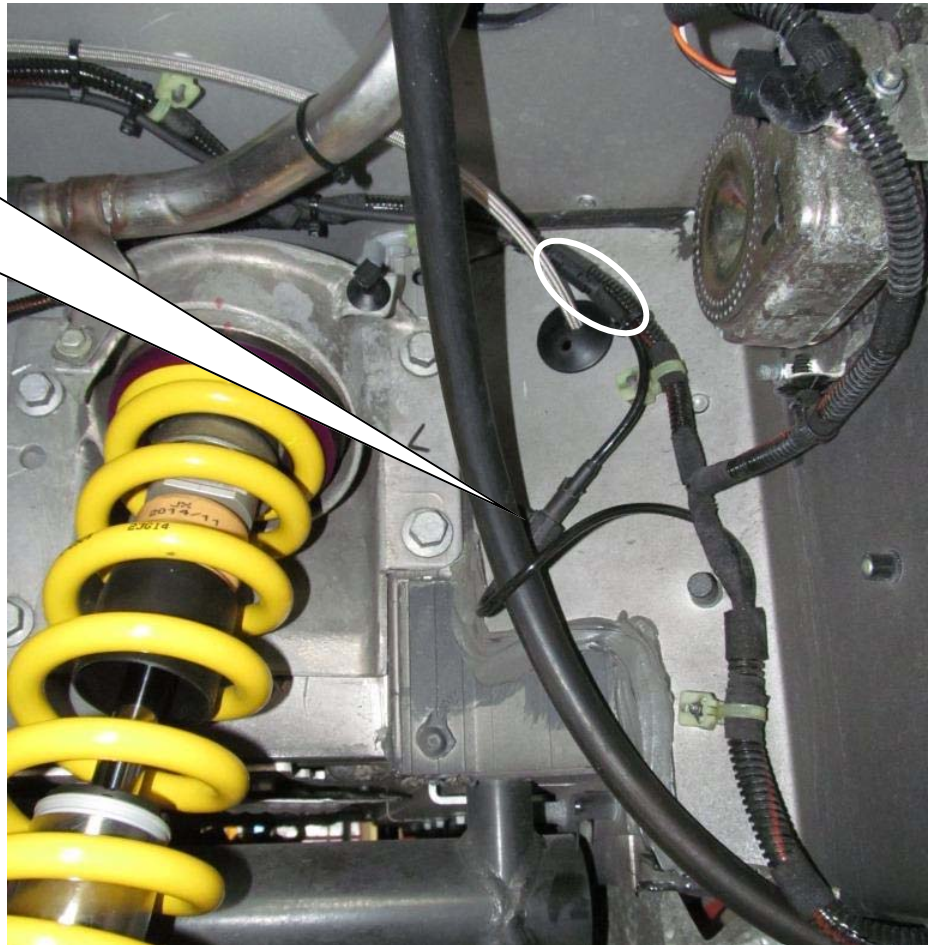

Installation Instructions		<i>KW automotive</i>
Instruction No.	685 10 420	

Rear axle:

Run the standard damper control wire with adapter to the cacellation kit connector. Insert the standard connector into the cacellation kit connector until it locks. Fix the wire with cable ties.

