



# INSTALLATION INSTRUCTIONS



<b>Installation Instructions</b>		<b><i>KW automotive</i></b>	
Instruction No.	685 10 372		

# ***KW automotive***

**685 10 372**

**INSTALLATION INSTRUCTIONS**

**Cancellation kit**

<b>Installation Instructions</b>		<b>KW automotive</b>
----------------------------------	--	----------------------

Instruction No.	685 10 372	
-----------------	------------	--

**Front axle:**

Fix the Cancellation kit with cable ties on the front vehicle frame.




<b>Installation Instructions</b>		<b><i>KW automotive</i></b>
----------------------------------	--	-----------------------------

Instruction No.	685 10 372	
-----------------	------------	--

**Front axle:**


Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Fix the cables with cable ties on the wire harness.

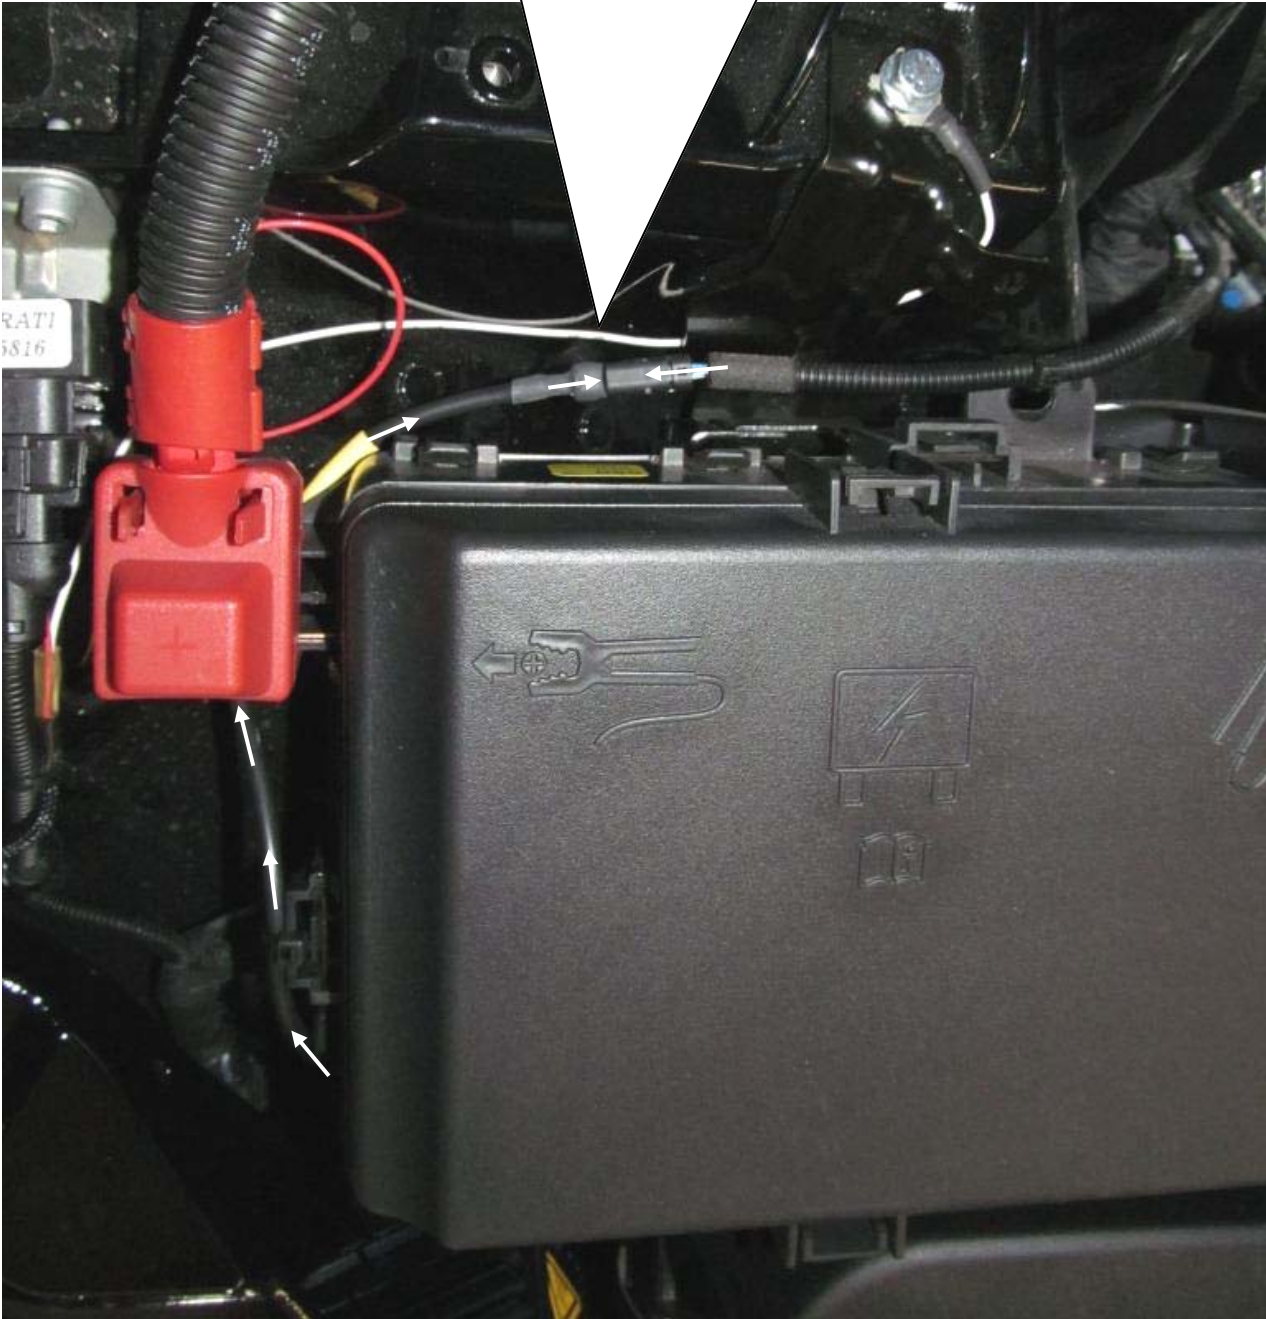


<b>Installation Instructions</b>		<b>KW automotive</b>
Instruction No.	685 10 372	

**Rear axle:**

Fix the adhesive tapes on the electronic component.  
**IMPORTANT: Surface must be cleaned and degreased.**

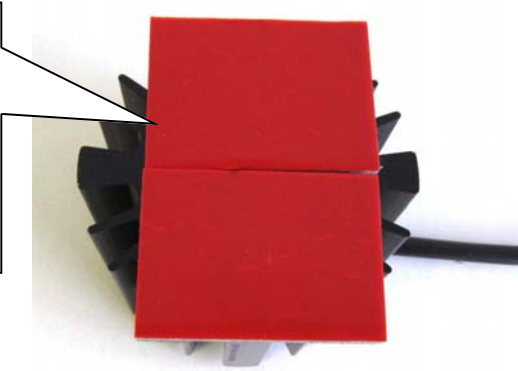

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Fix the canceller with supplied adhesive tape on the vehicle chassis.

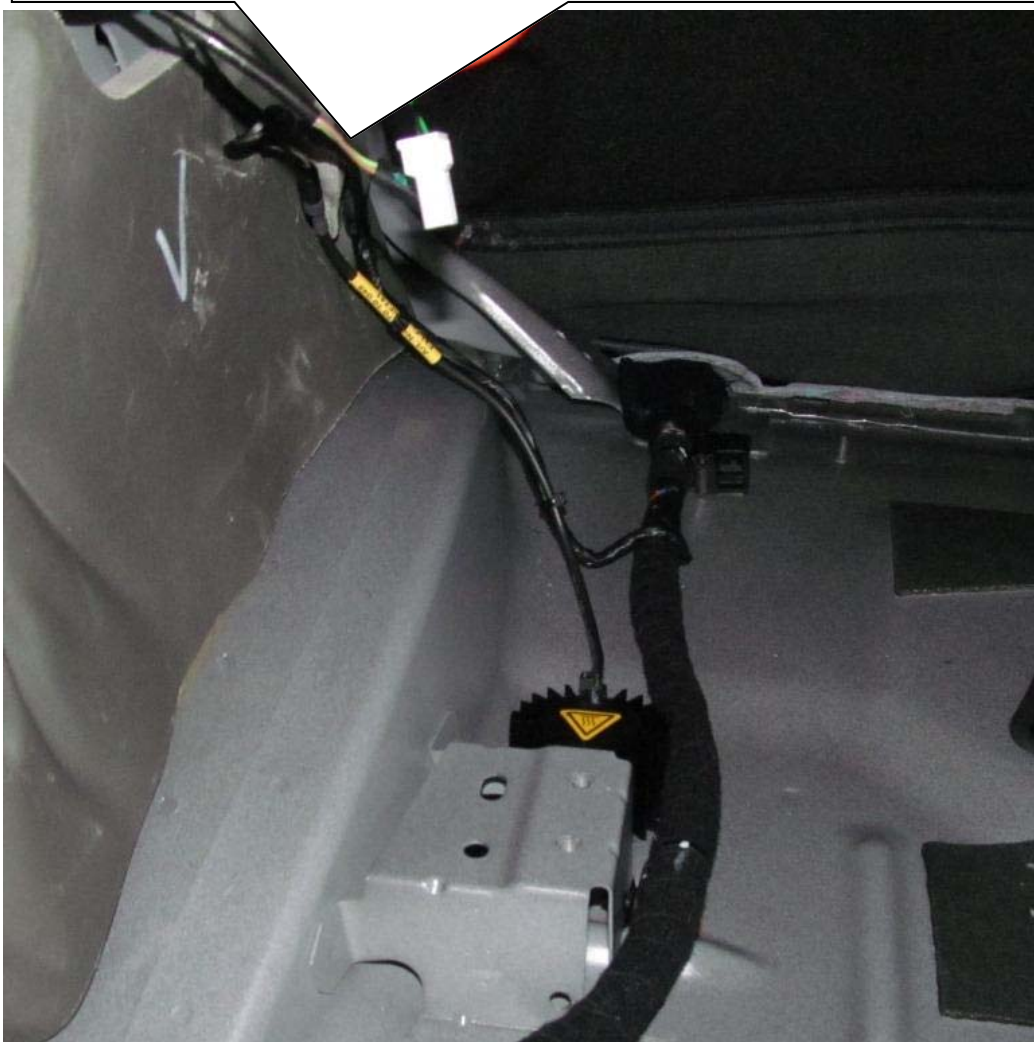

<b>Installation Instructions</b>		<b><i>KW automotive</i></b>
Instruction No.	685 10 372	

**Rear axle:**

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Fix the canceller with supplied adhesive tape on the vehicle chassis.

