

Installation Instructions			<i>KW automotive</i>
Instruction No.	685 10 182		

KW automotive

685 10 182


INSTALLATION INSTRUCTIONS

Cancellation kit


Installation Instructions			KW automotive
Instruction No.	685 10 182		

Preparation:

1. Cut off the standard damper wire at 50mm / 2,0 inch.




2. Remove 15 mm / 0,6 inch of the cable insulation and 4-5 mm / 0,16 - 0,2 inch of the wire insulation.

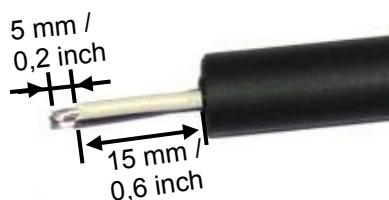

3. Install the supplied pin contact with a correct tool.



4. Open the connector lock. Insert the completed wire with sealings into the connector until to the lock. The pinposition / cable colour is not relevant. After this lock the connector.


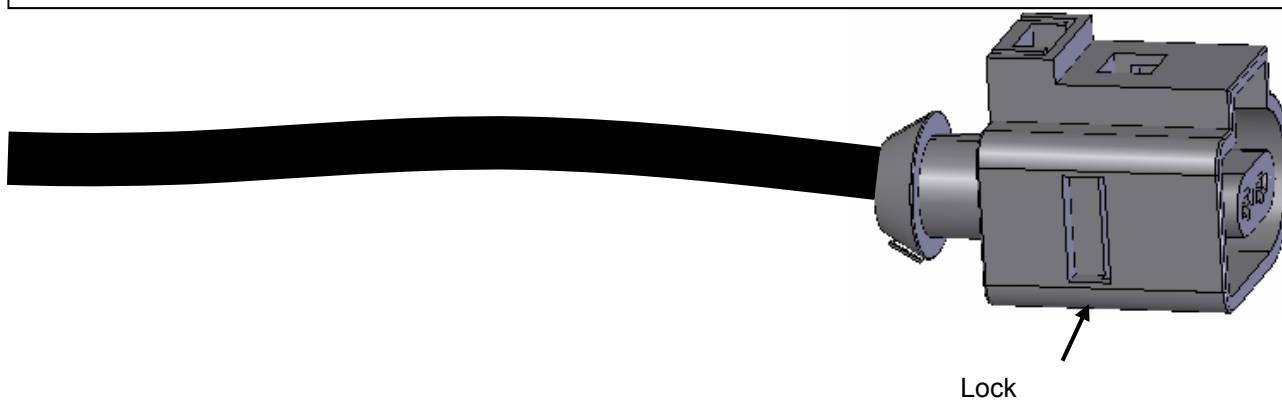


Installation Instructions			KW automotive
Instruction No.	685 10 182		

Front axle:


Fix the holder on the electronic component with cable ties 4,8mm x 290mm.

Fix the tape on the installed holder. **Adherend must be cleaned and degreased.**

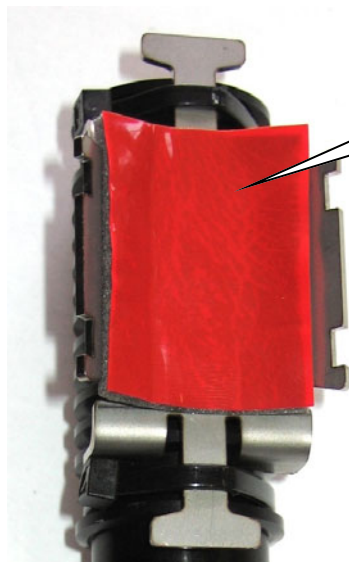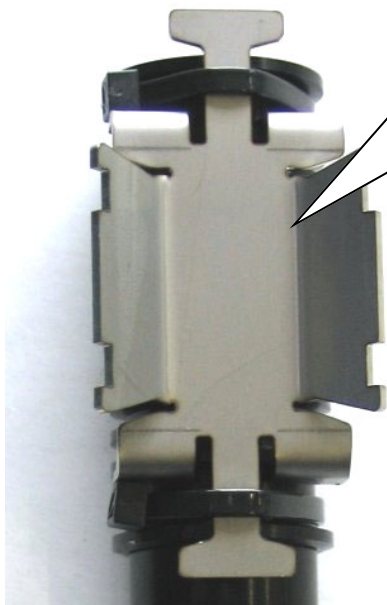

Fix the electronic component on the chassis. **IMPORTANT: Adherend must be cleaned and degreased.**

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the new electronic component connector until it locks and fix it with cable ties.


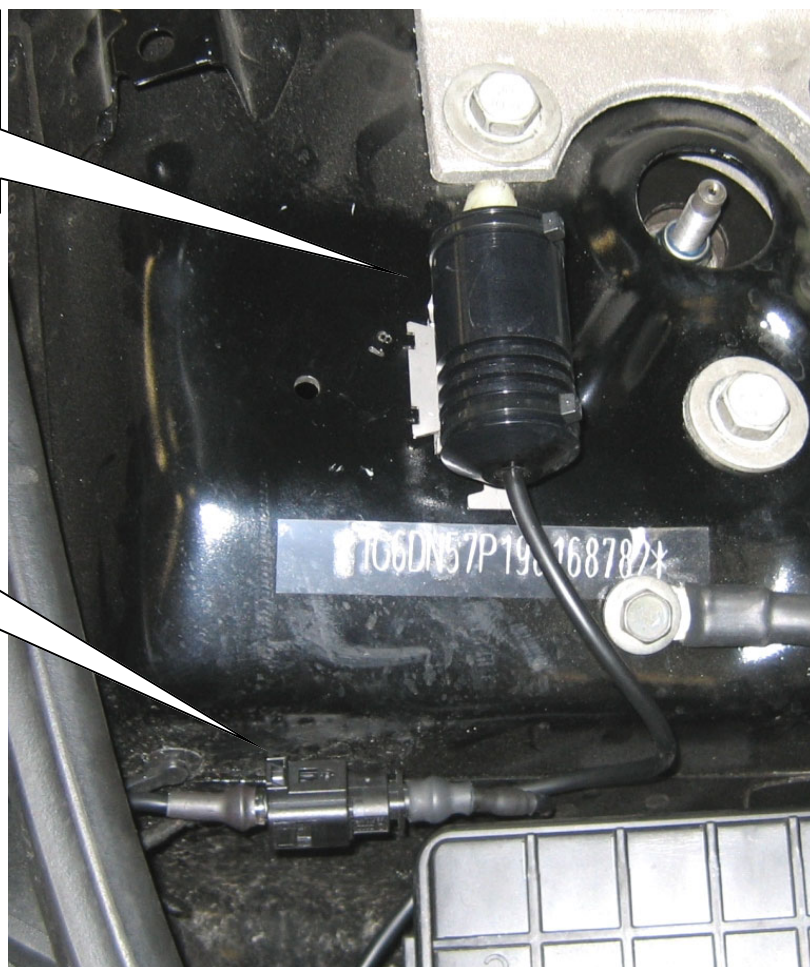


Installation Instructions			KW automotive
Instruction No.	685 10 182		

Rear axle:

Fix the holder on the electronic component with cable ties 4,8mm x 290mm.

Fix the tape on the installed holder. **Adherend must be cleaned and degreased.**

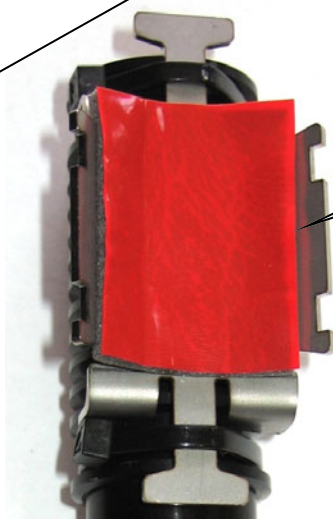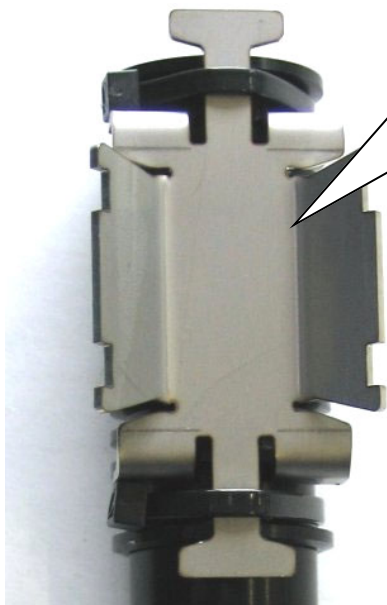

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the new electronic component connector until it locks and fix it with cable ties.

Fix the electronic component on the chassis. **IMPORTANT: Adherend must be cleaned and degreased.**

