


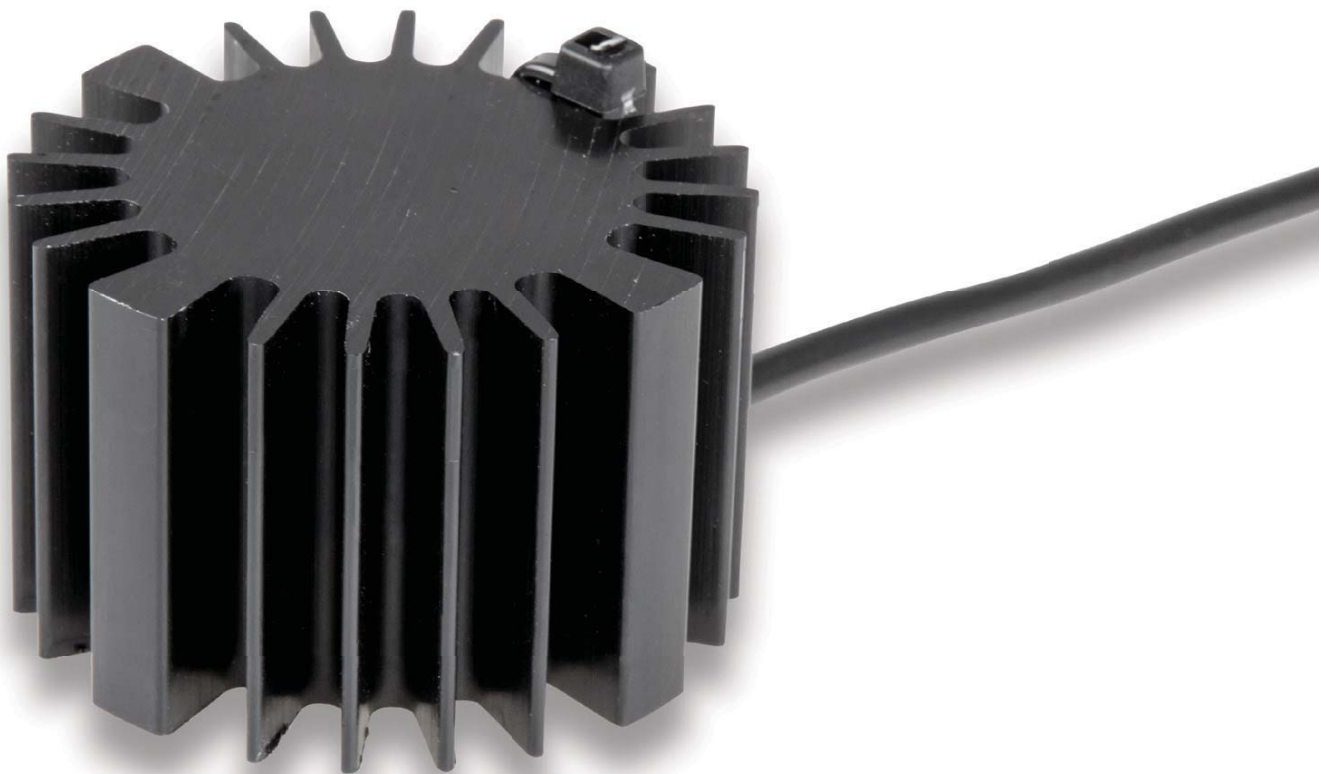

CANCELLATION KIT



Installation Instructions			<i>KW automotive</i>	
Instruction No.	685 10 457		Date	05.07.2016

KW automotive

685 10 457

INSTALLATION INSTRUCTIONS

Cancellation kit

[Performance Coilover Kits](#)

Installation Instructions			<i>KW automotive</i>	
Instruction No.	685 10 457		Date	05.07.2016

Front axle right:

Fix the electronic component on the wire harness with cable ties. Connect the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks.




Fix the wire and the connector with cable ties as shown on the picture.



Installation Instructions			<i>KW automotive</i>	
Instruction No.	685 10 457		Date	05.07.2016

Front axle left:

Fix the electronic component on the with edge clips on the chassis. Connect the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks.

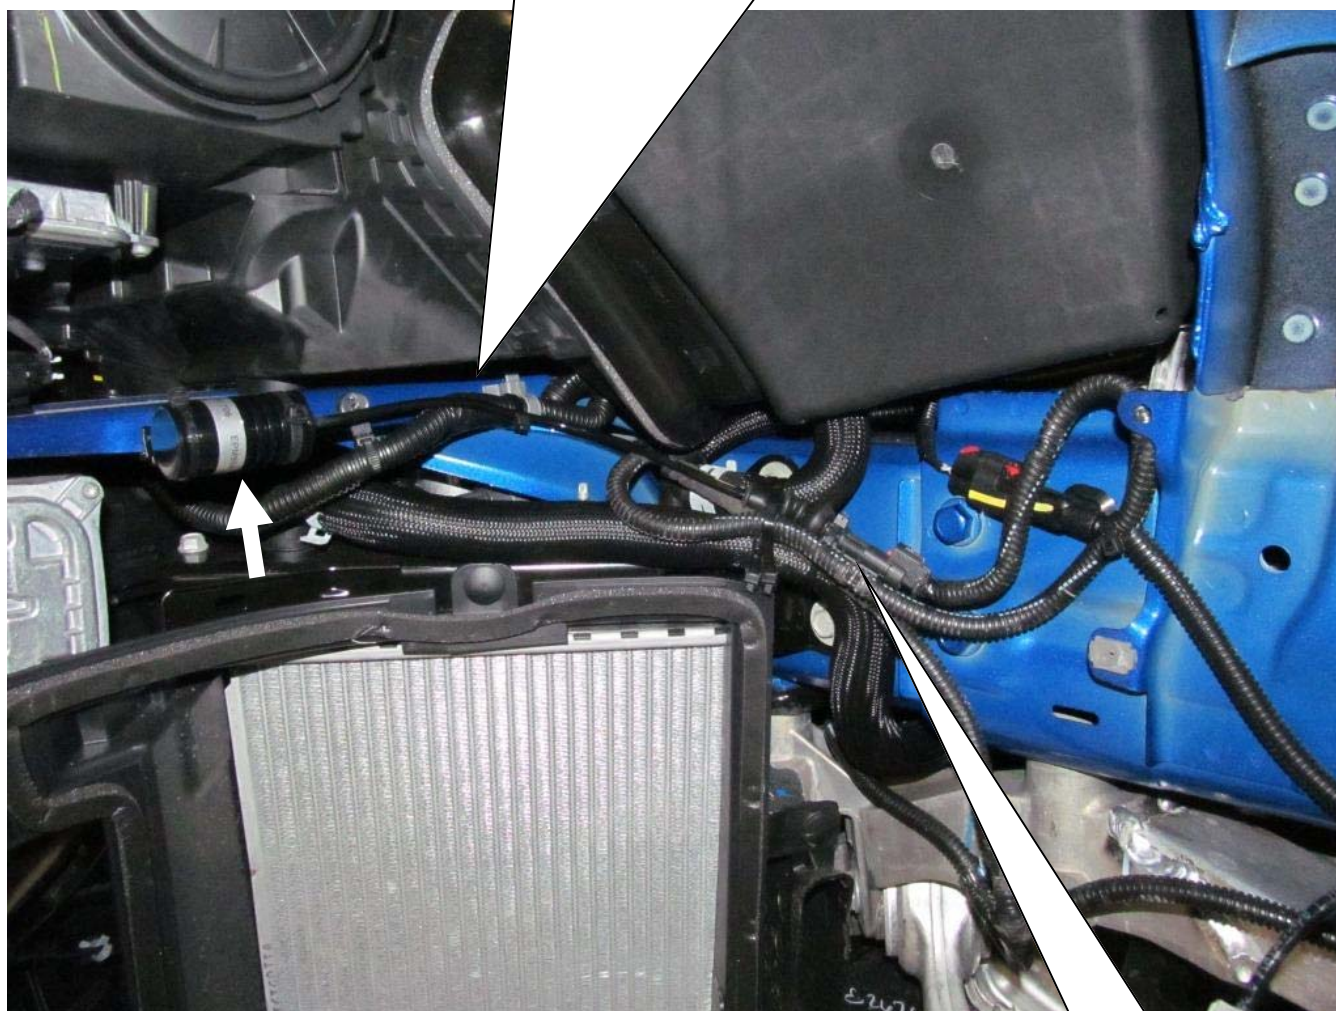

Fix the wire and the connector with cable ties as shown on the picture.


Installation Instructions			<i>KW automotive</i>	
Instruction No.	685 10 457		Date	05.07.2016

Rear axle right

Fix the electronic component on the with edge clips on the chassis. Connect the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks.



Fix the wire and the connector with cable ties as shown on the picture.

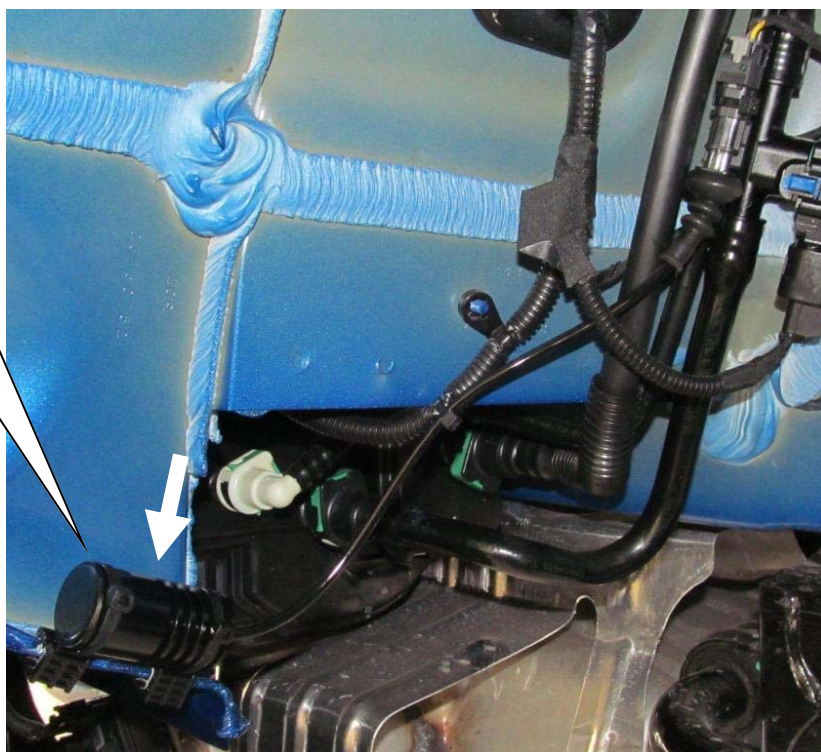

Installation Instructions			<i>KW automotive</i>	
Instruction No.	685 10 457		Date	05.07.2016

Rear axle left

Fix the electronic component on the with edge clips on the chassis. Connect the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks.



Fix the wire and the connector with cable ties as shown on the picture.