

CANCELLATION KIT



Installation Instructions		<i>KW automotive</i>	
Instruction No.	685 10 462	Date	17.06.2016

KW automotive

685 10 462

INSTALLATION INSTRUCTIONS


Cancellation kit

[Performance Coilover Kits](#)

Installation Instructions			<i>KW automotive</i>	
Instruction No.	685 10 462		Date	17.06.2016

Front axle:

Fix the adhesive tapes on the electronic component.
IMPORTANT: Surface must be cleaned and degreased.

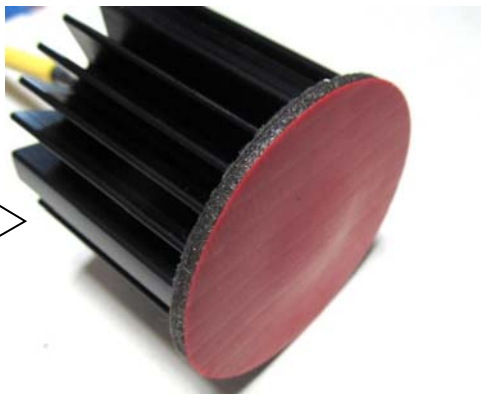

Connect the standard damper control wire into the electronic component until it locks. Fix the wire with cabel ties.



Installation Instructions		KW automotive	
Instruction No.	685 10 462	Date	17.06.2016

Front axle:

Fix the canceller with supplied adhesive tape on the vehicle chassis.
Fix the wires with cableties on the chassis.
IMPORTANT: Surface must be cleaned and degreased.




Installation Instructions			KW automotive	
Instruction No.	685 10 462		Date	17.06.2016


Rear axle: 1. Cut off 50 mm / 2,0 inch of the control cable to the damper.



2. Remove 15 mm / 0,6 inch of the cable insulation and 4-5 mm / 0,16 - 0,2 inch of the wire insulation. Attach the heat shrink tube.

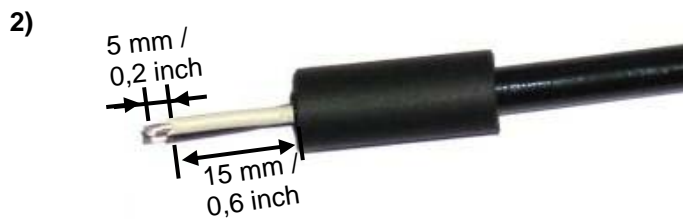

3. Install the supplied pin contact with a correct tool.

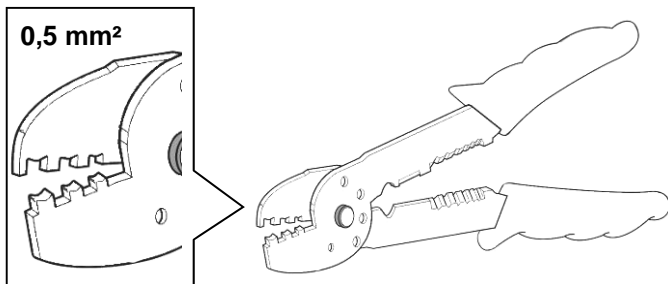

4. Insert the completed wire into the connector until to the lock. After this lock the connector and move the heat shrink tube to the middles of the connector / the wire and heat it. The pinposition / cable colour is not relevant.



Installation Instructions			KW automotive	
Instruction No.	685 10 462		Date	17.06.2016

Rear axle:

Connect the standard damper control wire into the electronic component until it locks. Fix the wire with cabel ties.



Fix the canceller with supplied adhesive tape on the vehicle chassis.
Fix the wires with cableties on the chassis.
IMPORTANT: Surface must be cleaned and degreased.

