




POWER STEERING PUMP INSTALLATION

1. Use a suitable puller to remove a pressed on pulley from the pump. **DO NOT hammer the pulley to free it from the shaft.**
2. Install brackets, hoses and other parts on replacement pump.
3. Use enclosed installation kit to install pulley (If applicable). **Use of any other tool will void the warranty.**
4. Tighten hex nut until pulley is flush with the shaft. Put pressure and return lines in a drain pan and using fluid approved for your car, fill reservoir flushing both lines until fluid runs clear.
5. Install pump and tighten belt to correct tension.
6. See Flushing and Bleeding Instructions.

The return line fittings on your power steering pump are plastic and prone to breakage during installation. We recommend you replace your old return lines with new, more flexible, lines and use great care installing them on the power steering pump.

Be careful, these plastic fittings like to break here.

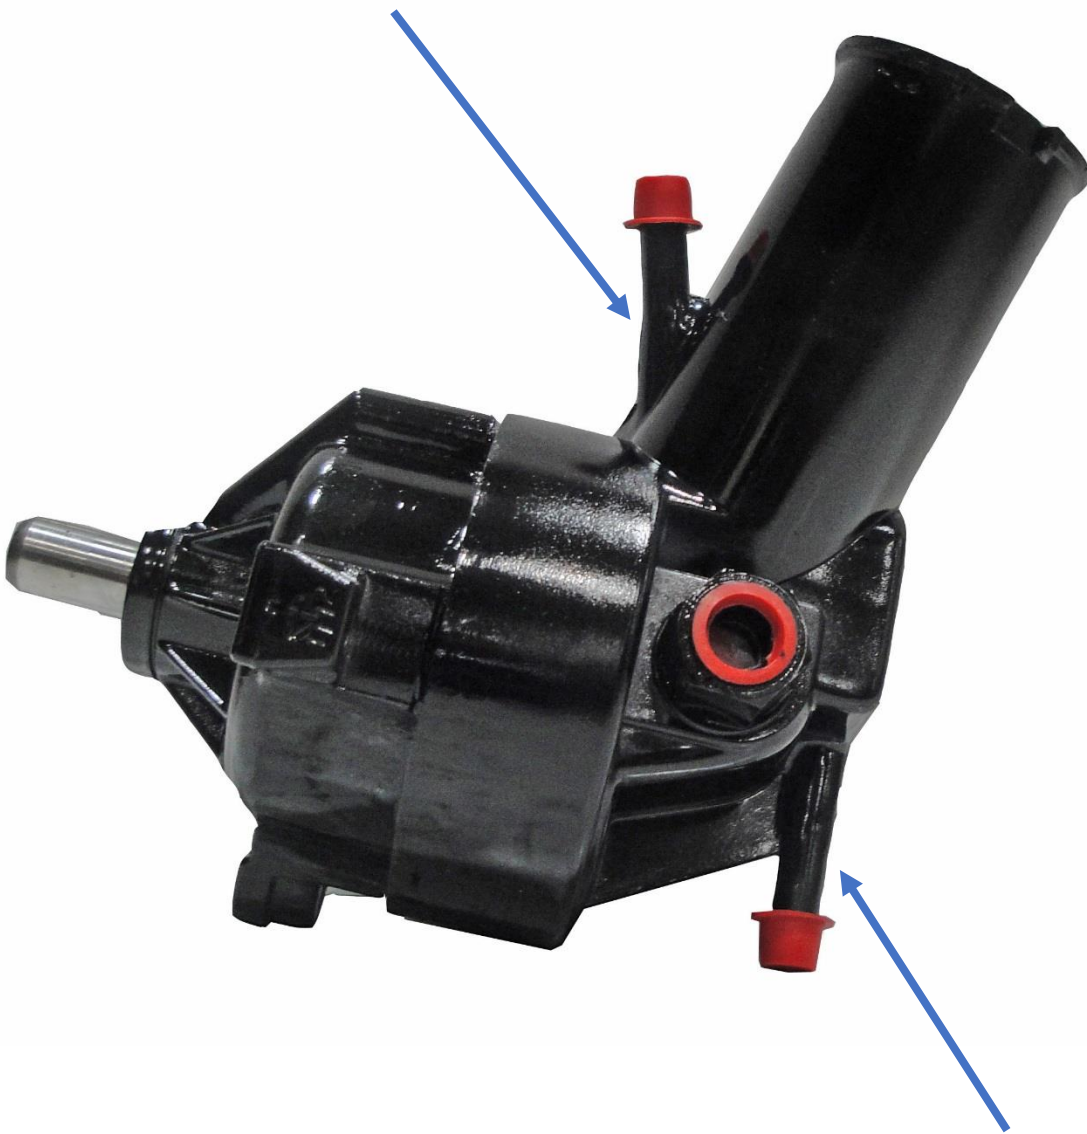

Be careful, these plastic fittings like to break here.

Check out the collection of replacement steering parts we offer.