



LEMFÖRDER

Mounting instruction



BMW E30 / E36 / E46 / Z1 / Z4

Art.-Nr. 10669 01 / 31086 01 / ...

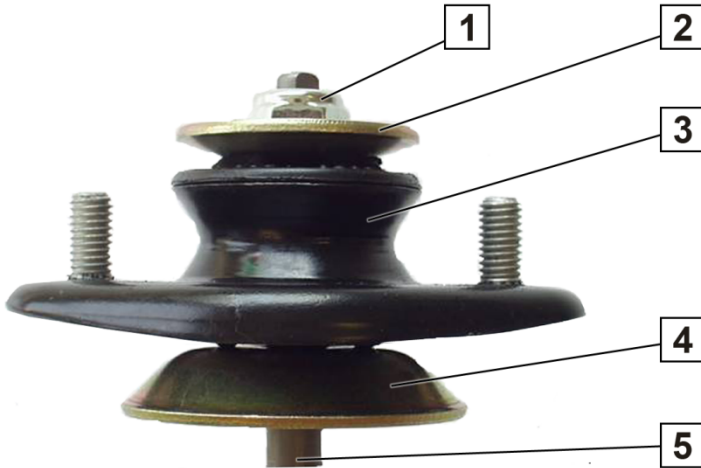


Abb. / Fig. 1: Shock absorber with suspension strut mount

- 1 Nut
- 2 Tellerscheibe klein
- 3 Suspension strut mount
- 4 Tellerscheibe groß
- 5 Kolbenstange

Suspension strut mount

Item No. 10669 01 / 31086 01 / ...

Assemble shock absorber

1. Mount service kit on piston rod (5).
2. Mount cup washer, large (4) on piston rod (5).
3. Mount suspension strut mount (3) on piston rod (5).
4. Mount cup washer, small (2) on fixing pin.
5. Screw nut (1) on piston rod (5) and tighten with the correct tightening torque.
Observe the vehicle manufacturer specifications.