


MODEL 3644 DRAIN MOBILE (SERIES "A") (SLEEVELESS)

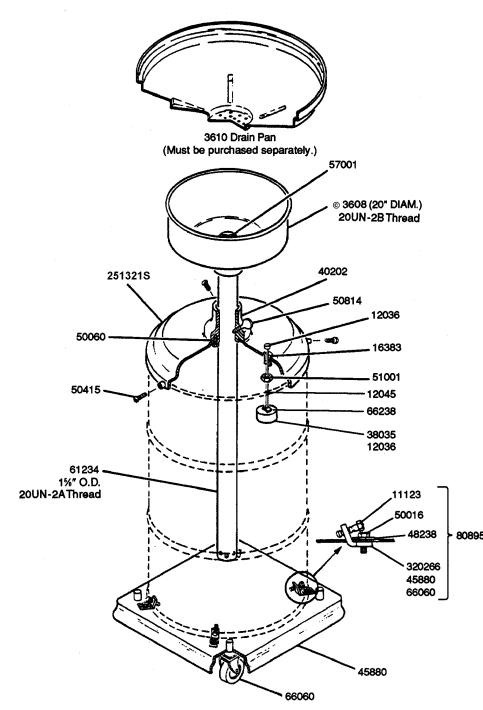

INSTRUCTIONS

Assemble casters (66060) to the base (45880). Center an empty 120 lb. drum on the base and secure with the four truck assembly base clamps.

Place the drum cover (251321S) on top of the 120 lb. drum and secure with three drum cover screws (50415).

Insert drain tube (61234) through the guide casting (40202). Raise funnel (247536) to desired height and tighten thumbscrew (50814).

The gauge float (80151) will rise when the drum is nearly full to indicate the drum should be emptied.

SERVICE FARTS		
PART	QTY	DESCRIPTION
3608©	1	Funnel (20" Diam.)
11123	4	Screw
12036	1	Gauge rod knob
12045	1	Gauge rod
16383	1	Gauge rod bushihg
38035	1	Gauge floater
40202	1	Guide casting
45880	1	Base
48238	4	Washer
50016	4	Screw
50060	4	Screw
50415	3	Drum cover screw
50814	1	Thumbscrew
51001	1	Hex nut
57001	1	Catch spring
61234	1	Drain tube
66060	4	Caster
66238	2	Speed nut
80895	1	Truck assembly
251321S	1	Drum cover
360266	4	Clamp
	3608© 11123 12036 12045 16383 38035 40202 45880 48238 50016 50016 50415 50814 51001 57001 61234 66060 66238 80895 251321S	3608© 1 11123 4 12036 1 12045 1 12045 1 16383 1 38035 1 40202 1 45880 1 48238 4 50016 4 50060 4 50814 1 51001 1 57001 1 61234 1 66060 4 66238 2 80895 1 251321S 1

SERVICE PARTS

© Indicates change

