



VERIFY YOU HAVE ALL THE COMPONENTS BEFORE STARTING THE INSTALLATION. REFER TO THE ENGINEERING DRAWINGS AT THE END OF THIS DOCUMENT FOR A COMPLETE PARTS LIST

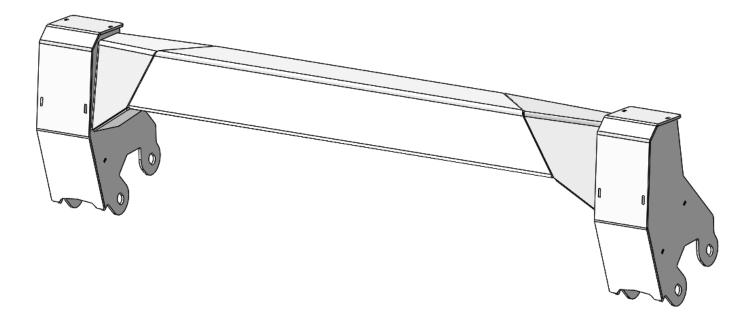

Remove the two upper Ø1/2" Bolts that connect your Bumper Center thru the Tow Point and Wing.


This picture shows the Wing removed for clarity. ****Do not remove the Wing.****

Leave the lower two Bolts in place and tight during the Bull Bar installation. This will keep your Wing from changing positions during installation.





Next install the Bull Bar Towers as shown into the slots at the top of the bumper and wing. Reinstall the Ø1/2" Hex Bolts thru the bumper, wing, tow points and Bull Bar Tower. Leave these bolts loose while your finish the installation.

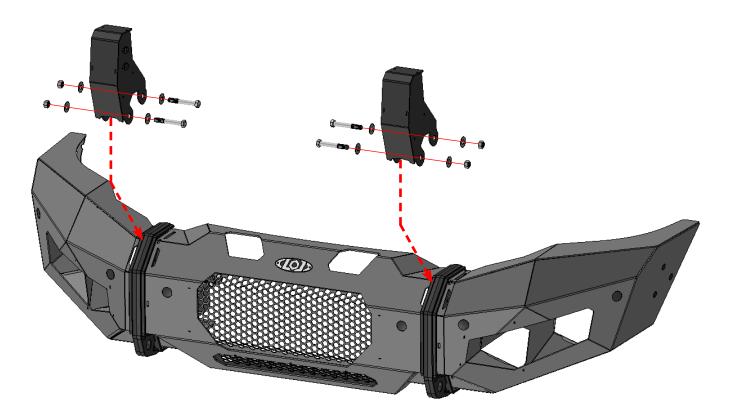

Next loosely assembly the Bull Bar Center Bar as shown between the towers using the Ø3/8'' Hex Bolts.

Position the Bull Bar and Towers as needed and tighten the Ø3/8'' Hex Bolts securely.

With the Bull Bar in its final position, tighten the remaining four $\emptyset 1/2''$ Hex Bolts that connect the Bull Bar to your bumper.

Maintenance

- Periodically check and re-tighten all fasteners.
- •
- Periodically check your product for scratches, dings, or rust spots which can happen over time or after heavy use. It is important to address these areas as soon as possible to prevent rust and corrosion from spreading. We recommend using Rustoleum[©] brand Black Semi-Gloss Protective Enamel (oil based). Apply using a foam brush by dabbing to match the powder coat texture.


Ton




00


90-0 90-0

A

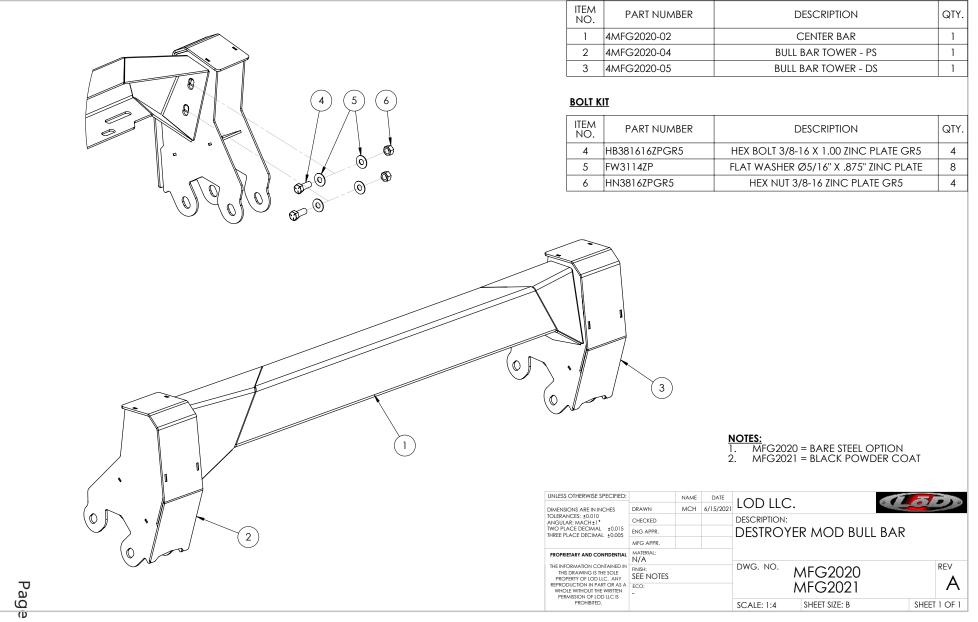


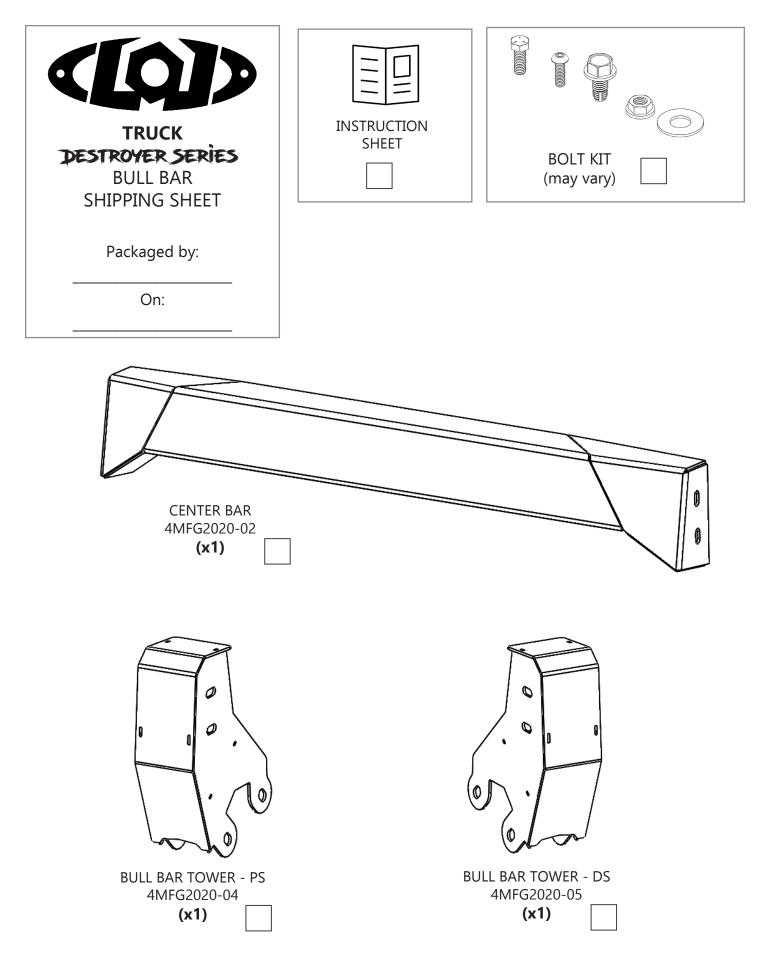


TRUCK DESTROYER SERIES BULL BAR
Bolt Kit
Packaged by:
On:

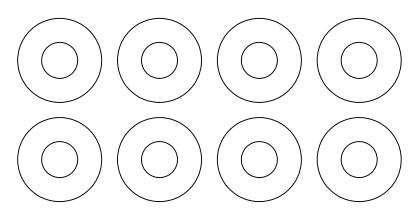

FLAT WASHER Ø5/16" X .875" (0159722) **(x8)**

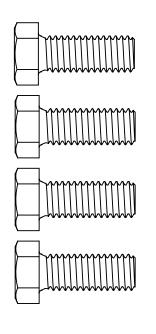

HEX BOLT 3/8-16 X 1.00" (0137514) **(x4)**

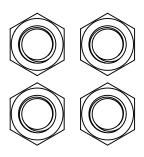

HEX NUT 3/8-16 (0147966) **(x4)**

Page 6