



QUALITY... PLAIN & SIMPLE®

Billet Aluminum Arm Rest Door Pull
Cutting Template

Billet Aluminum Arm Rest Door Pull Cutting Template



Crescent Oval Arm Rest Door Pull

NOTE: Before cutting out the template, double check the length and width measurements below to make sure they match the dimensions listed.

General Installation Notes:

Please read the instructions completely before beginning the installation.

Before beginning the installation, disconnect the negative battery cable and use wheel chocks to block the vehicle's wheels.

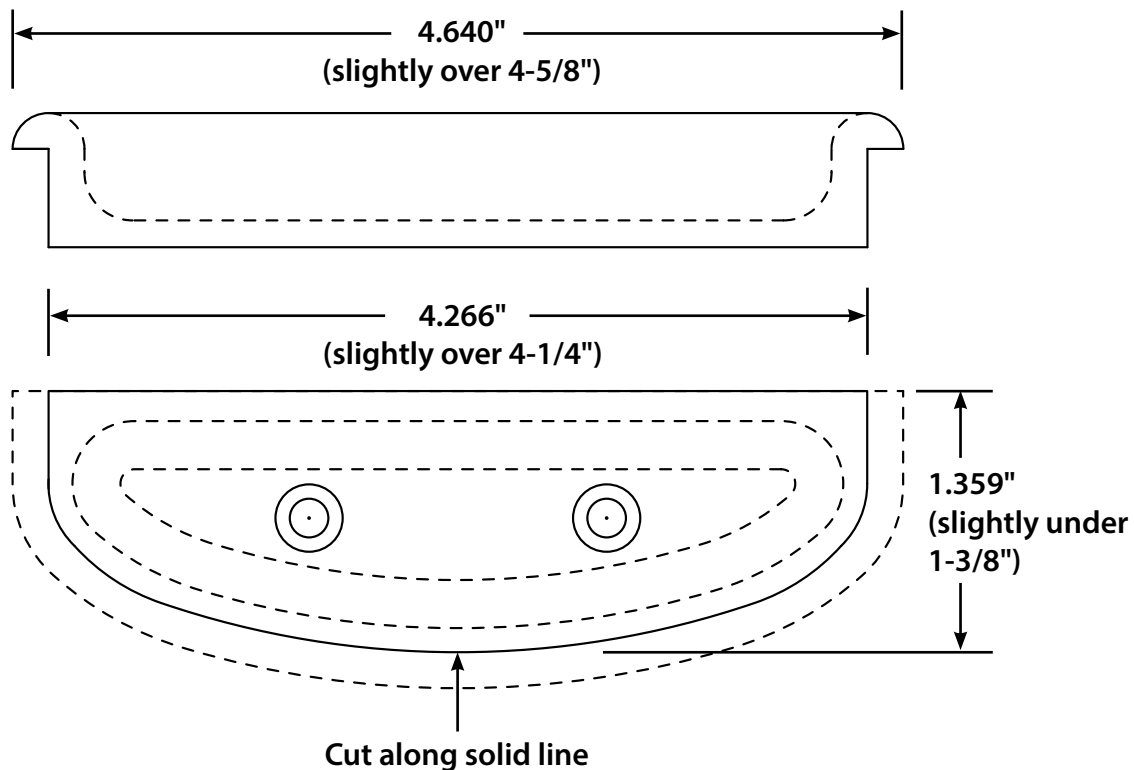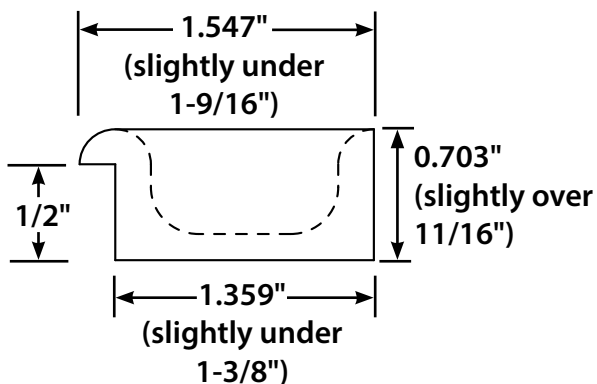

Oval Arm Rest Door Pull

NOTE: Before cutting out the template, double check the length and width measurements below to make sure they match the dimensions listed.

